

HYOSUNG TNS

HYOSUNG 7I

Operator Manual

V01.00.00

In this document, a licensed product of HYOSUNG TNS. INC (“HYOSUNG”) is described.

Under the terms and conditions of an agreement you have with HYOSUNG, where creation of derivative works, modifications or copies of this HYOSUNG copyrighted documentation is permitted, HYOSUNG’s copyright notice must be included.

As new technology, components, software and firmware become available, HYOSUNG reserves the right to change specifications without prior notice.

All features, functions and operations described in this document may not be marketed by HYOSUNG in all parts of the world. In some instances, photographs are of equipment prototypes. sold by HYOSUNG in all regions worldwide. Therefore, before using this document, contact with your HYOSUNG representative or HYOSUNG office for information that is applicable and current.

HYOSUNG Proprietary Information – not to be disclosed or reproduced without written consent.

© 2022 HYOSUNG TNS. INC., Seoul, Korea. <https://hyosung-tns.com>.

All Rights Reserved

Table of contents

Introduction

Audience.....	5
About This Document.....	5
Safety precautions	6
Précautions pour la sécurité (French).....	8
Abbreviations	11
Document revisions.....	14

Description of Product

Name of Each Portion.....	15
HYOSUNG 7I Specifications.....	16
Control Electronics (CE, PC)	21
Customer Display & Keypad.....	22
Supervisor Operation.....	23
Cash Dispenser Unit.....	24
Cash & Check In Module	25
Card Reader	27
Receipt Printer.....	27
Contactless Card Reader	29
Power Supply	30

Operation

Fascia Opening	31
Switching Power On/Off	32
Switching Power On	32
Switching Power Off	32
Safe Door Opening.....	33
Electronic Lock	33
Cash Dispenser.....	36
Bill Conditions	36
How to Replenish the Cash Cassette	41
How to Empty the Reject/Retract Box.....	45
How to Clear Jamming in cash dispenser.....	48
Remove jam from the upper horizontal transport path	49
Remove jam from the vertical transport path.....	51
Remove jam from the carriage	52
Remove jam from the transport path of the main body.....	53
Remove jam from the transport path of RJ/RT box	54
Remove jam from the separation part	55
Remove jam from the transport path of reject	56
How to Reset Main Board.....	57
How to set the Cassette for Each Denomination	58

Cash & Check In Module (CCIM16)	65
Basic Specification of Cash & Check In Module	67
Specification of External Appearance	68
Cash & Check Conditions	69
Environmental Condition	69
How to remove jam from each section.....	71
Location Map to remove jam.....	71
LED Lighting of Unit Transport Path.....	73
Remove jam from Bundle Module	74
Remove jam from the First Transport Path.....	75
Remove jam from BC	76
Remove jam from ALG	77
Remove jam from Recog Transport Section.....	78
Remove jam from the B2 Upper Transport Path of BM2	79
Remove jam from B2 Reject Transport Section.....	80
Remove jam from B3 Transport Section.....	81
Remove jam from Reject Section	82
Remove jam from B3 Escrow Transport Section	83
Remove jam from B4 Transport Section.....	84
Remove jam from Escrow	85
Remove jam from RT/A6 Cassette.....	87
Remove jam from Cassette.....	89
How to change PRT Maintenance Module	91
How to replace Ink cartridge.....	91
How to reset PRT Cartridge Count.....	92
How to replace Ink Head Cleaner Felt.....	93
Receipt Printer	94
How to load the receipt paper	96
How to clear jamming in receipt printer.....	97

Introduction

Audience

Customers and staffs of Hyosung TNS who use and operator the HYOSUNG 7I in each branches of bank.


About This Document

The document is organized into sections covering the following topics:

- Introduction - this section
- Product Specifications
- Operation

Each page has been laid out as follows:

<Note> In case of printing, A4 size paper is recommended.

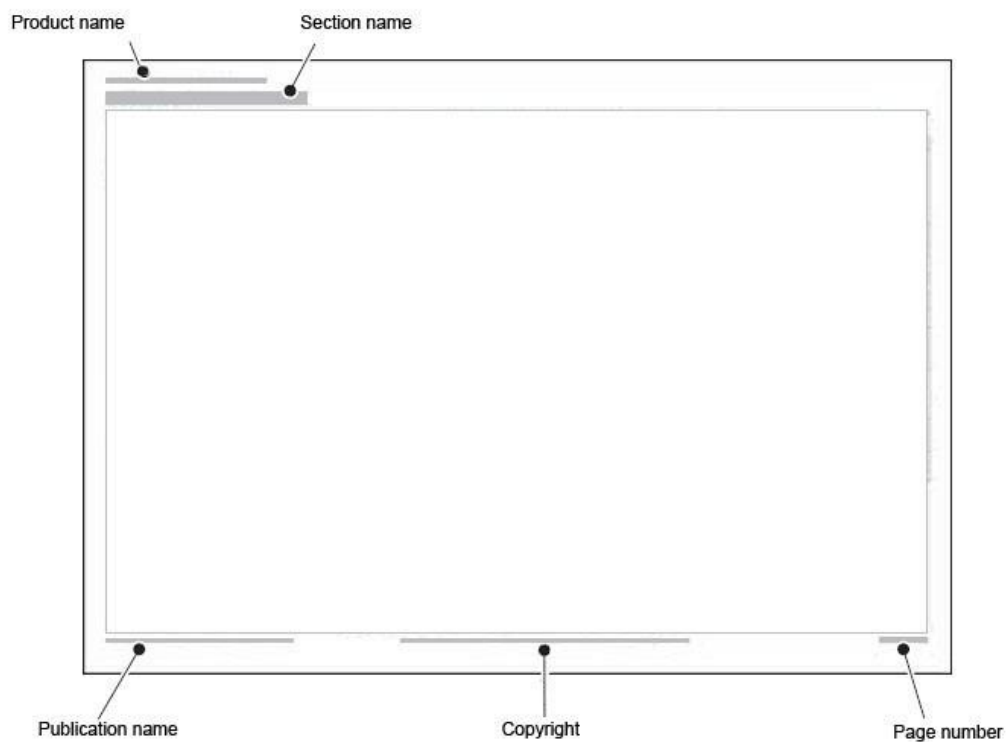

Introduction

Safety precautions

Common safety precaution



- Safety Precautions in outlined this manual provide information on safe and proper handling of the product. Non-compliance of the safety precautions may result in injury or damage to the product.
- This precaution symbol with sample term tells you safety warnings during equipment handlings.

Please read the following instructions before operating equipment.

- Operate equipment in the order outlined in this manual.
- Follow precautions indicated in this manual, as well as the equipment itself. Failure to properly address these precautions may lead to injury or damage to the product.
- Avoid operations not addressed in this manual.
- If you cannot remedy system problems using the methods outlined in this manual, please refer to contact information listed in the manual.
- Any change or modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

<Note!>

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

► CAUTION

1. To reduce the risk of fire, use only No. 26 AWG OR LARGER Telecommunication cord
2. Risk of explosion if battery is replaced by an incorrect type.
Dispose used batteries according to the instructions.
3. For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible.
4. The equipment is to be secured to the building structure before operation

Introduction

5. A security container shall be permitted to optionally be provided with a secondary lock, but improper use of the secondary lock feature will reduce the security level of the ATM.

Description of precaution symbols



Electrical Shock Warning

- Do not remove cover. Only a maintenance engineer is allowed to open the cover.
- Do not touch. You may receive electric shock.
- Make sure to turn off the power when servicing the equipment.



High Temperature Warning

- Do not touch the equipment when it is running.
- The equipment can get extremely hot and may cause a burn.
- Make sure to close the cover before running the equipment.



Use Precaution when Moving

- The equipment is heavy. Make sure at least 2 people lift or move the equipment.
- Do not attempt to move the equipment alone. You may be injured from dropping the heavy equipment.



Fire Hazard

- Place the equipment in an area away from any combustible materials.
- The equipment may catch on fire from overheating or short circuit of the power supply unit.



Disassembly Warnings

- Do not disassemble or modify the equipment unless you are a certified engineer.
- Contact the service center for maintenance, adjustments and repairs.
- Improper disassembly may cause fire or electrical shock.



Collapse Precautions

- Do not place the equipment where the floor cannot sustain the weight of the equipment, or on slanted or unstable surface.
- Equipment may fall and cause injury or damage.



Unplug the Equipment

- Stop using the equipment immediately if it smokes, emits an unusual smell, makes abnormal sounds, or if liquids or other foreign materials enter the equipment.
- If the above-mentioned abnormalities occur, immediately turn off the power,

Introduction

unplug the equipment and contact the service center.

- If you ignore these symptoms, the equipment may catch on fire or cause electric shock.

Précautions pour la sécurité (French)

Précaution générale pour la sécurité



- Précautions décrits de ce manuel fournissent des informations sur une manipulation sûre et appropriée du produit. Le non-respect des précautions peut causer des blessures ou endommager le produit.
- Ce symbole de précaution avec le terme d'exemple vous indique des consignes de sécurité lors de la manipulation de l'équipement.

Veuillez lire des instructions suivantes avant d'utiliser l'équipement

- Fonctionner l'équipement dans l'ordre indiqué dans ce manuel.
- Suivre les précautions indiquées dans ce manuel, ainsi que l'équipement lui-même.
Le défaut de traiter correctement de ces précautions peut entraîner des blessures ou endommager le produit.
- Évitez des opérations non traitées dans ce manuel.
- Si vous ne pouvez pas résoudre des problèmes du système en utilisant des méthodes décrites dans ce manuel, veuillez se référer aux informations de contact figurant dans le manuel, s'il vous plaît.
- Certain changement ou des modifications dans la construction de ce dispositif qui ne sont pas expressément approuvés par la partie responsable de la conformité pourraient annuler l'autorité de l'utilisateur de faire fonctionner l'équipement.

<REMAQUE!>

Cet équipement a été testé et fondé pour se conformer aux limites pour un équipement numérique de classe A, conformément à la partie 15 des règles FCC. Ces limites sont conçues pour fournir une protection raisonnable contre des interférences nuisibles lorsque l'équipement est utilisé dans un environnement commercial. Cet équipement génère, utilise et peut émettre des fréquences radios et, s'il n'est pas installé et utilisé

Introduction

conformément aux instructions de ce manuel, peut causer des interférences nuisibles aux communications radios.

Le fonctionnement de cet équipement dans une zone résidentielle est susceptible de provoquer des interférences nuisibles dans le cas, l'utilisateur devra corriger ces interférences à ses propres frais.

Description des symboles de précaution



Choc électrique

- Ne pas retirer le couvercle. Seul le technicien d'entretien est autorisé à ouvrir le couvercle.
- Ne pas toucher. Vous pouvez avoir un choc électrique.
- Assurez-vous d'éteindre l'appareil lors de l'entretien de l'équipement.



À haute température

- Ne pas toucher l'équipement quand il est en marche.
- L'équipement peut devenir extrêmement chaud et peut provoquer une brûlure.
- Assurez-vous de fermer le couvercle avant de lancer l'équipement.



Soyez prudent lors du déplacement

- L'équipement est lourd. Assurez-vous d'au moins 2 personnes pour soulever ou déplacer l'équipement
- N'essayez pas de déplacer l'équipement seul. Vous pouvez être blessés par la chute de l'équipement lourd.



Risque d'incendie

- Placer l'équipement dans une zone éloignée de tous les matériaux combustibles.
- L'équipement peut s'enflammer de surchauffe ou de court-circuit de l'unité d'alimentation.



Démontage

- Ne pas démonter ou de modifier l'équipement, sauf si vous êtes ingénieur certifié.
- Contacter le centre de service pour l'entretien, le réglage et la réparation.
- Le mauvais démontage peut provoquer un incendie ou un choc électrique.

Introduction



Tomber

- Ne pas placer l'équipement dont le sol ne peut pas supporter le poids de l'équipement, ou sur une surface inclinée ou instable.
- L'équipement peut tomber et provoquer des blessures ou des dommages.



Débrancher l'équipement

- Cessez d'utiliser l'équipement immédiatement si il fume, émet une odeur inhabituelle, fait des bruits anormaux ou si des liquides ou d'autres matériaux étrangers dans l'équipement.
- Si les anomalies mentionnées ci-dessus se produisent, éteignez immédiatement la puissance, débranchez l'appareil et contactez le centre de service.
- Si vous ignorez ces symptômes, l'équipement peut prendre feu ou provoquer un choc électrique.

AVERTISSEMENT :

1. POUR RÉDUIRE LES RISQUES D'INCENDIE, UTILISEZ UNIQUEMENT AWG n ° 26 OU LA LIGNES DE TELECOMMUNICATION PLUS GROSSE
2. RISQUE D'EXPLOSION SI LA BATTERIE EST REMPLACÉE PAR UN TYPE INCORRECT. DISPOSER POUR UTILISATION DES BATTERIES SELON LES INSTRUCTIONS
3. POUR LES APPAREILS RACCORDES, LA PRISE DOIT ÊTRE INSTALLÉE PRES D'EQUIPEMENT POUR ÊTRE FACILEMENT ACCESSIBLE
4. L'EQUIPEMENT DOIT ÊTRE SECURISÉ A LA STRUCTURE DU BATIMENT AVANT D'UTILISER

Introduction

Abbreviations

#	Abbreviations	Description
1	AD board	Analog to Digital conversion board
2	ADA	The American Disabilities Act
3	ALG	Alignment Module
4	AP	Application Program
5	Assy	Assembly
6	BATT S/W	Battery Switch
7	CAM	Camera Unit
8	CCIM	Cash & Check In Module
8-①	BND	Bulk Note Separation Module
8-②	SCM	Separator Control Module
8-③	BC	Bill Checker Module
8-④	ALG	Alignment Module
8-⑤	REC	Recognition Module
8-⑥	BM2	Body Module2
8-⑦	BM1	Body Module1
8-⑧	BM3	Body Module3
8-⑨	ESC	Escrow Module
8-⑩	RJ	Reject Module
8-⑪-1	PRT(Ink)	Endorsement Module
8-⑪-2	PRT(Felt)	Ink Head Cleaner
8-⑫	BOT	Body Module4

Introduction

#	Abbreviations	Description
8-⑬	CST 1	Cash Cassette
8-⑭	CST 2	Check Cassette
8-⑮	RT&A6	Retract & A6 Cassette
9	CCR	Contactless Card Reader
10	CDU	Cash Dispenser Unit
11	CE	Control Electronics
12	Earphone Jack	Voice Converter for Visually Disabled Persons (ADA)
13	EMV	Europay, Mastercard, Visa
14	EP	Elementary Program
15	EPP	Encryption PIN Pad
16	H/W	Hardware
17	I/F	Interface
18	ISO	International Standard Organization
19	JPR	Journal Printer
20	LCD	Liquid Crystal Display
21	MCU	Magnetic Card Unit
22	OPL	Operation Panel for Customers to Operate
23	OSD board	On Screen Display Board
24	P/S	Power Supply
25	PIN	Personal Identification Number
26	PNC	Panel Control Board
27	PTR	Printer (mainly Receipt Printer)
28	S/W	Switch

Introduction

#	Abbreviations	Description
29	SIU	Sensor and Indications Unit
30	SP	Service Provider
31	SPR	Slip Printer (Receipt Printer)
32	TTU	Text Terminal Unit (OPL or SPL)
33	VFD	Vacuum Fluorescent Display


Introduction

Document revisions

Revision	Date	Change summary
V01.00.00	2022-7-12	New Publication

Description of Product

Name of Each Portion

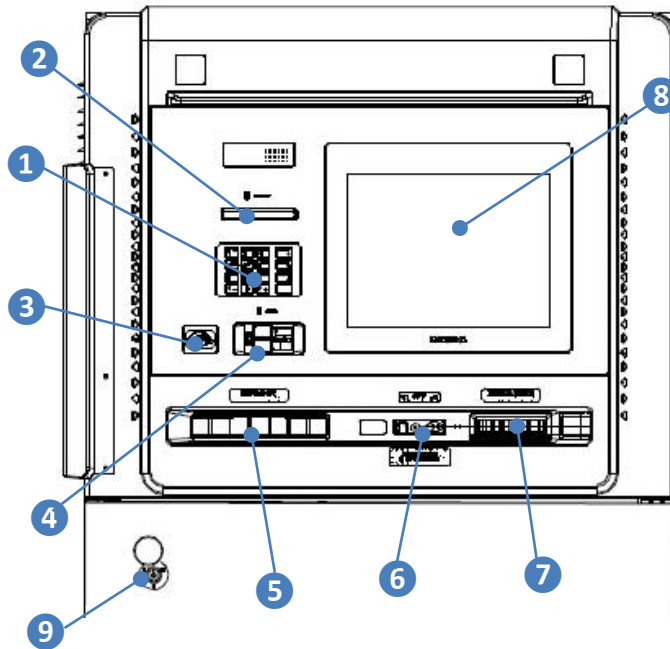

1	Encrypting PIN Pad
2	Receipt Printer
3	NFC (Contactless Card Reader)
4	Card Reader
5	Cash Dispenser
6	Earphone Jack
7	Cash/Check Insert Module
8	Customer Display
9	Out Door Keyhole

Description of Product

HYOSUNG 7I Specifications

Item			Specification	Remarks (Option)
Main Controller (RB H110)	CPU		Intel Core i3-6100 3.7GHz	
	Memory	DDR Memory	8 GB	DDR-IV
	Storage	SSD	512 GB	SATA Type
	ODD		N/A	
	Operating System		Windows 10	
	Expansion Slots		PCIe x16 1EA, PCIe x1 1EA	
	Serial Ports		OnBoard 1 EA	
	USB Ports	USB 3.0	2 Ports (OnBoard X 2EA)	
		USB 2.0	12 ports(OnBoard X 12EA)	
	VGA		On-Board VGA, DVI	
	LAN		10/100/1000Mbps On-Board	
Customer Display	Display	Type	15" TFT LCD	High Bright
		Resolution	1024 X 768	
		Brightness	1,500 cd/m ² (SunLight Viewable)	
	Privacy Filter		15" Filter	
	Guide Light	Flicker	White : SPR/MCU/CDU/CCIM	
		Open/Close	Status Light (Red/Green)	
		Front top	Always on (White)	
		Front Right/Left	Ambient (RGB)	
Customer Input Method	Pin-Pad		PCI 5.0 EPP(PCI Compliant), Plastic	
	Function Key		N/A	
	OPL Touch Screen		P-CAP	

Description of Product

Item			Specification	Remarks (Option)
Supervisor Operation	Display Module		10.1" TFT LCD, 250cd/m ²	
	Input Method		Touch Screen	
	SPL Touch Screen		Resistive Touch	
Cash Dispenser (CDU10)	Sutter type		Automatic Shutter	
	Denomination		20/20 (USD)	20/20/20/20
	Maximum Dispense		50 Notes/1 transaction	
	Number of cassettes		2 Cassettes	Max 4 Cassettes
	Cassette Capacity		3,000 notes/1 cassette	
	Dispensing Speed		8 notes/sec	
	Reject Type		Note by Note Reject (300 bills Max)	
	Retract		Bundle Retract (100 bills Max)	
	Number of Near-End Sensing		500 Notes Max	
Cash & Check In Module (CCIM16)	Media Size	Width	Min : 60 mm (2.36 inch) Max : 96 mm (3,78 inch)	Available option Max 102 mm (4.01 inch)
		Length	Min : 110 mm (4.33 inch) Max : 230 mm (9.055 inch)	
		Thickness	Min : 0.0762 mm (0.003 inch) Max : 0.203 mm (0.0079 inch)	STANDARD : 0.11 mm
	Bundle Capacity		Max 75 Mixed Checks /1 transaction	One Single Deposit Slot
	Deposit Direction		4 way	
	Capacity	Deposit Cassettes	About 2,000 checks/1 cassette	Criteria for Deposit New Checks

Description of Product

Item			Specification	Remarks (Option)
		Retract Cassettes	Max 75 Mixed Checks	
		Article6 Cassettes	Max 75 Checks	
		Escrow	Max 75 Mixed Checks /1 transaction	
	Capacity	Deposit Reject	Max 75 Mixed and Checks /1 transaction	
	Processing Time	Deposit Time	1 Note:1 Seconds, 1 Check:1.2 Seconds 8 Notes & 2 Checks : Less than 20 Seconds 25 Notes & 25 Checks : : Less than 60 Seconds	
	Image scanning		Double side scanning	200 dpi
	MICR		CMC-7, E13-B	
	Endorsement Print		One side printing, Ink jet	
	Shutter Type		Automatic Shutter	
Card Reader (Sankyo-DIP)	Type		EMV Support DIP Type	Motor type Option
	Magnetic Stripe		ISO 1,2 Read	
	IC card Support		Support	
	Bezel Color		Translucent Blue Bezel	
	Security		Support (Anti-Skimming + Anti-Shimming)	
Receipt Printer (K-SPR11)	Printing Type		Thermal Line Printing	
	Printing speed		100mm/sec	
	Printing Width		80mm Max	

Description of Product

Item			Specification	Remarks (Option)
	Paper	Type	Thermal Roll Paper	
	Specification	Width	Max. 80mm	
		Outer Diameter	Max. 100Φ	
	Paper Roll Capacity		5,000 Transaction/Roll	Depends on Format
	Black Mark Paper Support		N/A	Black Mark Paper Option
Contactless Card Reader	Audio guidance		Beeper	
	Transaction Interface		ISO/IEC 14443 Type A and B, ISO 18092 Peer to Peer, MiFare	
	Payment Applications		AMEX Expresspay 3.1, Discover DPAS 1.0, Interac Flash v1.5, UPI, Calypso, PBOC, MasterCard MCL 3.1, Visa VCPS 2.1.3, Apple Pay, Google Pay, Samsung Pay Apple VAS, Google SmartTap 2.1 TDES, AES DUKPT, Remote key injection	
JPR	Journal Printer		E-Journal Printer	
Power Supply (WPS760)	760W Power		AC 100-240V ±10%, 10.0A, 50/60Hz	
Safety & Security	Safety		UL 291 Level-1 (Front Access)	
	Body Cover		Steel	
	Locking devices		Combo Lock (Dual), Key Lock	
	System Key		Common Key	

Description of Product

Item		Specification	Remarks (Option)
	Alarm	NH-VT Alarm (Seismic & Heat)	
	Security	Terminal Block (External I/F)	
	Camera	CCD Camera (Face, Hand)	
	Mirror	Awareness Mirror	
Additional function	Audio guidance	Sound Card On-Board	
	ADA Audio guidance	Available(/w Earphone jack cover/plug)	
	Dimension (H X W X D)	1600 x 940 x 1005	
Dimension & Environment	Install Method	Anchor	
	Weight	880 kg	
	Battery	System Battery	
	Heater	2 Heaters (Upper/Bottom)	1 Heater Option(Bottom)

Description of Product

Control Electronics (CE, PC)


The Control Electronics mainly consist of a motherboard, HDD, multiple serial card, and so on.

Basic functions of the control electronics used in this ATM is similar to that of a personal computer you may have in your office or home with exception of a multiple USB HUB used to communicate with several devices such as a cash dispenser, card reader, receipt printer and EPP.

1. Specification

Item			Specification	Remarks (Option)
Main Controller (RB H110)	CPU		Intel Core i3-6100 3.7GHz	
	Memory	DDR Memory	8 GB	DDR-IV
	Storage	SSD	512 GB	SATA Type
	ODD		N/A	
	Operating System		Windows 10	
	Expansion Slots		PCIe x16 1EA, PCIe x1 1EA	
	Serial Ports		OnBoard 1 EA	
	USB Ports	USB 3.0	2 Ports (OnBoard X 2EA)	
		USB 2.0	12 ports(OnBoard X 12EA)	
	VGA		On-Board VGA, DVI	
	LAN		10/100/1000Mbps On-Board	

2. Reference Photo

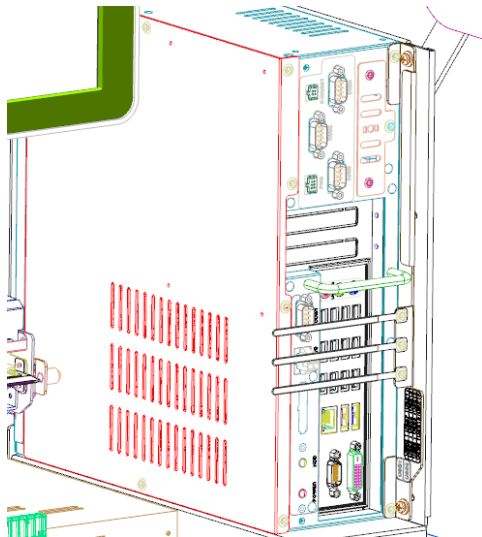

Description of Product

Customer Display & Keypad

The Customer Display welcomes the customer and provides instructions for performing transactions at the ATM.


During the transaction, the ATM prompts the customer to use the customer keypad to enter transaction information. The 16-key keypad uses an Encryption PIN Pad technology to secure the information entered by the customer at the keypad. The customer touch screen is used with the customer display. The customer selects functions or enters information by touching the screen.

1. Specification

Item			Specification	Remarks (Option)
Customer Display	Display	Type	15" TFT LCD	High Bright
		Resolution	1024 X 768	
		Brightness	1,500 cd/m ² (SunLight Viewable)	
	Privacy Filter		15" Filter	
	Guide Light	Flicker	White : SPR/MCU/CDU/CCIM	
		Open/Close	Status Light (Red/Green)	
		Front top	Always on (White)	
		Front Right/Left	Ambient (RGB)	
Customer Input Method	Pin-Pad		PCI 5.0 EPP(PCI Compliant), Plastic	
	Function Key		N/A	
	OPL Touch Screen		P-CAP	

Description of Product

2. Reference Photo

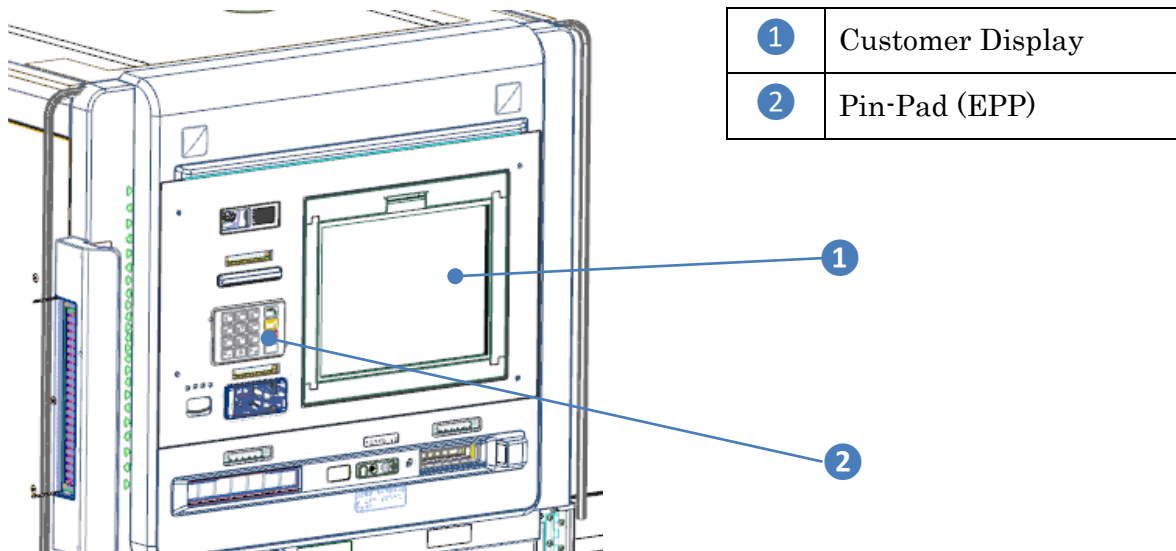

Supervisor Operation

1. Specification

Item		Specification	Remarks (Option)
Supervisor Operation	Display Module	10.1" TFT LCD, 250cd/m ²	
	Input Method	Touch Screen	
	SPL Touch Screen	Resistive Touch	

2. Reference Photo



Description of Product


Cash Dispenser Unit

The cash dispenser delivers media (cash) to the cardholder after the cardholder's request is processed by the network and the software. The media is drawn from the cassettes and transported to a slot in the fascia of ATM, where the cardholder can receive it. If the media is too mutilated or wrinkled to dispense, or if a multiple pick occurs, the dispenser sends the notes to the reject bin.

1. Specification

Item		Specification	Remarks (Option)
Cash Dispenser (CDU10)	Sutter type	Automatic Shutter	
	Denomination	20/20 (USD)	20/20/20/20
	Maximum Dispense	50 Notes/1 transaction	
	Number of cassettes	2 Cassettes	Max 4 Cassettes
	Cassette Capacity	3,000 notes/1 cassette	
	Dispensing Speed	8 notes/sec	
	Reject Type	Note by Note Reject (300 bills Max)	
	Retract	Bundle Retract (100 bills Max)	
	Number of Near-End Sensing	500 Notes Max	

2. Reference Photo

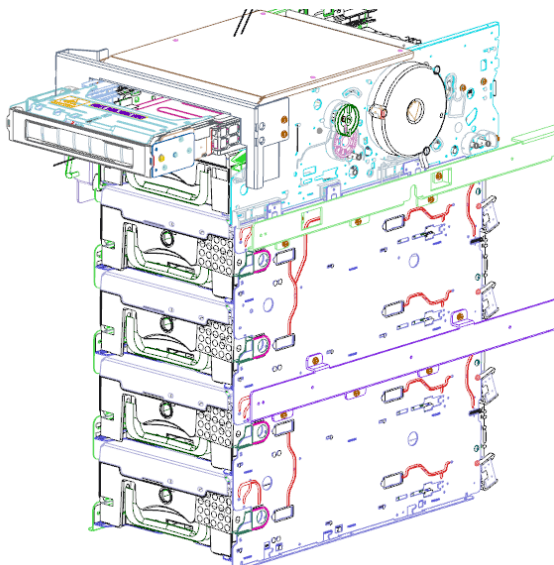

Description of Product

Cash & Check In Module

The Cash & Check in Module is designed to be integrated in automated teller machines and full-function self-service terminals. It enables cash deposit and automated check handling.

Banknotes and checks deposited by the customer are stored in cassettes. The type of document for each cassette is defined on the basis of the bank's application.


1. Specification

Item			Specification	Remarks (Option)
Cash & Check In Module (CCIM16)	Media Size	Width	Min : 60 mm (2.36 inch) Max : 96 mm (3,78 inch)	Available option Max 102 mm (4.01 inch)
		Length	Min : 110 mm (4.33 inch) Max : 230 mm (9.055 inch)	
		Thickness	Min : 0.0762 mm (0.003 inch) Max : 0.203 mm (0.0079 inch)	STANDARD : 0.11 mm
	Bundle Capacity		Max 75 Mixed Checks /1 transaction	One Single Deposit Slot
	Deposit Direction		4 way	
	Capacity	Deposit Cassettes	About 2,000 checks/1 cassette	Criteria for Deposit New Checks
		Retract Cassettes	Max 75 Mixed Checks	
		Article6 Cassettes	Max 75 Checks	
		Escrow	Max 75 Mixed Checks /1 transaction	
	Capacity	Deposit Reject	Max 75 Mixed and Checks /1 transaction	

Description of Product

Item		Specification	Remarks (Option)
	Processing Time	Deposit Time 1 Note:1 Seconds, 1 Check:1.2 Seconds 8 Notes & 2 Checks : Less than 20 Seconds 25 Notes & 25 Checks : : Less than 60 Seconds	
	Image scanning		Double side scanning 200 dpi
	MICR		CMC-7, E13-B
	Endorsement Print		One side printing, Ink jet
	Shutter Type		Automatic Shutter

2. Reference Photo

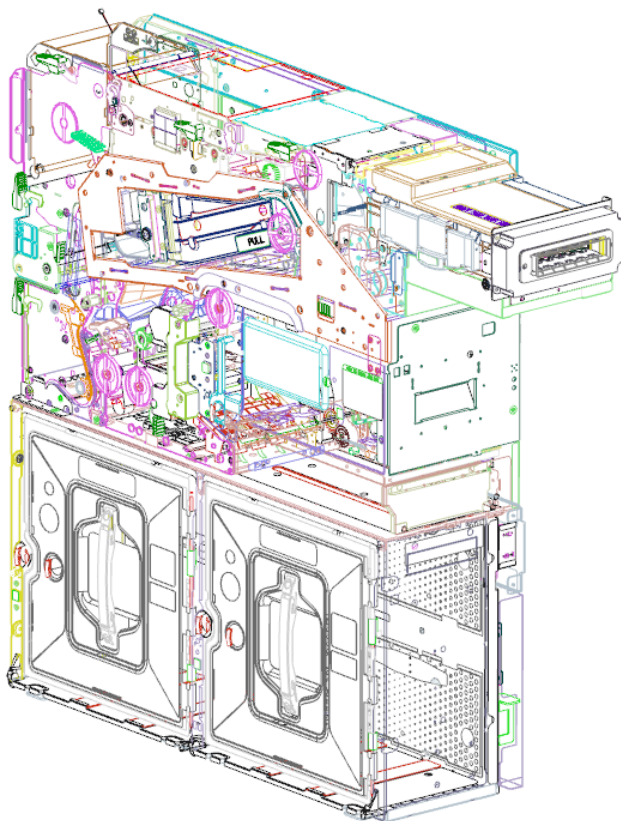

Description of Product

Card Reader

The dip card reader is a manually operated device mounted directly to ATM fascia. The customer inserts an ATM card in the card entry slot and then removes the card to begin the transaction. The dip card reader can read magnetic stripe cards and memory chip cards. The dip card reader cannot retract, capture, or retain cards.

1. Specification

Item		Specification	Remarks (Option)
Card Reader (Sankyo-DIP)	Type	EMV Support DIP Type	Motor type Option
	Magnetic Stripe	ISO 1,2 Read	
	IC card Support	Support	
	Bezel Color	Translucent Blue Bezel	
	Security	Support (Anti-Skimming + Anti-Shimming)	

2. Reference Photo



Receipt Printer

The receipt printer provides a printed receipt of the customer's transaction. The transaction information can include the amount of withdrawals, deposits or transfers, the ATM number and location, and other desired information.


After the customer uses the ATM, a printed record of the transaction information is presented through the appropriate printer entrance.

Description of Product

1. Specification

Item		Specification	Remarks (Option)
Receipt Printer (K-SPR11)	Printing Type	Thermal Line Printing	
	Printing speed	100mm/sec	
	Printing Width	80mm Max	
	Paper Specification	Type	Thermal Roll Paper
		Width	Max. 80mm
		Outer Diameter	Max. 100Φ
	Paper Roll Capacity	5,000 Transaction/Roll	Depends on Format
	Black Mark Paper Support	N/A	Black Mark Paper Option

2. Reference Photo

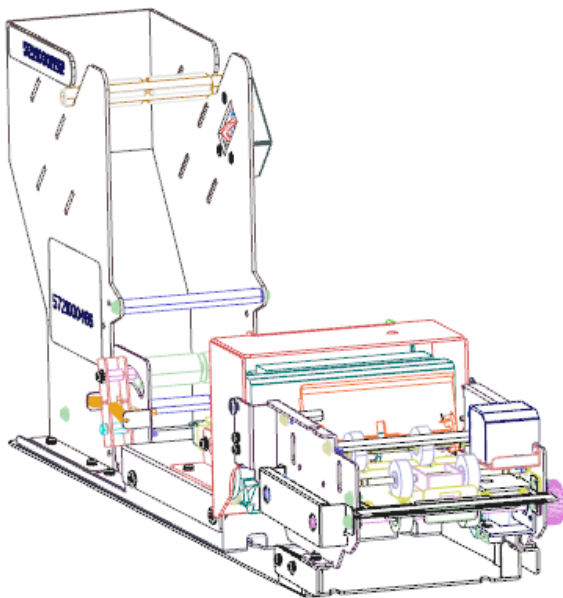


Description of Product

Contactless Card Reader

1. Specification

Item		Specification	Remarks (Option)
Contactless Card Reader	Audio guidance	Beeper	
	Transaction Interface	ISO/IEC 14443 Type A and B, ISO 18092 Peer to Peer, MiFare	
	Payment Applications	AMEX Expresspay 3.1, Discover DPAS 1.0, Interac Flash v1.5, UPI, Calypso, PBOC, MasterCard MCL 3.1, Visa VCPS 2.1.3, Apple Pay, Google Pay, Samsung Pay Apple VAS, Google SmartTap 2.1 TDES, AES DUKPT, Remote key injection	

2. Reference Photo

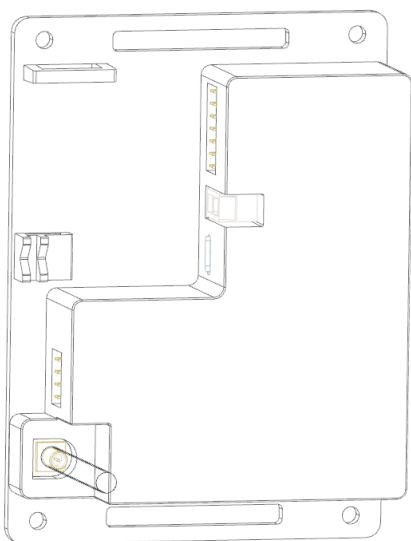


Description of Product

Power Supply

1. Specification

Item		Specification	Remarks (Option)
Power Supply (WPS760)	760W Power	AC 100-240V $\pm 10\%$, 10.0A, 50/60Hz	

2. Reference Photo


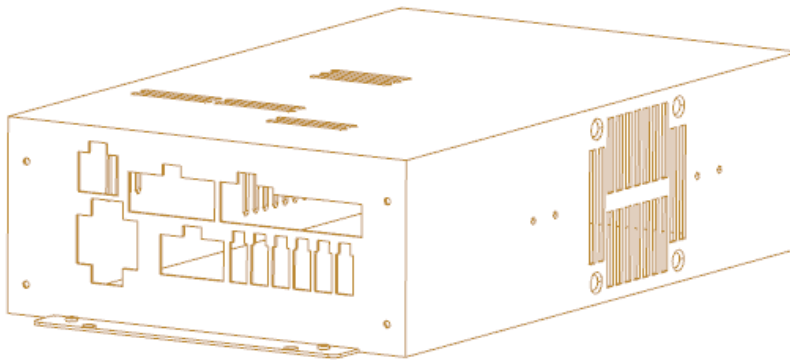


Operation

Fascia Opening

1. Open the fascia using the key.

<Note> Be sure to keep the key in the safe place.

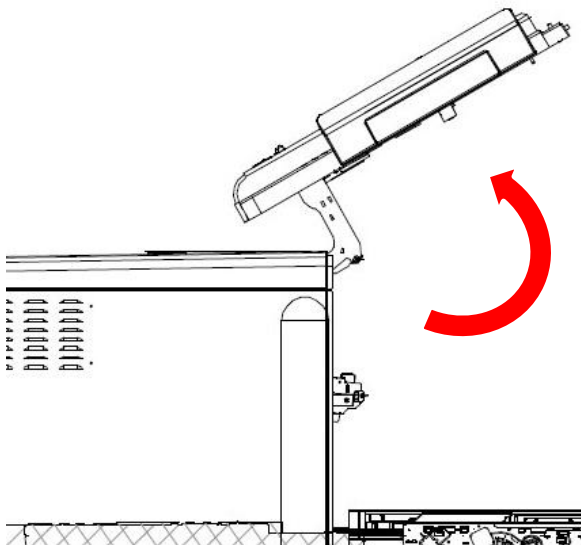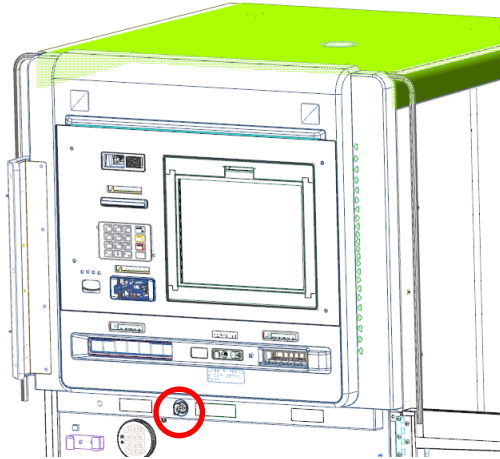

Operation

Switching Power On/Off


The power supply unit allows the user to turn on/off the system, enter power failure mode, and perform other sequences.

Switching Power On

1. Open the upper fascia.
2. Press the power switch (to "ON")

Switching Power Off

1. Open the upper fascia.
2. Press the power switch (to "OFF")

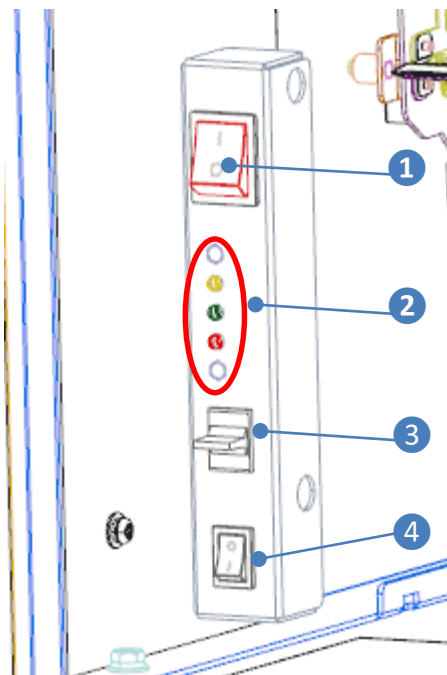

1	Main Switch
2	LED
3	Power Switch
4	Mode Switch

Warning:

Do NOT operate Main Switch ("OFF") on power supply when you would like to turn off the power. If may cause damage to operate system or destabilize control electronics in the system.

Operation

Safe Door Opening

1. Open the out door using key.
2. Enter the password (factory default: 123456) to unlock the locking devices and turn the handle to open.

Electronic Lock

Features

USER COMBINATION

- Open Lock
- Change Combination

WRONG TRY PENALTY

- Four (4) consecutive invalid combination initiates five (5) minute delay period.

LOW BATTERY WARNING

- Repeated LED flashing and beeping during opening indicates battery is low and needs immediate replacement.

AUDIO AND VISUAL SIGNAL

- Double signal - two (2) LED flashes and two (2) beeps - indicates entry is valid or accepted.
- Triple signal - three (3) LED flashes and three (3) beeps - indicates invalid or not accepted.



Opening the Lock

1. Enter valid six (6) digit combination. (Set to 1-2-3-4-5-6)
2. The lock will confirm a valid combination entry with a double signal.
3. Within four (4) seconds, turn the keypad to the open position (clock-wise) if using a dead bolt style lock, or turn the handle to the open position if using a swing bolt style lock.
4. Pull door open.

Invalid Combination Entry

- Lock will signal three (3) times.

Operation

WRONG TRY PENALTY

- Entry of four (4) consecutive invalid combinations starts a five (5) minute delay period.
- LED flashes red at ten (10) second intervals.

Changing your combination

- ALWAYS PERFORM THIS OPERATION WITH THE DOOR OPEN
- 1. Enter "1-2-3-4-5-6" and hold down the last digit until unit double signals.
- 2. Enter "0" one time.
- 3. Enter your NEW six (6) digit combination two times.
- 4. If a mistake is made wait thirty (30) seconds and repeat steps 1 - 3.
- 5. **Test lock operation several times before closing the door.**

<CAUTION>

When selecting a combination do not use birthday or other predictable data that could give correlation between the user and combination. Keep the combination secret.

- Valid Combination Entry - Double signal after valid six (6) digit combination is entered.
- Invalid Combination Entry - Triple signal indicates the old combination is still valid.

Battery Low Warning

Repeated LED flashing and beeping during an opening indicates that the battery is low and needs immediate replacement.

Use only alkaline batteries (Example: Duracell™ or Eveready™ alkaline batteries)

- Use one (1) 9-Volt alkaline battery in the Small Battery Box or six (6) "C" cell alkaline batteries in the Large Battery Box.

It is recommended that batteries be replaced at least once a year.

If the battery is depleted and will not allow the lock to open:

- Hold a new 9-Volt alkaline battery on the contact points located on the front of the keypad (large battery terminal to large keypad contact, small battery terminal to small keypad contact).
- Enter a valid combination to open the lock (see **Opening the Lock**).

<NOTE!>

You must maintain battery contact at all times throughout the procedure. Change batteries as directed below.

The lock contains a non-volatile memory, and even with batteries removed, the lock will retain all programming.

Operation


Changing Batteries

▪ Small Battery Box:


1. Open safe door.
2. Remove battery box cover by pulling the front portion away from the safe door.
3. Remove battery by unsnapping it from the connector.
- <CAUTION!>** Hold onto the battery connector to avoid pulling the wires out of the board.
4. Connect a new 9-Volt alkaline battery to the battery connector.
5. Push the battery and the leads completely into the battery compartment.
6. Replace the cover and test the lock several times before closing the door.

▪ Large Battery Box:

1. Open safe door.
2. Remove battery box cover by pulling the front portion away from the safe door.
3. Remove the six old "C" cell alkaline batteries.
4. Insert six new "C" cell alkaline batteries
5. Replace the cover and test the lock several times before closing the door.

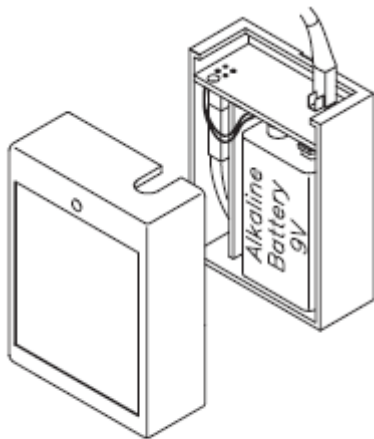

*2788 Small Battery Box or
2789 Small Battery Alarm Box*

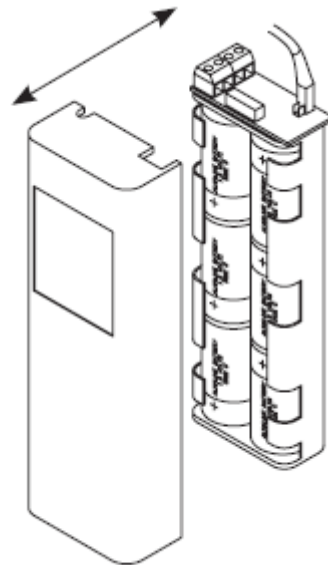

4002 Large Battery Alarm Box

 
Operation

Cash Dispenser

Bill Conditions

Acceptable condition


1. Bill which is very clean and can readily be recognized as a true bill



2. Bill has sufficient life or sizing to be handled easily



3. Bill which can be manually held straightly when one end is held by a hand and the bill is slightly curved vertically.

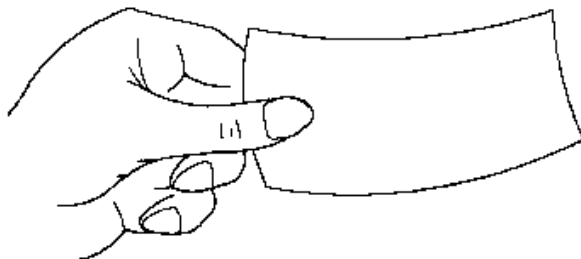


Operation


Unacceptable condition

1. Bill with serious wrinkles, torn or broken section wherein paper fiber is broken and separation begins.


- Wrinkle

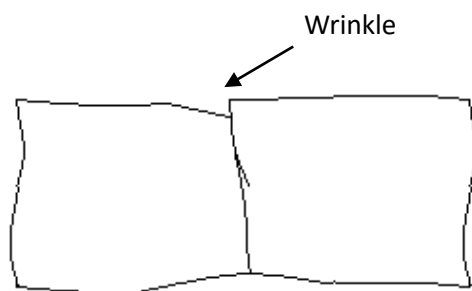

- Torn

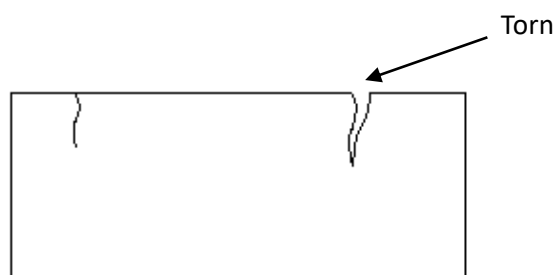


- Broken section

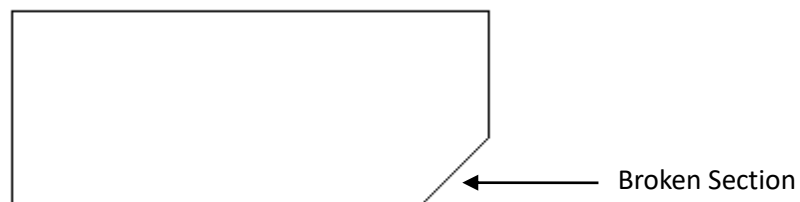


Operation


2. Bill having adequate life or sizing, but stained seriously

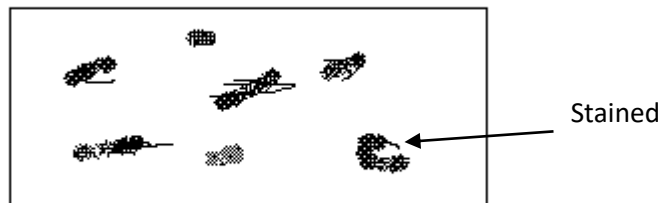

3. Bill with holes (Perforated bill)

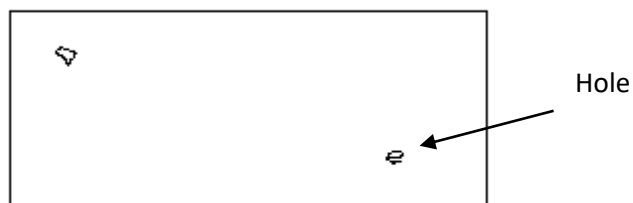


4. Bill ragged and cannot be held straightly when one end is supported by a hand

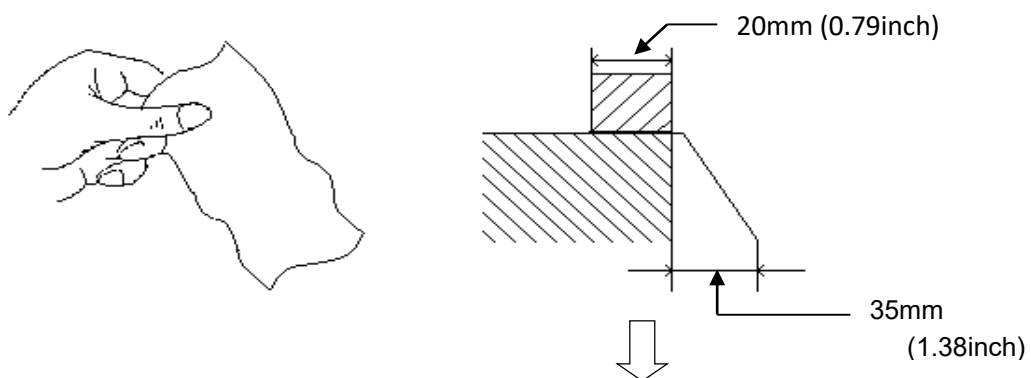


When the bill is held by 20mm (0.79inch) and the straightness of the bill is 35mm (1.38inch) or less, it cannot be used

Operation


5. Bill with cellophane tape, scotch tape, etc.

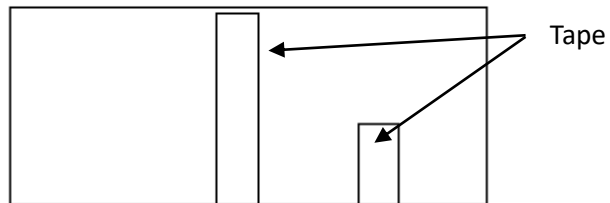

6. Bill with folds

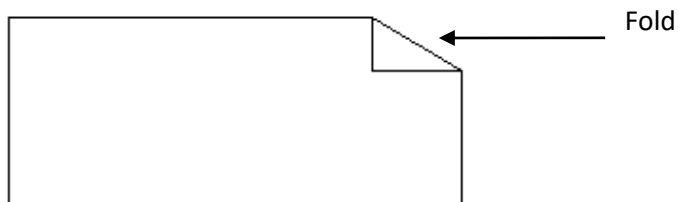


7. Gradually curved bill (bills tied by hand seal, etc.)

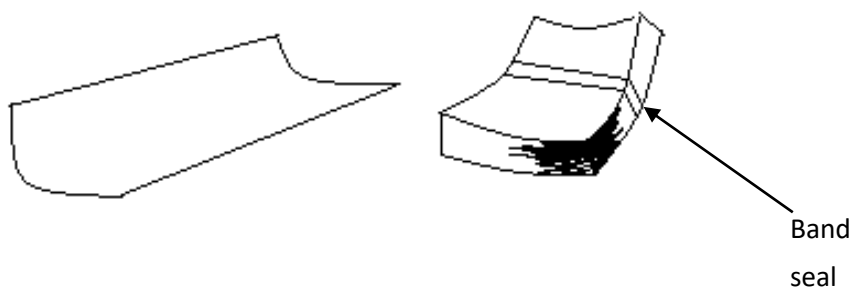

Operation

8. Bill with folded lines


Case 1

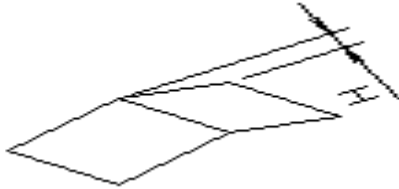

Case 2



Case 3

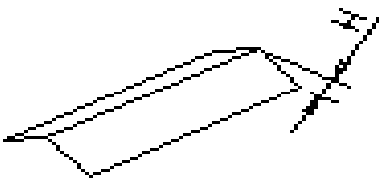

<Note!>

Bill distortion should not exceed 10 mm (0.39inch).

Operation

How to Replenish the Cash Cassette

1. Push the lever A and holding a cassette handle B with the other hand pull out slightly, and support the cash cassette from bottom with the hand pushed the lever A, and pull out to the end of the cassette.



2. Place the cash cassette on a flat level platform and turn the green lever clockwise to unlock a cassette cover. Then lift up the cassette cover.



<Note!>

1) Completely open the cassette cover as picture below when replenishing a cash cassette.



Operation

2) If you have the key type cassette, open the cassette cover using the key like the picture below.



3. Pull black push-plate back completely until it is locked against the cash plate latch.

4. Pull the Push-Plate after pressing the Green Color Button (C).



5. Set the bills and push the Push-Plate to the location where the bills are set.




Operation

CAUTION:

Be sure to keep in mind the followings prior to replenishing the cash cassette with the bills,

- 1) Fan the bills so that the bills are not sticking together.
- 2) Remove all bills with holes or bills that are torn.
- 3) Unfold the folded bills.
- 4) Place the bills correctly.

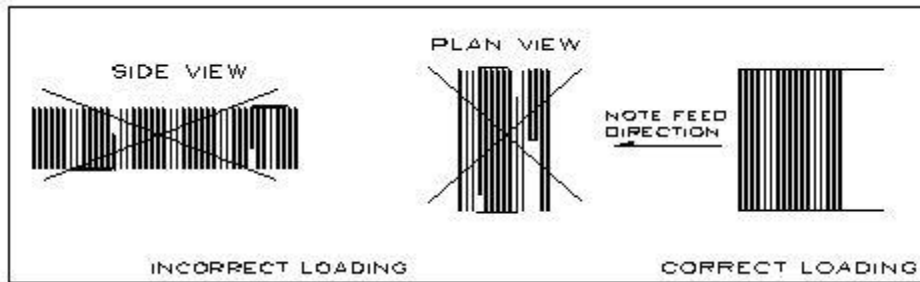

6. Turn the green lever clockwise and completely close the cassette cover.



<Note!>

- 1) If you have the key type cassette, close the cassette cover using the key like the picture below.



Operation

7. Holding a cassette handle with one hand and supporting the cassette from the bottom with the other hand, place the cassette carefully on the set guide of the CDU and push it completely until it is locked in place.



Operation

How to Empty the Reject/Retract Box

Reject & Retract Box is an integral system that transfers defective bills from cash cassette to Reject Compartment while sending the bills withdrawn but not taken by customers to the Retract Compartment where the bills can be safely stored.



All bills in the retract area of the box can be reused and bills found in the reject area may not be reused. Any bills rejected will be rejected again and it may cause a major bill jam taking the CDU down.

<Note!>

After all jams have been removed it is imperative that you test the complete unit via diagnostics.

1. Push the lever (A) and holding a Reject/Retract Box handle (B) with the other hand pull out slightly, and support the Reject/Retract Box from bottom with the hand pushed the lever (A), and pull out to the end of the cassette.



Operation

2. Turn the green lever clockwise and open the box lid.



<Note!> If you have the key type Reject/Retract box, open it using the key like the picture below.



3. Remove both rejected and retracted bills from the box. Push the edge of transparent component when remove retracted bills.



Operation

PRE CAUTION:

Don't recycle rejected bills any more. Doing so will cause not only the same reject problem but other unexpected problems such as jams on cash dispenser.

4. Use the reverse order of 1)~3) to put Reject/Retract Box together into cash dispenser again.
The Reject/Retract Box must be fully inserted. Otherwise, it will happen problems and the error code will display at monitor promptly.



Operation

How to Clear Jamming in cash dispenser

1. Turn ATM power off, this will initiate an ATM stop process and shut down process, when SHUTDOWN is displayed you may release the switch, wait until machine shuts down completely to clear jams.

<Note!>

Any branch personnel should not attempt to remove any jams without first powering down the ATM.

2. Undock the CDU and slide out completely. Then perform the following steps for each case to clear the obstruction.

Operation

Remove jam from the upper horizontal transport path

Remove jam from the upper horizontal transport path



1. Pull the lever with both hands while pressing it inward and then remove the bill.




2. Pull the lever with both hands while pressing it inward (see the picture of 1)) and lift up **E** part as the below picture. Then remove the jammed bill.



Operation

3. Put down the **E** part and press the **D** part in the direction of arrow until it fixes.

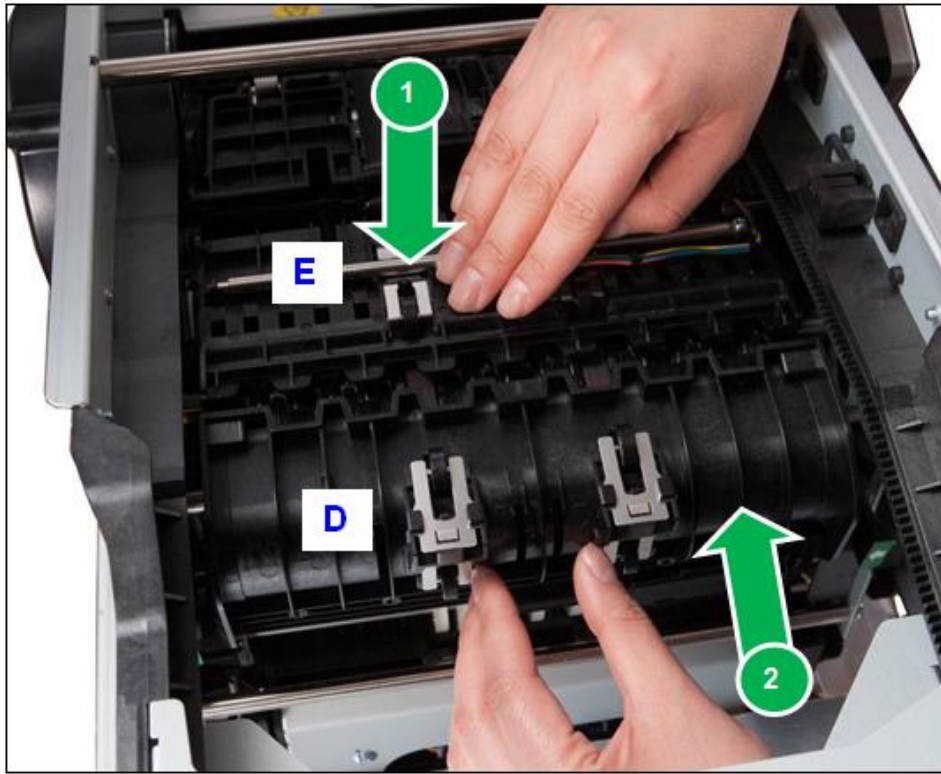


CAUTION:

DO NOT put down the E part after first closing the D part.

Operation


Remove jam from the vertical transport path

Remove jam from the vertical transport path

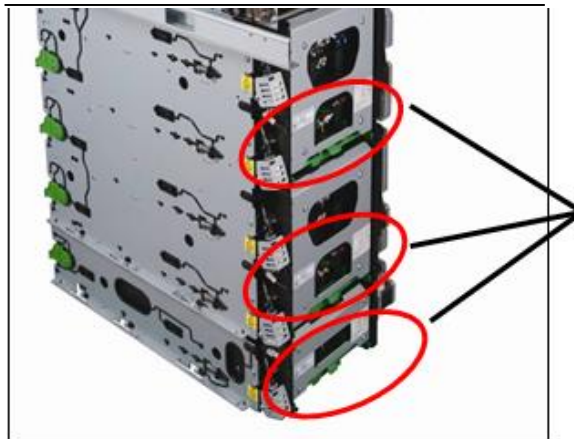

This position is where the jammed bill is

1. Pull the green lever of the bottom with lifting it up and open the **F** part. Then remove the bill.

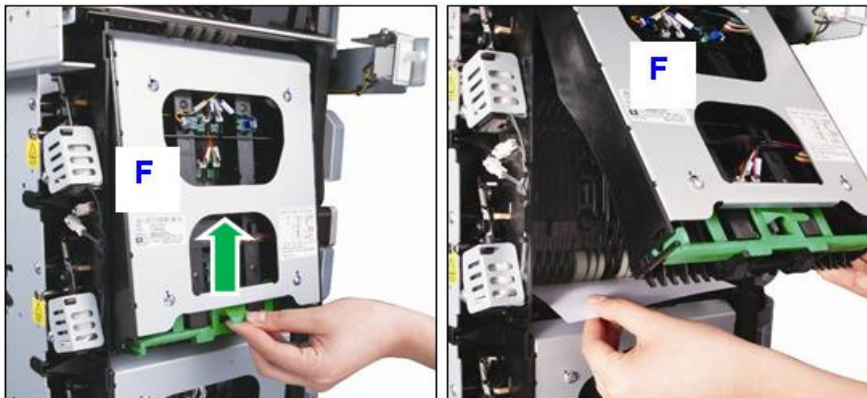

2. Press the lever with hand as the below picture until the **F** part fixes.




Operation


Remove jam from the carriage

Remove jam from the carriage

1. Rotate the carriage by turning the knob (G) and remove the jammed bill.

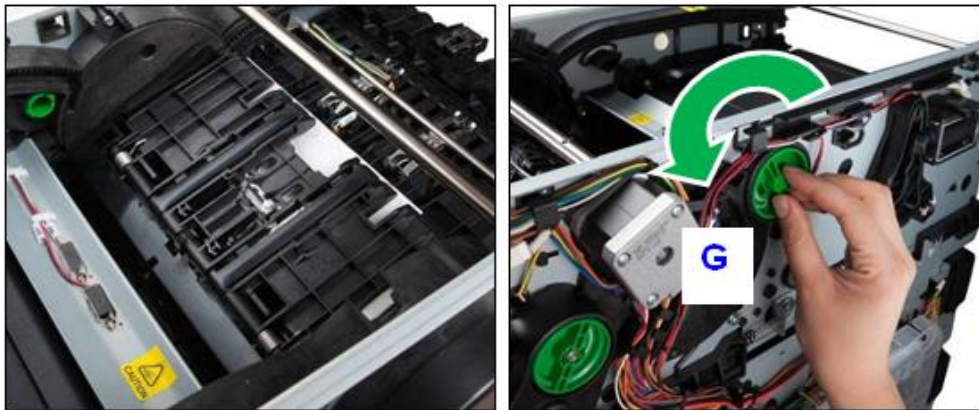

2. After removing the jammed bill, turn the knob (G) and return the carriage to the original position.

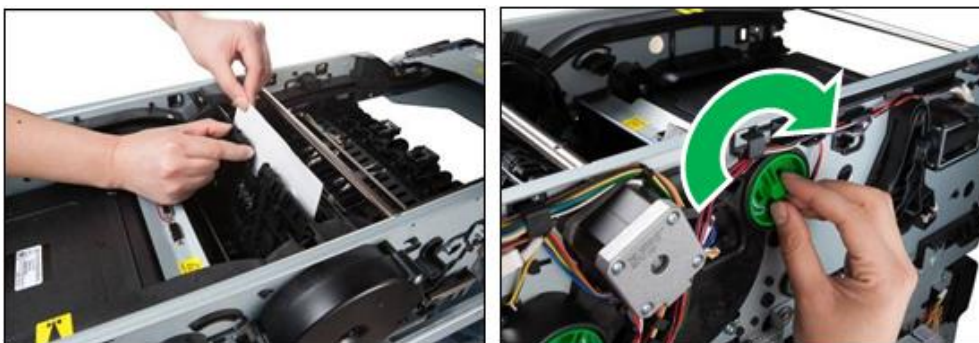

Operation

Remove jam from the transport path of the main body

Remove jam from the transport path of the main body

1. Turn the knob (G) and match the tooth form.



2. Lift up the carriage with hand and move it to the throat.



3. Turn the knob (G) and move the jammed bill to the location to clear it easily. Then remove the jammed bill.




Operation

Remove jam from the transport path of RJ/RT box

Remove jam from the transport path of RJ/RT box

1. Demount the Reject/Retract Box.
(Refer to “How to empty the Reject/Retract Box.”)
2. Remove the jammed bills.

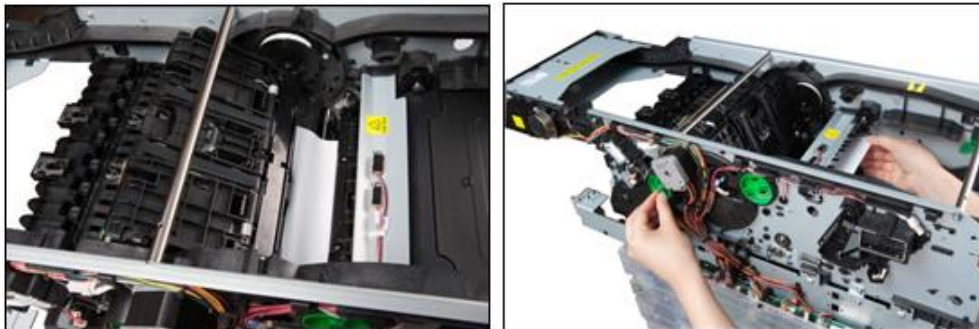


Operation

Remove jam from the separation part

Remove jam from the separation part

1. Demount the cassette.
(Refer to “How to replenish the Cash Cassette.”)
2. Remove the jammed bill as shown in below picture

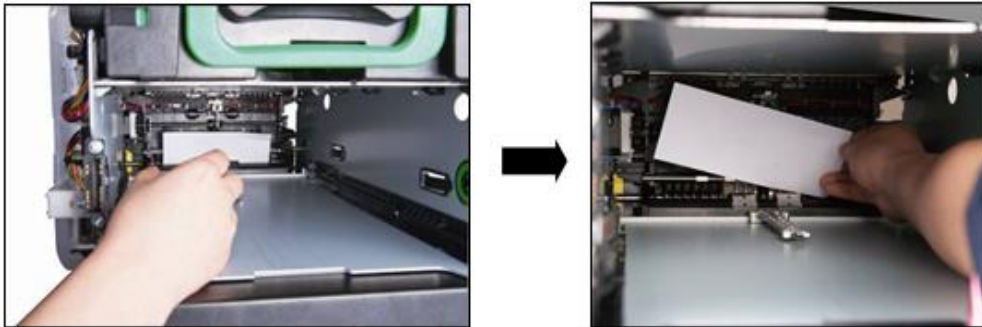


Operation


Remove jam from the transport path of reject

Remove jam from the transport path of reject

1. Turn the Knob (H) clockwise or counterclockwise according to the location of the jam and remove the jammed bill.

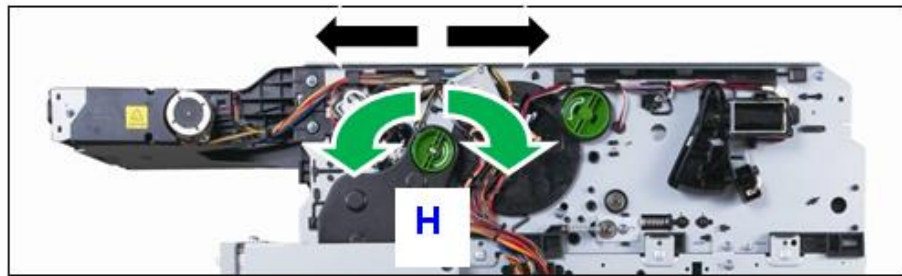

2. If turning the Knob (H) counterclockwise, the jammed bill will move in the direction of the Transport Path.

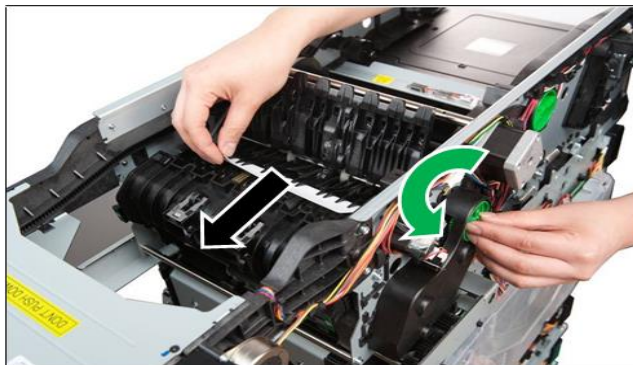

3. If turning the Knob (H) clockwise, the jammed bill will move in the direction of the RJ/RT Box.




Operation

How to Reset Main Board

How to Reset Main Board

1. Press the hole in the red circle with a stick and reset.

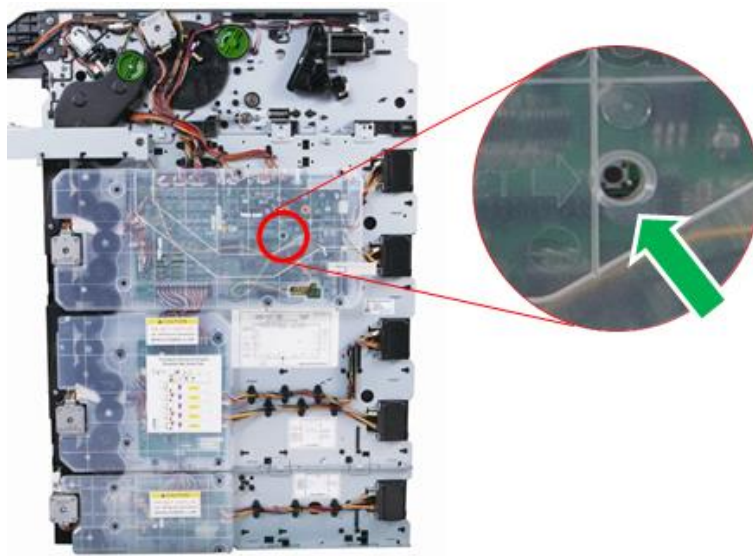

Operation

How to set the Cassette for Each Denomination

Cassette Base Guide Setting for the Horizontal Size of Each Denomination

Cassette Base Guide Setting for the Horizontal Size of Each Denomination


1. Open the cassette cover as shown in below picture.



2. Pressing the green parts on the end of the shaft supporting the Push Plate with one hand, lift up the Push Plate and take it out with the other hand. Also take out the Push Plate on the other side in the same way.



3. Completely take out the Push Plate and gently place it inside the box.

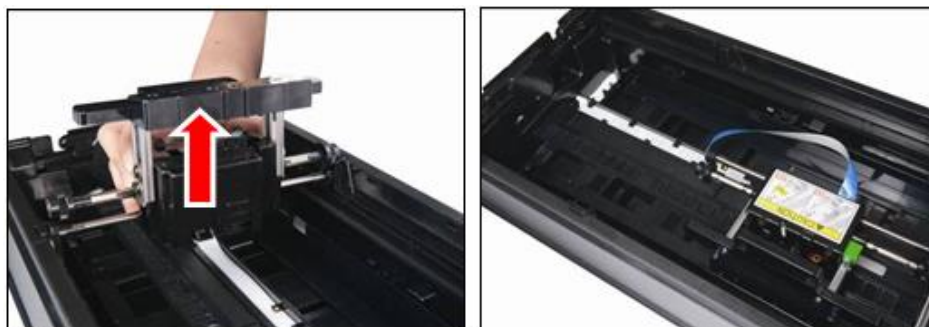

Operation


4. Pressing the green part and slightly lifting it up, take out the Hook.



5. After taking out the Hook Part, push the Guide in the direction of yellow arrow and take it out.





6. Remove current 6 LOWER NOTE SPACER as shown in below. Press HOOK in the green arrow and pull up the Spacer.

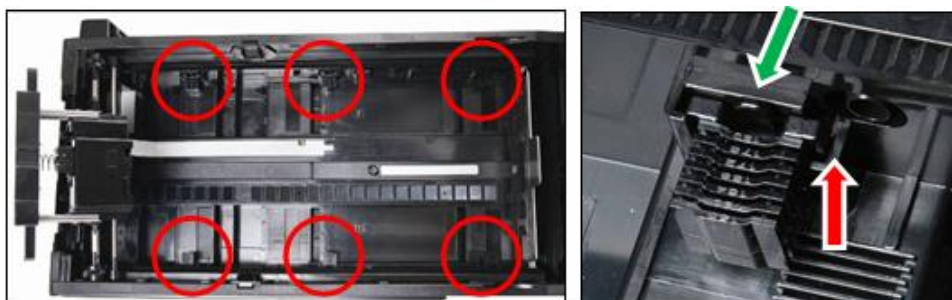

Operation

7. Install proper new LOWER NOTE SPACER

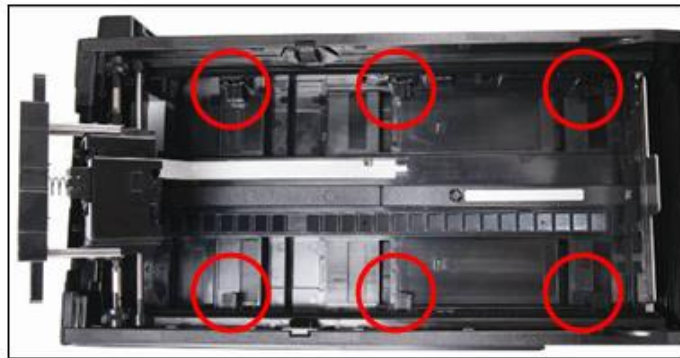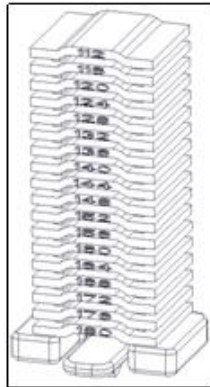

SPACER:NOTE_LOWER					
NO	PART NO.	SIZE (mm)	NO	PART NO.	SIZE (mm)
1	4460000158	112	9	4460000166	144
2	4460000159	116	10	4460000167	148
3	4460000160	120	11	4460000168	152
4	4460000161	124	12	4460000169	156
5	4460000162	128	13	4460000170	160
6	4460000163	132	14	4460000171	164
7	4460000164	136	15	4460000172	168
8	4460000165	140	16	4460000173	172


Recommended spacer for note size

8. For the desired denomination size, mount the Guide matching it with the white line. Press it until clicking sounds. (Mount the remaining guide in the same way.)




Operation

9. Vertically insert two kinds of Shaft and turn the hand holding the Push Plate.

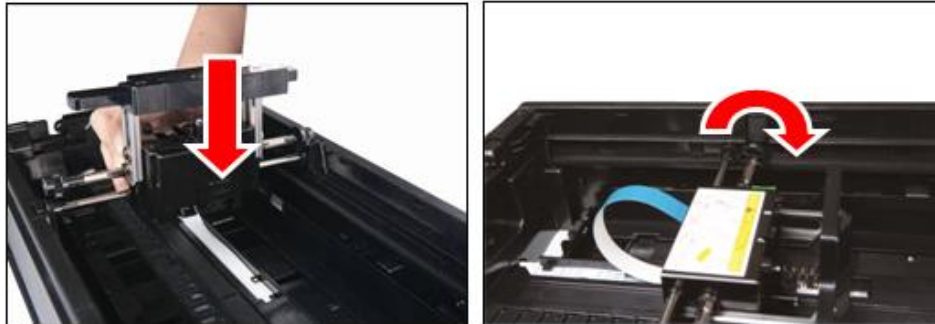


10. Then check whether A Shaft matches the white arrow. (The other side is same.)

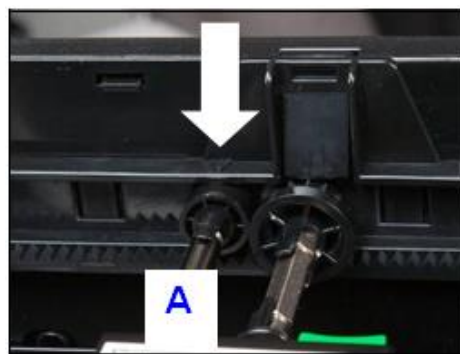


Operation

Cassette Cover Guide Setting for the Vertical Size of Each Denomination


1. Unfasten the caught Hook in the arrow direction and gently take out the Guide pulling it in the **C** direction.

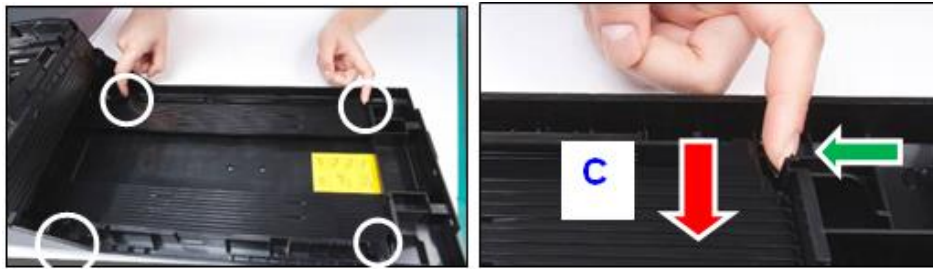

2. Also unfasten the Hook on the other side in the arrow direction and completely take out the Guide pulling it in the **C** direction.

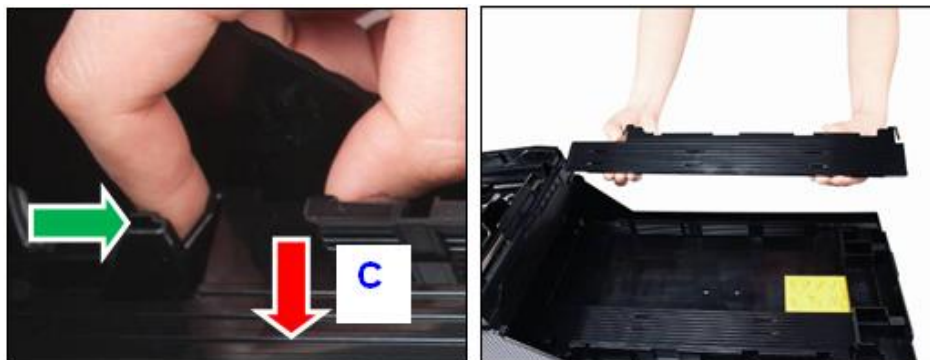


3. Remove 6 Upper note SPACER. Then lift up HOOK and pull out Spacer from guide

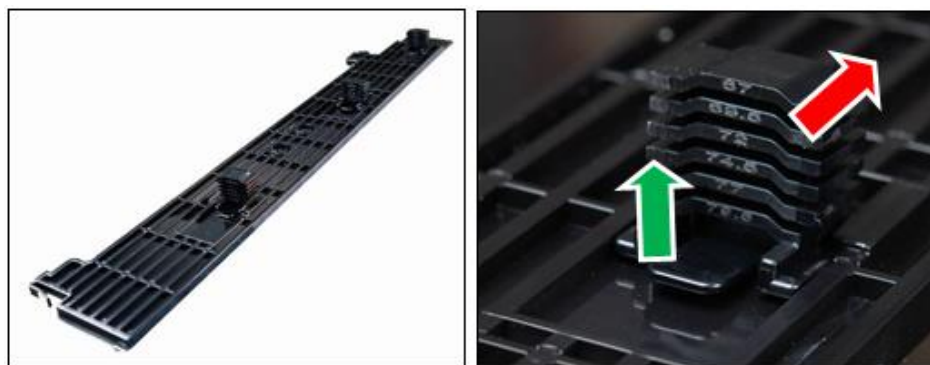

Operation

4. Install proper new SPACER: NOTE_UPPER to Guide.

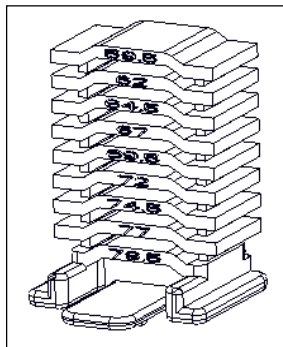

SPACER:NOTE_UPPER					
No.	PART No.	SIZE (mm)	NO	PART NO.	SIZE (mm)
1	4460000149	59.5	6	4460000154	72.0
2	4460000150	62	7	4460000155	74.5
3	4460000151	64.5	8	4460000156	77.0
4	4460000152	67	9	4460000157	79.5
5	4460000153	69.5			

Recommended spacer for note size

5. After matching the height (white line) with the desired bill size, push it in the arrow direction. However, be sure to push it after matching the height of the other side of the Guide.



6. After also matching the other side of the Guide with the height of the desired bill size, push it with both hands until the Hook is caught.



Operation

Change Note Index

Change Note Index

1. After change, change the denomination label



1	2	5
10	20	50
100	200	500
1,000	2,000	5,000
10,000	20,000	50,000
100,000	200,000	500,000
1,000,000	2,000,000	5,000,000

Label Part No.: 5721001326

2. After adjust cassette have to change assigned denomination value in Supervisor mode.

<Note!>

To assign new denomination in supervisor mode, please contact software develops part or Technical Support Center.

Operation

Cash & Check In Module (CCIM16)


Please understand that *the images used in this section are for illustration only* so they can differ from the appearances of real machine.

The Cash & Check In Module is designed to be integrated in automated teller machines and full-function self service terminals. It enables cash deposit and automated check handling.

Banknotes and checks deposited by the customer are stored in cassettes. Which type of document is stored in which cassette is defined on the basis of the bank's application.

The diagram below shows the overall configuration of the Cash & Check In Module and the function of the main module is described in the next paragraph.

The shutter of CCIM16 is mounted on unit.

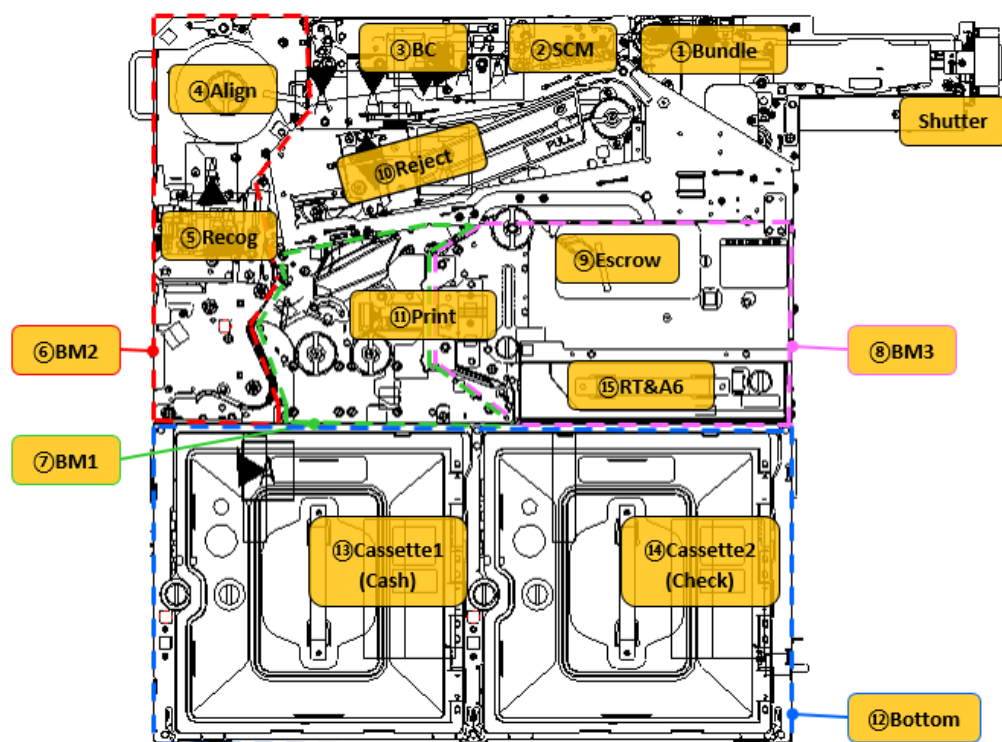

ALG Section

To read MICR of checks, auto-alignment is executed in this section.

Separation Section

The cash and check deposited together is separated by sheets on the separation section. In case of

Operation

the transaction cancellation, cash and check in reject section is ejected to the customer in a lump by the command of higher rank.

BC (Bill Checker)

This section verifies the image data on both sides of cash for identification

Reject Section

When the reject condition is occurred, the media is temporarily stacked. After the calculation of the media is completed, they are returned in a lump to the separation section by the command of the higher rank.

Retract Section

Retract: The cash/check in an unclaimed or retrieved condition is stored in this section.

Article 6: The media in a condition corresponded to the regulation of ECB are stored by force. At this time, they don't pass through the temporary stack section.

RECOG (Recognition Module)

This section reads the MICR character written on the checks through the magnetic head.

Escrow Section

In this section, cash and check that are receivable is stacked in a lump and they are fed to the cash/check cassette or rejection section by the command of the higher rank.

Bundle Section

This section accepts Cash & Check in Bundles and separates it.

Cassette Section

Cash and check received are stored in the cassette by sheets.

The cassettes can be mounted or demounted from the unit with the key. And also cassette's door can be opened using the key.

Operation

Basic Specification of Cash & Check In Module


Item		Denomination		Remarks
Supported Denomination	Deposit	Various Denominations		
Supportable Note Size	Short Way	60.0~102.0 mm (W) (2.36~4.01inch)		AMERICA:ANSI E13B Up to 93.142mm
	Long Way	110.0~230.0 mm(L) (4.33~9.06inch)		Cash & Check
	Thickness	0.075 ~0.2 mm (0.003~0.008inch)		
Maximum Number of Deposit	Deposit	Up to 75 Notes(Mixing) *		
Storage Capacity	Deposit Cassette	Cash	1ea	227 mm (8.94inch) (Max.2,000 with New Notes)
		Check	1ea	227 mm (8.94inch) (Max.2,000 with New Notes)
	RT/A6 Cassette	Retract	1ea	20.0 mm (0.79inch) (Max.50 with New Notes)
		A6		7.0 mm (0.28inch) (Max.10 with New Notes)

* It is the reference value when the thickness of bill used is 0.1mm (0.0039inch).

Operation

Specification of External Appearance

Item		Specification
CCIM	Dimensions	Width: 232.2 ± 2 (mm) (9.14 ± 0.08 inch) Length: 912.5 ± 2 (mm) (35.93 ± 0.08 inch) Height: 750 ± 2 (mm) (29.53 ± 0.08 inch)
	Weight	83 Kg(183lb) (except Cash & Check weight)
Deposit Cassette (Cash&Check)	Dimensions	Width: 309 ± 2 (mm) (12.17 ± 0.08 inch) Length: 162 ± 2 (mm) (6.38 ± 0.08 inch) Height: 310 ± 2 (mm) (12.20 ± 0.08 inch)
	Weight	4.7 Kg(Cash) & 4.4Kg(Check) (13lb & 12.35lb, except Cash & Check weight)
RT/A6 Cassette	Dimensions	Width: 274 ± 2 (mm) (10.79 ± 0.08 inch) Length: 169 ± 2 (mm) (6.65 ± 0.08 inch) Height: 62 ± 2 (mm) (2.44 ± 0.08 inch)
	Weight	1 Kg (2.20ib, except Cash & Check weight)

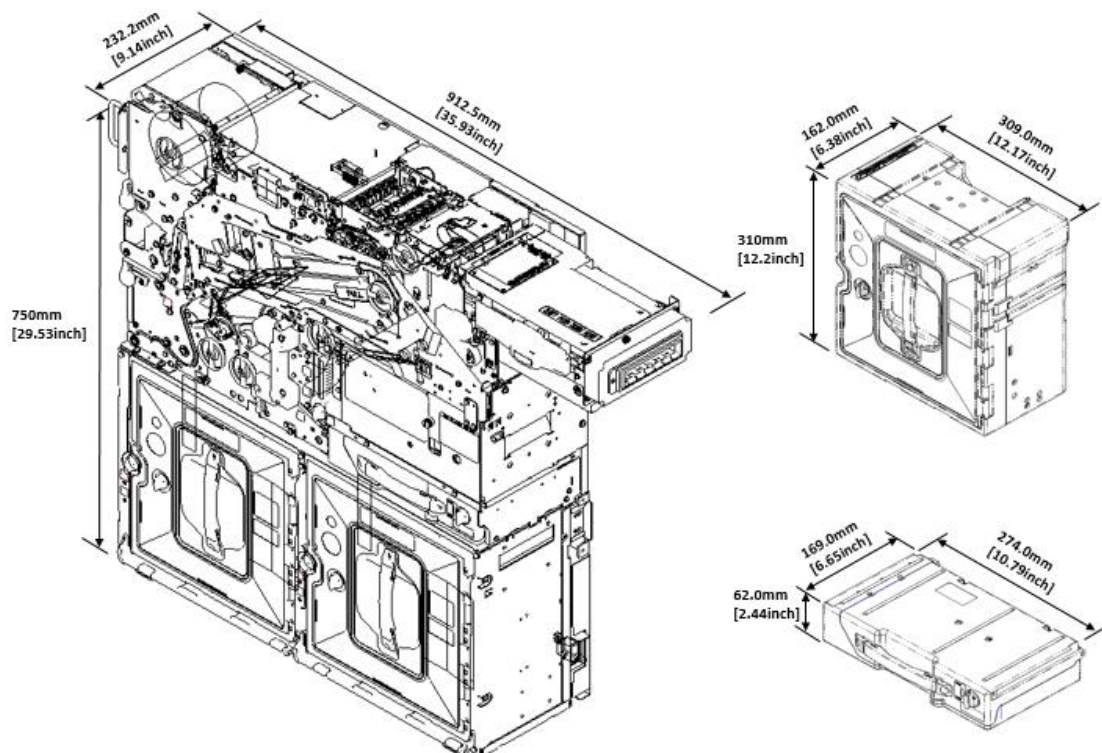

Operation

Cash & Check Conditions

Please refer to “Bill Conditions” in the chapter5.

Environmental Condition

Item		Specification		Remarks
Installation Condition		Interior or Outdoor Installation of Bank for ATM There should be no direct sunlight for the outdoor installation of bank.		
Temperature	Operating	5 ~ 50℃		
	Non-operating	-10 ~ 50℃		
	Storage	-20 ~ 50℃		
	Transportation	-20 ~ 60℃ (Within 48H)		
Humidity	Operating	30 ~ 80 %		
	Non-operating	10 ~ 90 %		
	Storage	10 ~ 90 %		
	Transportation	10 ~ 90 %(30℃ Within 48H)		
Vibration	Transportation	There should be no defect or problem in the functional operation and external appearance after vibration test of transport mode.		
		Frequency	5 ~ 100 Hz	
		Acceleration / Displacement	Random Wave	
		Overall RMS	0.69G	
		Vibration Direction	Up and down	
		Test Time	20minute	
		Electrostatic Noise		

Operation

Maintenance Requirement

Item		Specification	Remarks
Maintenance Condition	Maintenance Unit	Refer to Maintenance Manual	
	Regular Maintenance Period	2times / year	
MTTR		30minutes	

Operation

How to remove jam from each section

This chapter describes removing jam from each section where jam occurs on CCIM.

CAUTION:

Be sure to use the appropriate tools (e.g. pincette) when removing jam not to hurt your hand.

<Note!>


Any branch personnel should not attempt to remove any jams without powering down the ATM.

Location Map to remove jam.

The Cash & Check In Module (CCIM) can be divided into 12 modules as follows.

BM3 Module includes ESCROW Module and RT/CASSETTE Module.

BOTTOM Module includes CASH CASSETTE Module and CHECK CASSETTE Module.

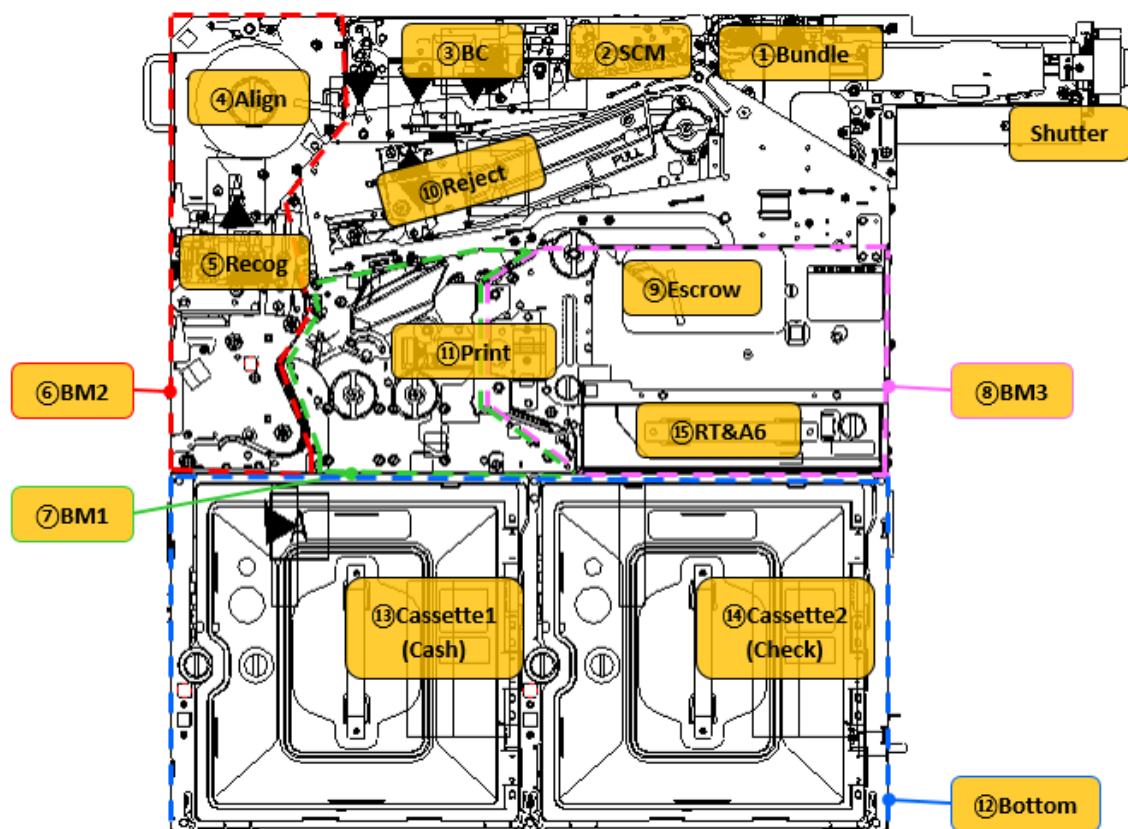


Operation

Zone	Abbreviation	Description
①	BND	Bulk Note Separation Module
②	SCM	Separator Control Module
③	BC	Bill Checker Module
④	ALG	Alignment Module
⑤	REC	Recognition Module
⑥	BM2	Body Module2
⑦	BM1	Body Module1
⑧	BM3	Body Module3
⑨	ESC	Escrow Module
⑩	RJ	Reject Module
⑪-1	PRT(Ink)	Endorsement Module
⑪-2	PRT(Felt)	Ink Head Cleaner
⑫	BOT	Body Module4
⑬	CST 1	Cash Cassette
⑭	CST 2	Check Cassette
⑮	RT&A6	Retract & A6 Cassette

Operation

LED Lighting of Unit Transport Path

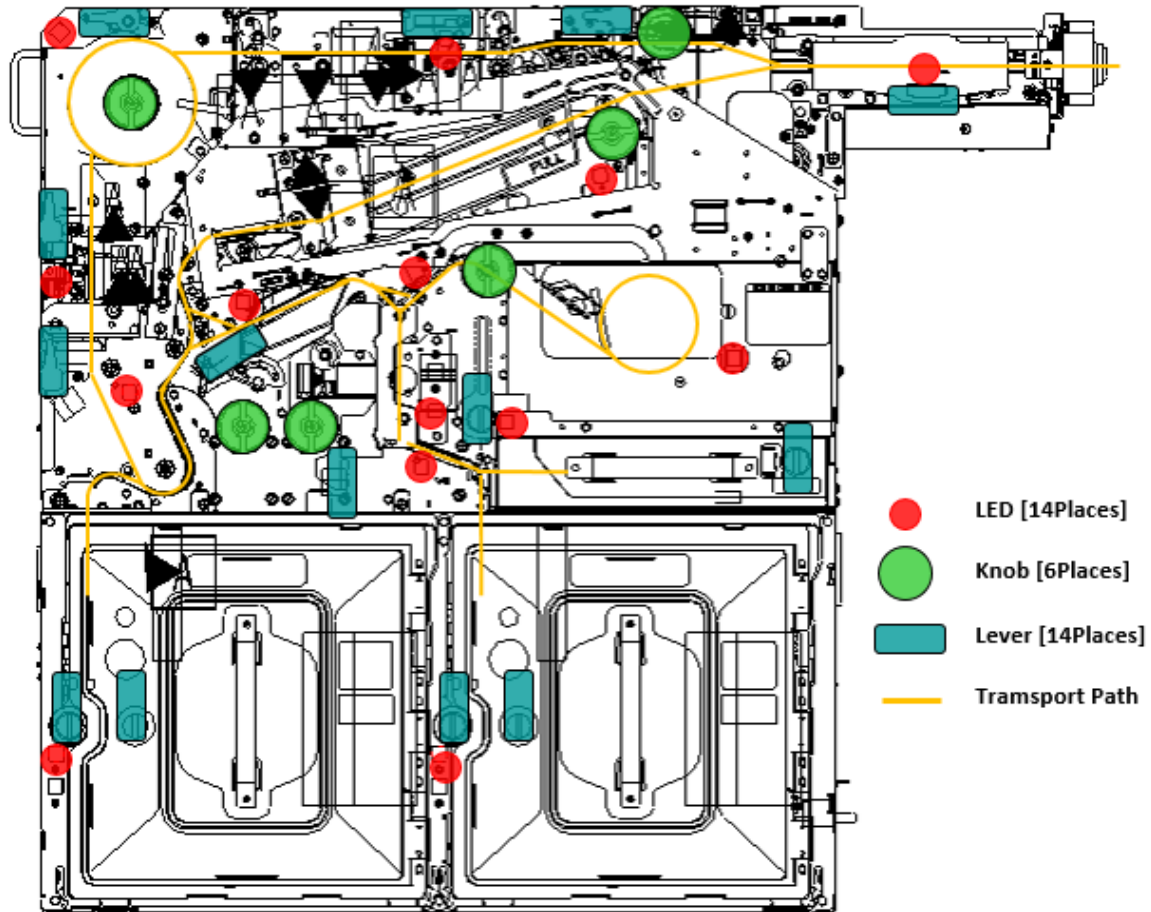

Operation

Remove jam from Bundle Module

Zone ①, Inside the Bundle Section.


Location LED A Blinks

Case1.


1. If there is a jam on Bundle Module, open the door as shown in the picture below picture.
2. While holding Bundle door and pressing Bill-press, Remove a jammed note or foreign substances.
3. After checking if the jammed note is removed, close the door.

Case2.


1. After opening the Bundle Module and SCM, remove a jammed note.

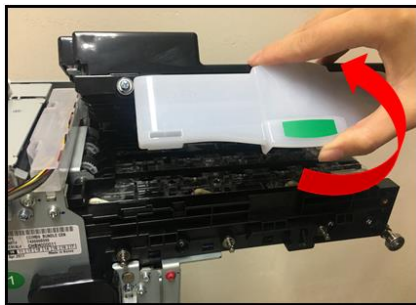


Open Bundle door.

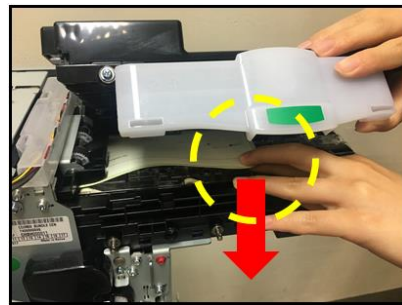

While holding Bundle door and pressing Bill-press, remove bills and remained substance

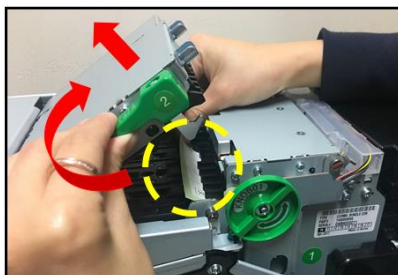

Once you open SCM using lever,
Remove bills and remained substance

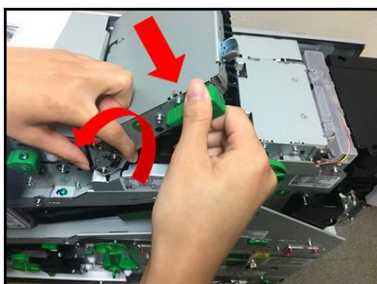

Close SCM using PL lock and lever
(Caution; Risk of pinching hand)


Operation

Remove jam from the First Transport Path


Zone ②, Inside the SCM or Bundle Section.

Location LED A or B Blinks

1. If there is a jam on the first transport path, push the lock lever in the arrow direction as shown in the picture and open the First Transport Path.
2. Remove a jammed bill or foreign substances.
3. After checking if the jammed bill is removed, completely close the First Transport Path pushing the SCM lever in the arrow direction as shown in the picture.

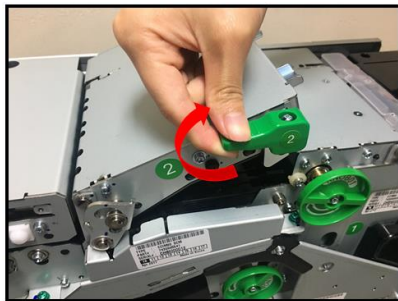

Once you open SCM using lever,
Remove bills and remained substance

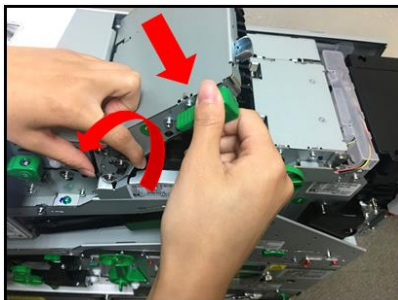

Close SCM using PL lock and lever
(Caution; Risk of pinching hand)


Operation

Remove jam from BC


Zone ③, BC or SCM or ALG.

Location LED B Blinks

1. If there is a jam on BC section, push the lock lever in the arrow direction as shown in the picture and open the BC section.
2. Remove a jammed Note or foreign substances.
3. After checking if the jammed Note is removed, completely close the BC section by pushing the lever and PL lock in the arrow direction as shown in the picture.

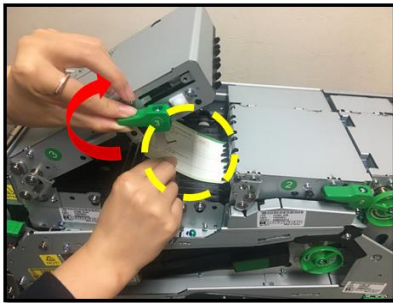

Once you open BC using lever,
Remove bills and remained substance

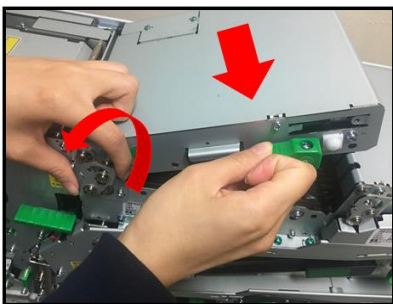

Close BC using PL lock and lever
(Caution; Risk of pinching hand)


Operation

Remove jam from ALG


Zone ④, Inside the ALG.

Location LED C Blinks


1. If there is a jam on Zone ④, push the ALG lever in the arrow direction as shown in the picture and open the ALG section.
2. Remove a jammed Note or foreign substances. If necessary, turn the green knob clockwise or counterclockwise to easily remove the jammed Note as shown in the picture below.
3. After checking if the jammed Note is removed, completely close the ALG section.

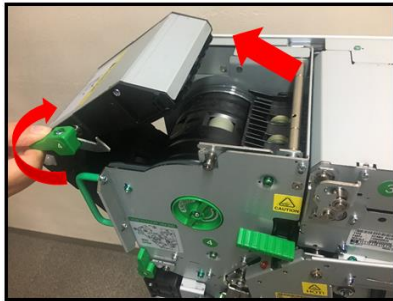


Open ALG using lever.

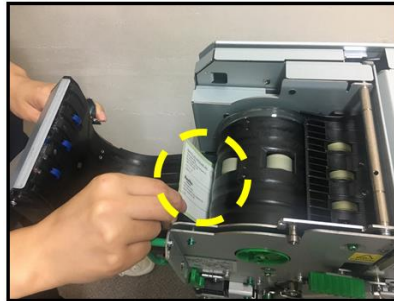


Remove bills and remained substance

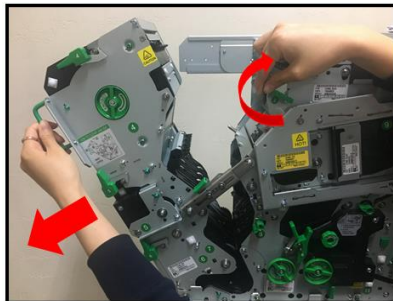

Open BM2 using lever.

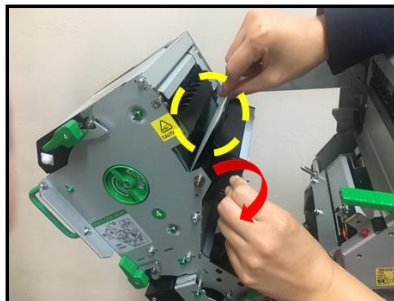

While opening guide, Remove bills and remained substance

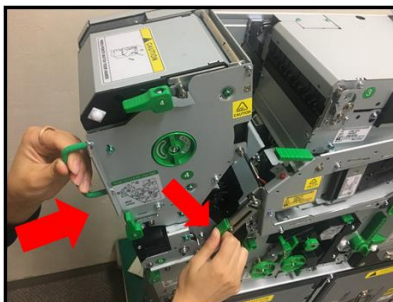

Close BM2 pushing PL lock and handle
(Caution; Risk of pinching hand)


Operation

Remove jam from Recog Transport Section

Zone ⑤, Inside the Recog.

Location LED D Blinks


1. If there is a jam on Zone ⑤, pull the Recog lever in the arrow direction as shown in the picture and open the Recog Transport Section.
2. Remove a jammed Note or foreign substances. If necessary, turn the green knob clockwise or counterclockwise to easily remove the jammed Note as shown in the picture below.
3. After checking if the jammed Note is removed, completely close the Recog Transport Section.

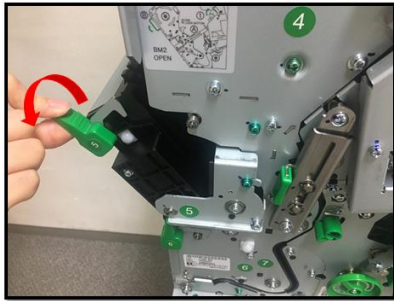

Open Recog using lever



Remove bills and remained substance

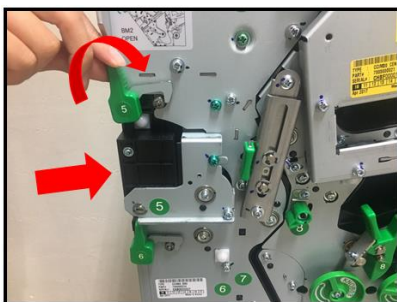

Close Recog using lever

(Caution; Risk of pinching hand)

Operation

Remove jam from the B2 Upper Transport Path of BM2


Zone ⑥, B2 Upper Transport Section of BM2.

Location LED E Blinks

1. If there is a jam on Zone ⑥, push the lever in the arrow direction as shown in the picture and open Zone ⑥.
2. Remove a jammed Note or foreign substances. If necessary, turn the green knob clockwise or counterclockwise to easily remove the jammed Note as shown in the picture below.
3. After checking if the jammed Note is removed, completely close Zone ⑥ as shown in the picture.



Once you open BM2 using lever,
Remove bills and remained
substance rotating KNOB three or four times

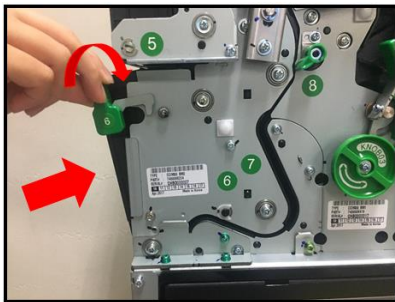

Close BM2 using lever


Operation

Remove jam from B2 Reject Transport Section

Zone ⑦, B2 Bottom Transport Section of BM2.

Location LED E or F Blinks


1. If there is a jam on Zone ⑦-1, ⑦-2, push the lever in the arrow direction as shown in the picture and open the BM2 Transport Section.
2. Remove a jammed Note or foreign substances.
3. After checking if the jammed Note is removed, completely close BM2 Transport Section as shown in the picture.
4. If it is necessary to remove the inside jam of REJECT

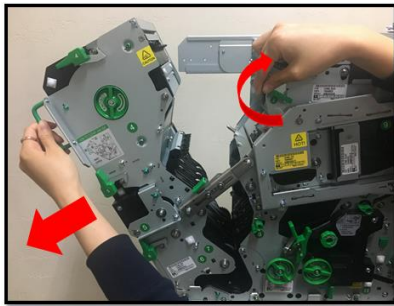

Once you open BM2 using lever,
Check bills and remained substance



Remove bills and remained substance.

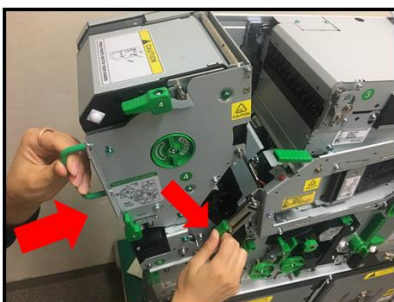

Close BM2 pushing the PL lock and handle

(Caution; Risk of pinching hand)


Operation

Remove jam from B3 Transport Section


Zone ⑧, 3WAY1

Location LED F Blinks


1. If there is a jam on Zone ⑧, push the lever L7 in the arrow direction as shown in the picture and open Zone ⑧.
2. Remove a jammed Note or foreign substances. If necessary, turn the green knob 3 clockwise or counterclockwise to easily remove the jammed Note as shown in the picture below.
3. After checking if the jammed Note is removed, completely close Zone ⑧ as shown in the picture.

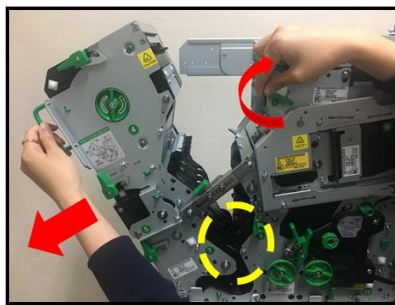


Once you open BM2 using lever,
Check bills and remained substance

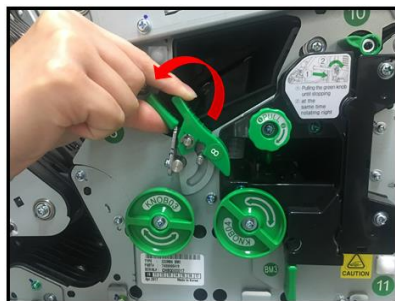


Open guide using lever.

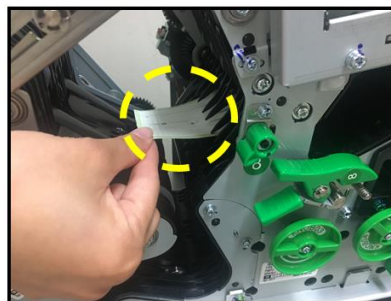

Remove bills and remained substance

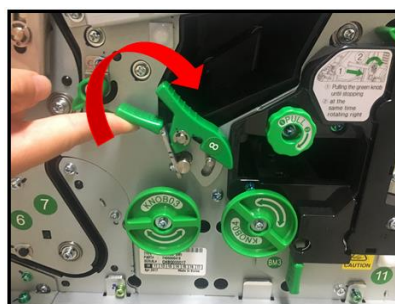

Close guide pushing lever.

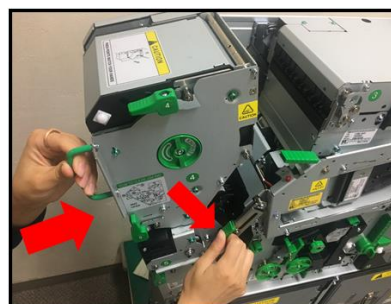

Close BM2 pushing the PL lock and handle
(Caution; Risk of pinching hand)

Operation

Remove jam from Reject Section

Zone ⑨, Reject Module

Location LED I Blinks

1. If there is a jam on Rejection Section, open the door as shown in the picture.
2. Remove a jammed Note or foreign substances. If necessary, turn the green knob 6 clockwise or counterclockwise to easily remove the jammed Note as shown in the picture below.
3. After checking if the jammed Note is removed, completely close the door.



Once you open RJ cover,
Check bills and remained substance



While holding RJ door,
Remove it rotating KNOB06 three or four times


Operation

Remove jam from B3 Escrow Transport Section

Zone ⑩, 3WAY 2

Location LED G Blinks


1. If there is a jam on Zone ⑩, first push the BM3 lever in the arrow direction, and then push the BM3 in the arrow direction as shown in the picture.
2. Remove a jammed Note or foreign substances. If necessary, turn the green knob clockwise or counterclockwise to easily remove the jammed Note as shown in the picture below.
3. After checking if the jammed Note is removed, completely close Zone ⑩ as shown in the picture.

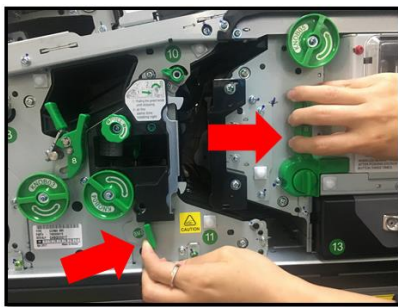

Open BM3 using lever



Remove bills and remained substance
rotating KNOB three or four times

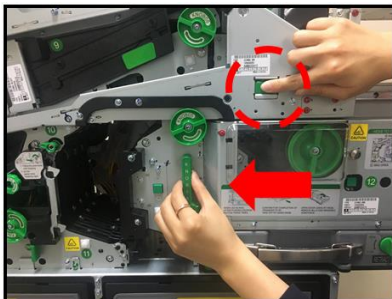

Close BM3 pushing the arrow direction KNOB and PL lock
(Caution; Risk of pinching hand)


Operation

Remove jam from B4 Transport Section


Zone ⑪ (B4 GUIDE)

Location LED G, K, L or N Blinks


1. If there is a jam on Zone ⑪, first push the BM3 lever L9 in the arrow direction, and then push the BM3 in the yellow arrow direction as shown in the picture.
2. Remove a jammed Note or foreign substances. If necessary, turn the green knob4&5 clockwise or counterclockwise to easily remove the jammed Note as shown in the picture below.
3. After checking if the jammed Note is removed, completely close Zone ⑪ as shown in the picture.

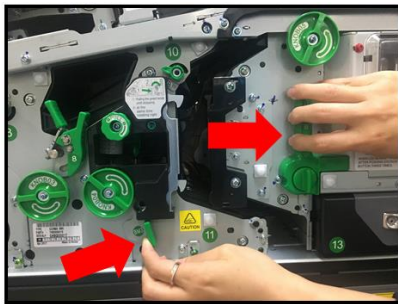

Open BM3 using lever

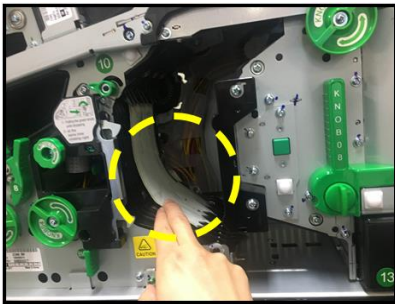

Remove bills and remained substance

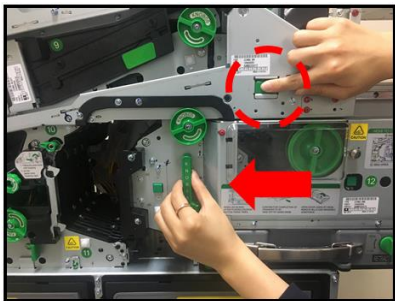

Close BM3 pushing the arrow direction KNOB and PL lock

(Caution; Risk of pinching hand)


Operation

Remove jam from Escrow

Zone ⑫, Escrow Module

Location LED G or H Blinks


1. If there is a jam on Escrow, remove a jammed Note or foreign substances from the position where the arrow pointed in upper figure. If it is a heavy jam, call the service engineer for clearing it.
2. If necessary, turn the green knob5 clockwise or counterclockwise and move the BM3 (Refer to figures below) to remove the jammed Note more easily.
3. Be careful for the film inside the Escrow not to be missed or damaged during removing the jammed Note or foreign substances.
4. After checking if the jammed Note is removed, completely close BM3 Module.
5. Pushing Escrow button three times, Confirm for completion of transfer to RT.
6. And then come out one note from the escrow module. And remove the note as shown in lower figure. If necessary, repeat it to end.

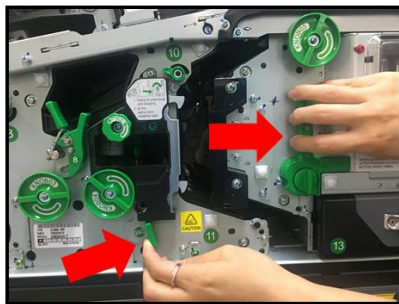

Open BM3 using lever




Remove bills and remained substance rotating KNOB05 three or four times

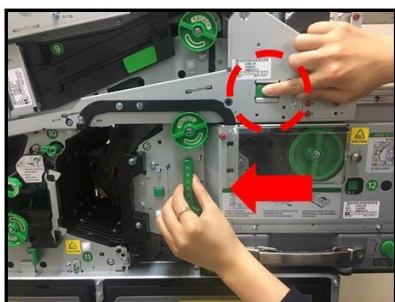

Close BM3 pushing the arrow direction KNOB and PL lock (Caution; Risk of pinching hand)

Operation

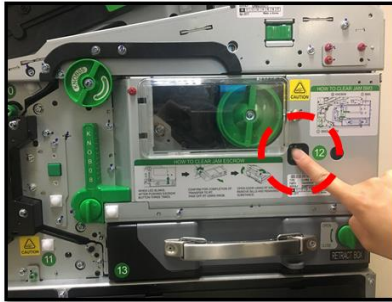

After pushing Escrow button three times,
Confirm for completion of transfer to RT



Take off RT using KNOB



Open door using RT KNOB.



Once you open RT guide,
Remove bills and remained substance



Once you close RT door,
Lock RT door using KNOB



Add on RT


Operation

Remove jam from RT/A6 Cassette


Zone ⑬, Retract & A6 Cassette

Location LED N Blinks

1. To remove the jammed Note more easily, move the BM3 as shown in the picture of “Moving BM3”. (Refer to the picture in the page of “removing jam from Zone ⑪”). And check the jammed Note or the foreign substance with naked eyes and remove it as shown in the picture of “Moving BM3”.
 2. If there is a jam in RT/A6 Cassette, separate the RT/A6 Cassette using knob as shown in the picture of “Separating Retract BOX”.
- And remove a jam as shown in the picture of Removing jam from Retract.
3. To remove a jam or media from inside the RT/A6 Cassette, open the door with the knob (Refer to the picture of “Opening or closing the door of Retract BOX”) and remove the jam by lifting up the A6 Guide as shown in the picture of “Removing jam from Retract Section”.
 4. After removing jam, close the door and turn the knob to the left.
 5. Then mount the RT/A6 Cassette.

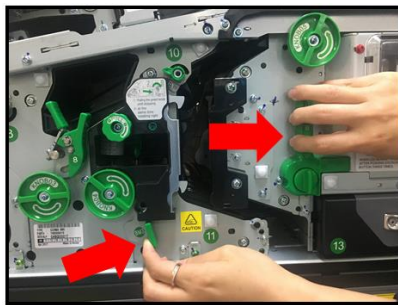

Open BM3 using lever

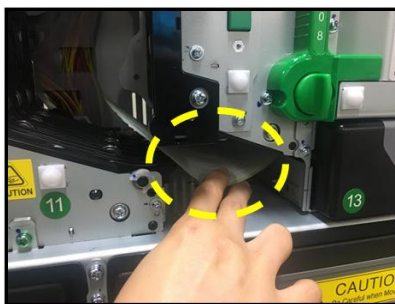

Remove bills and remained substance

Operation



Take off RT using KNOB



Open door using RT KNOB.




Once you open RT guide,
Remove bills and remained substance



Once you close RT door,
Lock RT door using KNOB



Add on RT

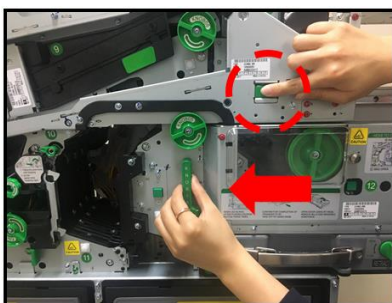

Close BM3 pushing the arrow direction KNOB and PL lock
(Caution; Risk of pinching hand)

Operation

Remove jam from Cassette

Zone ⑭, ⑮, Cash & Check Cassette

Location LED J or M Blinks


1. If there is a jam in Cassette, separate the Cassette using knob as shown in the picture.
2. Check the jammed Note or the foreign substance with naked eyes and remove it as shown in the picture. To easily remove the jammed Note, turn the green knob 3&4 clockwise or counterclockwise. To remove a jam or media from inside the Cassette, open the door with the knob. And drop down the Push Plate by pressing the lever to remove the jammed Note.
3. After removing jam, close the door and turn the knob to the left. And then it is locked.
4. To mount the Cassette, turn the knob to the left and remove it.



Take off Cassette using KNOB



Once you check bills and remained substance in display, Remove it

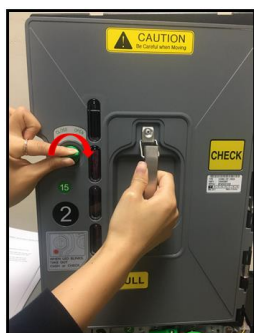

Open Cassette door using KNOB and handle

Operation



While pushing Cassette lever,
Pull down Push-plate



Remove bills and remained substance



Once you close Cassette door,
Lock Cassette door using KNOB



Add on Cassette(into the bottom)

Operation

How to change PRT Maintenance Module

How to replace Ink cartridge

1. Pull out the black knob until stopping (①), at the same time rotate it clockwise (②), and pull it completely as shown in the picture.
2. After opening the black grip (③), insert Ink Cartridge in the cartridge adaptor (④) as shown in the picture. And then release the black grip. Ink cartridge will be locked.


<Note!>

Before mounting Ink Cartridge, see Ink Cartridge installing guide in the packing bag

3. Push the black knob completely in the green arrow direction (⑤) until you hear the click of the latch, and then it is locked automatically as shown in the picture.

✕ After replacing Ink Cartridge, you have to reset "PRT Cartridge Count".

And you may need to replace Ink Head Cleaner Felt if necessary

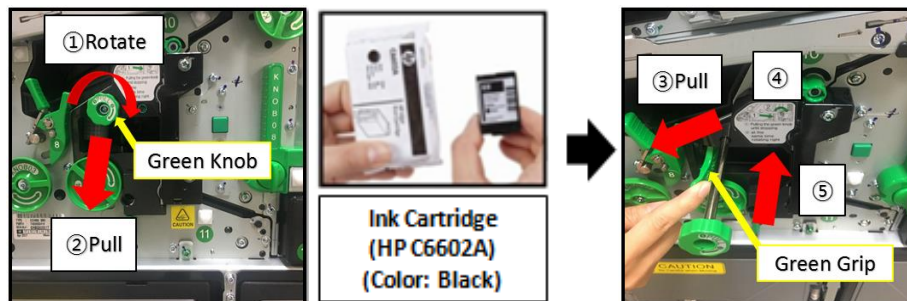

Installing Ink Cartridge

Operation


How to reset PRT Cartridge Count

<Note!>


There are 2 ways to reset PRT Cartridge Count. One is using DIP switch and the button on CCIM. Other is using VDM. As it is alternative, they can choose one of them for their convenience.

Case 1. Using DIP switch and the button on CCIM

1. Replace Ink Cartridge (Refer to "1) How to replace Ink Cartridge")
2. Lift up the DIP Switch 1 as shows the picture (DIP Switch 1).
3. Press the green button on PRT capping module installed BM3 for 3 seconds as shows the picture (Pressing the green button).
4. Push down DIP Switch 1

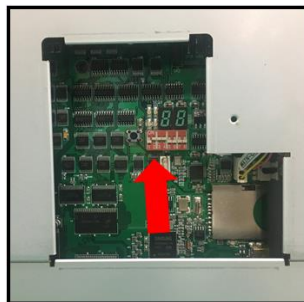

DIP Switch up 2,3,4

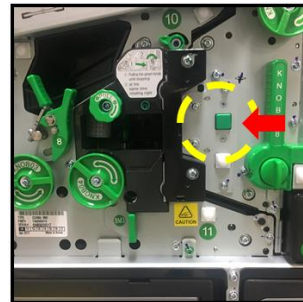


Pressing the green button


Operation

How to replace Ink Head Cleaner Felt

1. Open BM3 using lever and disassemble the felt unit step by step as shows the picture (Disassembling the Felt Unit).
At that time, Rotate two captive screws counterclockwise completely.
2. Rotate the felt adaptor as shown the picture (Replacing Ink Head Cleaner Felt), and remove the old one by using the pin set.
3. After replacing the new one by removing the tape, assemble the felt unit in the reverse process.

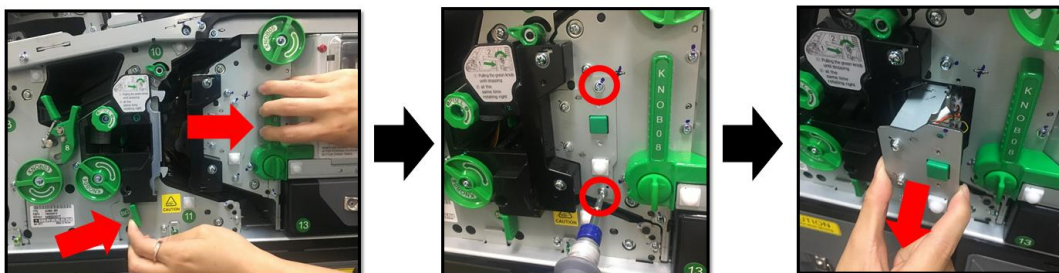

Disassembling(Bolt two M3) the Felt Unit

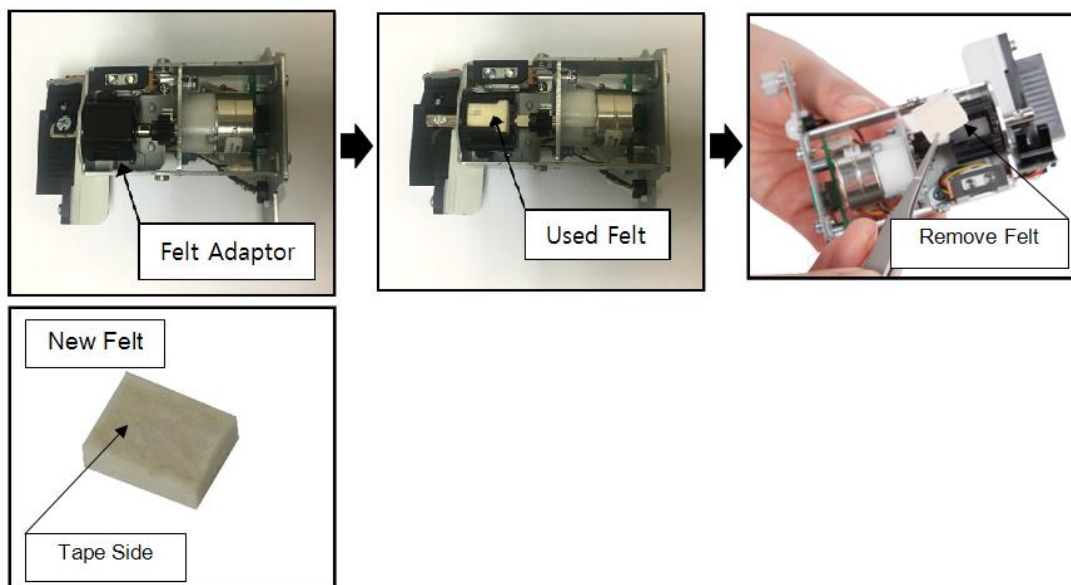

Replacing Ink Head Cleaner Felt

Operation

Receipt Printer

Basic specifications of receipt paper are summarized as follows.

Item	Specifications	Note
Paper Type	Inside Printing Thermal Roll Paper	Paper detects heat.
Paper Width	3.13±0.02inch (79.5±0.5mm)	
Paper Exterior	Max. ϕ 210mm ± 2	
Paper Inside Diameter	18.0mm	
Print Color	Black	
Type of Paper Setting	Semi-Auto loading	

Printing specification of the black mark

1. Use black without dark or bright shades.
2. Use the oil ink. (no surface gloss)
3. Permeation ratio: Less than 10%
4. Reflection ratio - PCS 0.9 or higher (Less than Mark GBase PCM II 900nm)
5. Thickness should take precedence over reflection ratio.
6. The slippery gap between the black mark and the rule mark should be less than 0.5mm.

Paper Handling Precautions

1. Store it away from high temperature and humidity:

If the paper is stored in a place where temperature is above 50°C or humidity is above 90% RH, the coloring capability may deteriorate or the paper surface may inflate.

2. Refrain from exposing to direct sunlight:

The paper surface can be inflated if you expose it to direct sunlight or leave it under the fluorescent lamp for a long time.

3. Keep it away from the organic solvents:

Paper color may change if the paper comes in contact with organic solvents or glues containing organic solvent.

Operation

4. Keep it away from plastics:

If the paper comes in contact with materials containing plastics, its coloring capability may deteriorate or de-coloring of the paper may occur.

5. Store the paper roll separately to prevent damage to the paper.

6. Do not connect the papers with tape.

7. Make sure the paper end is not attached to the paper pipe.

8. Make sure the paper is rolled evenly.

9. Miscellaneous:

If the paper comes in contact with carbon copy paper or if the paper surface is scratched with a metallic object, de-coloring may occur.

Operation


How to load the receipt paper

Prior to loading the receipt paper, the following must be kept in mind.

<Note!>

- Load a paper roll into the unit with the shape of the roll kept intact.


(Deformed roll may cause jamming.)

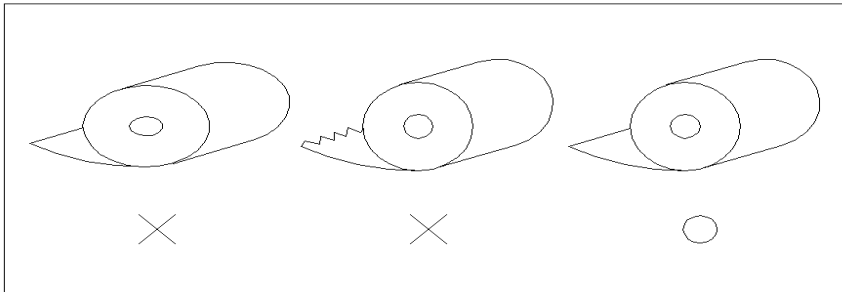

- The leading edge of the roll shall neatly be cut prior to loading the roll.

To load the paper roll into the printer, please follow the procedure below.

1. Open the upper front door with key.
2. Rack out the receipt printer by pressing the button and pulling the handle towards you.

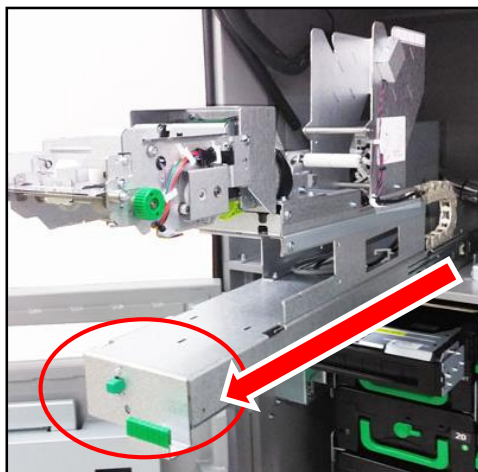

3. Insert the paper axis into the center of receipt roll and mount it onto the charger.
4. Have receipt paper go down the white tension bar as shown in the picture and then pull it forward.

Operation

5. Push the receipt paper inside the supporting bracket, as shown in the picture. Then it will be set automatically if turning on the power



<Note!>


1. Refer to diagram stickers placed on either side of the center section of the thermal printer.



2. A test receipt will print. Remove the test receipt from the printer after it finishes printing.


How to clear jamming in receipt printer

1. Release green lever by moving it to the left (CCW). Listen for a click.

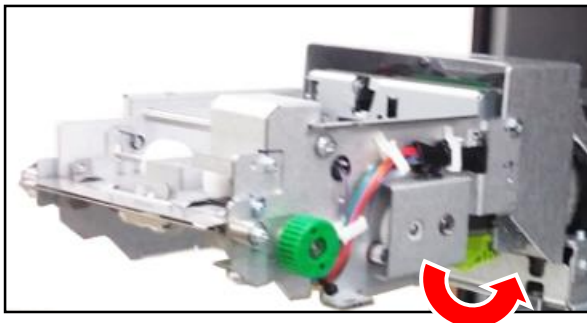


Operation


2. Gently pull paper away from the print head.

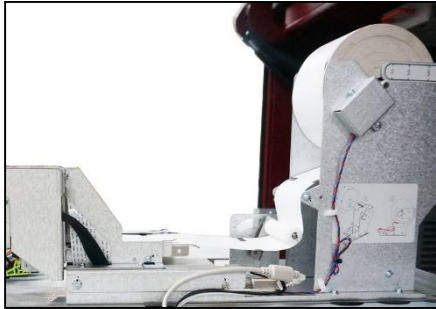

3. Search for jammed paper and carefully remove it. Rotate the green wheel clockwise or counterclockwise to assist in removing jammed paper

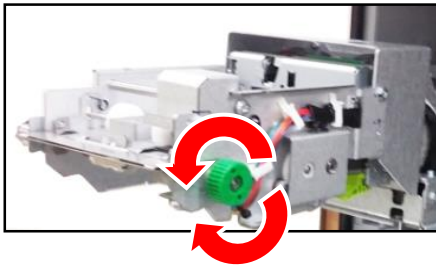

4. Push the green lever to lock it back in place. Listen for a click.

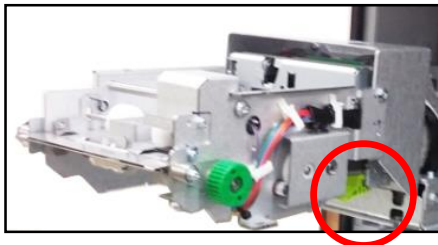

5. Reinsert the paper back into printer. Run diagnostics if necessary.

