

HYOSUNG TNS

Operator Manual

MONiMAX8300D / 8300T System (BRM ver.)

V01.00.00 (2019.12.04)



Revision History

Operator Manual - MX8300D / 8300T System (BRM ver.)

[illegible]

© Hyosung TNS All Rights Reserved.

The content of this specification is protected by copyright laws.

2019. 12. 04. 1st Release

Contents

Chapter1. Preface	1-1
Purpose	1-1
Audience.....	1-1
Support Information	1-1
What is in This Manual	1-1
Terminologies	1-2
Abbreviations.....	1-2
Safety Precautions	1-4
Related Document	1-6
Chapter2. Introduction	1-1
About the MX8300D / 8300T	2-1
Fascia Devices and Access Points.....	2-2
Basic Features.....	2-3
Devices of MX8300D / 8300T	2-6
CE (Control Electronics, PC)	2-6
Customer Display & Keypad.....	2-7
Supervisor Operation (SPL, Teller Display)	2-7
Bill Recycling Machine (BRM).....	2-9
Card Reader.....	2-10
CCIM (Cash & Check Insert Module)	2-11
Receipt Printer	2-13
Chapter3. For the beginning operator	3-1
Opening and Closing the Exterior Door.....	3-1
Accessing the ATM Servicing Screen when the Hood is in the open Position	3-2
Opening and Closing the Vault Door	3-2
Switching Power On/Off	3-3
Switching Power On	3-3
Switching Power Off	3-3
Power Supply Status	3-4
Locking Device – Cencon Lock	3-5
Chapter4. Bill Recycle Machine (BRM60)	4-1
Overview.....	4-1
Bill Conditions	4-2
Acceptable condition	4-2
Unacceptable condition	4-3
How to put bills	4-7
How to check Dip Switch setting	4-7
How to open and close the lower unit	4-9
How to replenish the Recycle Cassette (RC) with bills	4-11
How to remove the bills from reject Deposit cassette (RJDPC)	4-15
How to open and close the upper module (BMU)	4-19
Opening the Upper Module (BMU).....	4-19
Closing the Upper Module (BMU).....	4-20
Opening the Customer Service Module (CSM)	4-21
Closing the Customer Service Module (CSM)	4-22
Opening the Temporary Stacker (TSK)	4-23
Closing the Temporary Stacker (TSK)	4-24
Opening the Rear Transport Path	4-25
Closing the Rear Transport Path	4-25
How to remove bills from RTC (Retract Cassette)	4-26
How to remove the jam.....	4-27
Chapter5. Cash & Check In Module (CCIM17 : UL Type)	5-1
Basic Specification of Check In Module	5-3

Specification of External Appearance	5-4
Cash & Check Conditions.....	5-5
Environmental Condition	5-5
Maintenance Requirement.....	5-5
How to remove jam from each section	5-6
How to setting DIP switch of CCIM Main Board	5-8
The troubleshooting method of CCIM30 includes all modules of CCIM17	5-9
Remove jam from Bundle Module	5-9
Remove jam from the First Transport Path	5-10
Remove jam from BC	5-11
Remove jam from ALG	5-12
Remove jam from Recog Transport Section	5-13
Remove jam from the B2 Upper Transport Path of BM2	5-14
Remove jam from B2 Reject Transport Section	5-15
Remove jam from B3 Transport Section	5-16
Remove jam from Reject Section	5-17
Remove jam from B3 Escrow Transport Section.....	5-18
Remove jam from B4 Transport Section	5-19
Remove jam from Escrow	5-20
Remove jam from RT/A6 Cassette	5-22
Remove jam from Cassette	5-24
How to change PRT Maintenance Module	5-26
How to replace Ink cartridge	5-26
How to reset PRT Cartridge Count	5-27
How to replace Ink Head Cleaner Felt	5-28
Chapter6. Receipt Printer.....	6-1
Overview.....	6-1
Basic Specifications.....	6-1
Paper Handling Precautions.....	6-2
How to load the receipt paper	6-3
How to clear jamming in receipt printer	6-5
Notes	Notes-1

Chapter1. Preface

Purpose

- ▶ This manual is produced to describe how the customers operate Hyosung TNS's MX8300D / 8300T.
This manual details how the customers replenish the notes and paper and how they remove the jam at the MX8300D / 8300T.

Audience

- ▶ Customers and staffs of Hyosung TNS who use and operate the MX8300D / 8300T in each branches of bank.

Support Information

- ▶ If any question or error occurs while operating MX8300D / 8300T in compliance with this manual, please contact maintenance staffs of Hyosung TNS.
For the contact of maintenance staffs of Hyosung TNS, see the E-mail addresses and telephone numbers provided separately.

What is in This Manual

- ▶ MONiMAX referred to as "MX"
- ▶ This manual is designed to provide the operation guide for the MX8300D / 8300T and the detailed description of the following:
 - Replenishing the notes and the receipt paper
 - Emptying the notes and the checks
 - Removing the jam like the notes, the checks and the receipt paper

** The sample pictures used in this manual are for illustration purposes only.*

- ▶ All information described in this manual is a licensed product of Hyosung TNS.

Some of the information in this manual may differ according to the network processor to be connected and may be subsequently updated by the bank's needs or the improvement by Hyosung TNS.

It is the policy of Hyosung TNS to improve products as new technology, components, software, and firmware become available. Therefore Hyosung TNS reserves the right to change specifications without notice.

Terminologies

- In this document the terminology listed below is used as follows:
- Customer and consumer refer to any person who transacts business through the ATM.
 - Device and unit refer to the standard and optional ATM equipment, such as monitor, card reader, printer and dispenser.
 - Fascia refers to the entire front portion of the unit, including the portion where the customer transacts business.
 - Module refers to a plug-in device that can be serviced or replaced.
 - Note(s) and bill(s) refer to the individual documents loaded into and dispensed from the dispenser.
 - Servicing and maintenance refer to the supervisor, operator and technician's tasks performed to keep the ATM operational.
 - Screen refers to the text appearing on the customer display.

Abbreviations

- In this document the abbreviations listed below is used as follows:

#	Abbreviations	Description
1	AD board	Analog to Digital conversion board
2	ADA	The American Disabilities Act
3	AP	Application Program
4	Assy	Assembly
5	BRM	Bill Recycle Module
5-1	BC	Bill Checker
5-2	BMD	Body Module-Down (Lower Body of the Module)
5-3	BMU	Body Module-Up (Upper Body of the Module)
5-4	CSM	Customer Service Module
5-5	DPC	Deposit Cassette
5-6	RC	Recycle Cassette
5-7	RJC	Reject Cassette
5-8	TE	Tape Escrow
5-9	UTC	Utility Cassette
6	BATT S/W	Battery Switch
7	CAM	Camera Unit
8	CE	Control Electronics
9	CCIM	Cash & Check In Module
10	CCR	Contactless Card Reader
11	CDU	Cash Dispenser Unit
12	Earphone Jack	Voice Converter for Visually Disabled Persons (ADA)

#	Abbreviations	Description
13	EMV	Europay, Mastercard, Visa
14	EP	Elementary Program
15	EPP	Encryption PIN Pad
16	H/W	Hardware
17	I/F	Interface
18	ISO	International Standard Organization
19	JPR	Journal Printer
20	LCD	Liquid Crystal Display
21	MCU	Magnetic Card Unit
22	OPL	Operation Panel for Customers to Operate
23	OSD board	On Screen Display Board
24	P/S	Power Supply
25	PIN	Personal Identification Number
26	PNC	Panel Control Board
27	PTR	Printer (mainly Receipt Printer)
28	S/W	Switch
29	SIU	Sensor and Indications Unit
30	SP	Service Provider
31	SPR	Slip Printer (Receipt Printer)
32	TTU	Text Terminal Unit (OPL or SPL)
33	VFD	Vacuum Fluorescent Display

Safety Precautions

► Common Safety Precaution



Safety Precautions in outlined this manual provide information on safe and proper handling of the product. Non-compliance of the safety precautions may result in injury or damage to the product. This precaution symbol with sample term tells you safety warnings during equipment handlings.

► Please read the following instructions before operating equipment.

- Operate equipment in the order outlined in this manual.
- Follow precautions indicated in this manual, as well as the equipment itself.
Failure to properly address these precautions may lead to injury or damage to the product.
- Avoid operations not addressed in this manual.
- If you cannot remedy system problems using the methods outlined in this manual, please refer to contact information listed in the manual.
- Any change or modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.








<Note!>

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

► CAUTION

1. To reduce the risk of fire, use only No. 26 AWG OR LARGER Telecommunication cord
2. Risk of explosion if battery is replaced by an incorrect type.
Dispose used batteries according to the instructions.
3. For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible. (Pour les équipements enfichables, la prise de courant doit être installée à proximité de l'équipement et doit être facilement accessible.)
4. The equipment is to be secured to the building structure before operation
5. A security container shall be permitted to optionally be provided with a secondary lock, but improper use of the secondary lock feature will reduce the security level of the ATM.

► Description of Precaution Symbols

Symbol	Description
	Electrical Shock Warning <ul style="list-style-type: none"> ▪ Do not remove cover. Only a maintenance engineer is allowed to open the cover. ▪ Do not touch. You may receive electric shock. ▪ Make sure to turn off the power when servicing the equipment.
	High Temperature Warning <ul style="list-style-type: none"> ▪ Do not touch the equipment when it is running. ▪ The equipment can get extremely hot and may cause a burn. ▪ Make sure to close the cover before running the equipment.
	Use Precaution when Moving <ul style="list-style-type: none"> ▪ The equipment is heavy. Make sure at least 2 people lift or move the equipment. ▪ Do not attempt to move the equipment alone. You may be injured from dropping the heavy equipment.
	Fire Hazard <ul style="list-style-type: none"> ▪ Place the equipment in an area away from any combustible materials. ▪ The equipment may catch on fire from overheating or short circuit of the power supply unit.
	Disassembly Warnings <ul style="list-style-type: none"> ▪ Do not disassemble or modify the equipment unless you are a certified engineer. ▪ Contact the service center for maintenance, adjustments and repairs. ▪ Improper disassembly may cause fire or electrical shock.
	Collapse Precautions <ul style="list-style-type: none"> ▪ Do not place the equipment where the floor cannot sustain the weight of the equipment, or on slanted or unstable surface. ▪ Equipment may fall and cause injury or damage.
	Unplug the Equipment <ul style="list-style-type: none"> ▪ Stop using the equipment immediately if it smokes, emits an unusual smell, makes abnormal sounds, or if liquids or other foreign materials enter the equipment. ▪ If the above-mentioned abnormalities occur, immediately turn off the power, unplug the equipment and contact the service center. ▪ If you ignore these symptoms, the equipment may catch on fire or cause electric shock.

Related Document

- ▶ The related documents are listed as follows. If needed, please contact staffs of our technical support team and maintenance team.

- Installation Manual
- Service Manual
- VDM Manual
- Error Code Manual
- OP Function Manual

For the contact of maintenance staffs of Hyosung TNS, see the E-mail addresses and telephone numbers provided separately.

Chapter2. Introduction

About the MX8300D / 8300T

- ▶ The MX8300D / 8300T is a full service ATM. Cardholders and/or customers deposit and withdraw the cash and receive the transaction records with MX8300D / 8300T ATM.
The MX8300D / 8300T is a versatile, easily maintained delivery system that can be modified to keep pace with the bank's changing needs.

- ▶ The benefits that the new concept MX8300D / 8300T provides are as follows.

Removes inconvenience which occurs when bank clerks directly handle cash with customers and relieves workload upon tellers by processing withdrawal of cash automatically.

Allows tellers to calculate and close amount faster than the existing manual calculation.


Allows easy and quick installation and maintenance.

<Note!>

The figures/photos/diagrams in this manual are for well understanding therefore they may be different from real machines.

Fascia Devices and Access Points

- ▶ The fascia provides the interface between the customer and MX8300D / 8300T.
The customer selects transactions and requests information at the fascia.
The fascia includes the following features and interfaces (all features might not be included in your system):

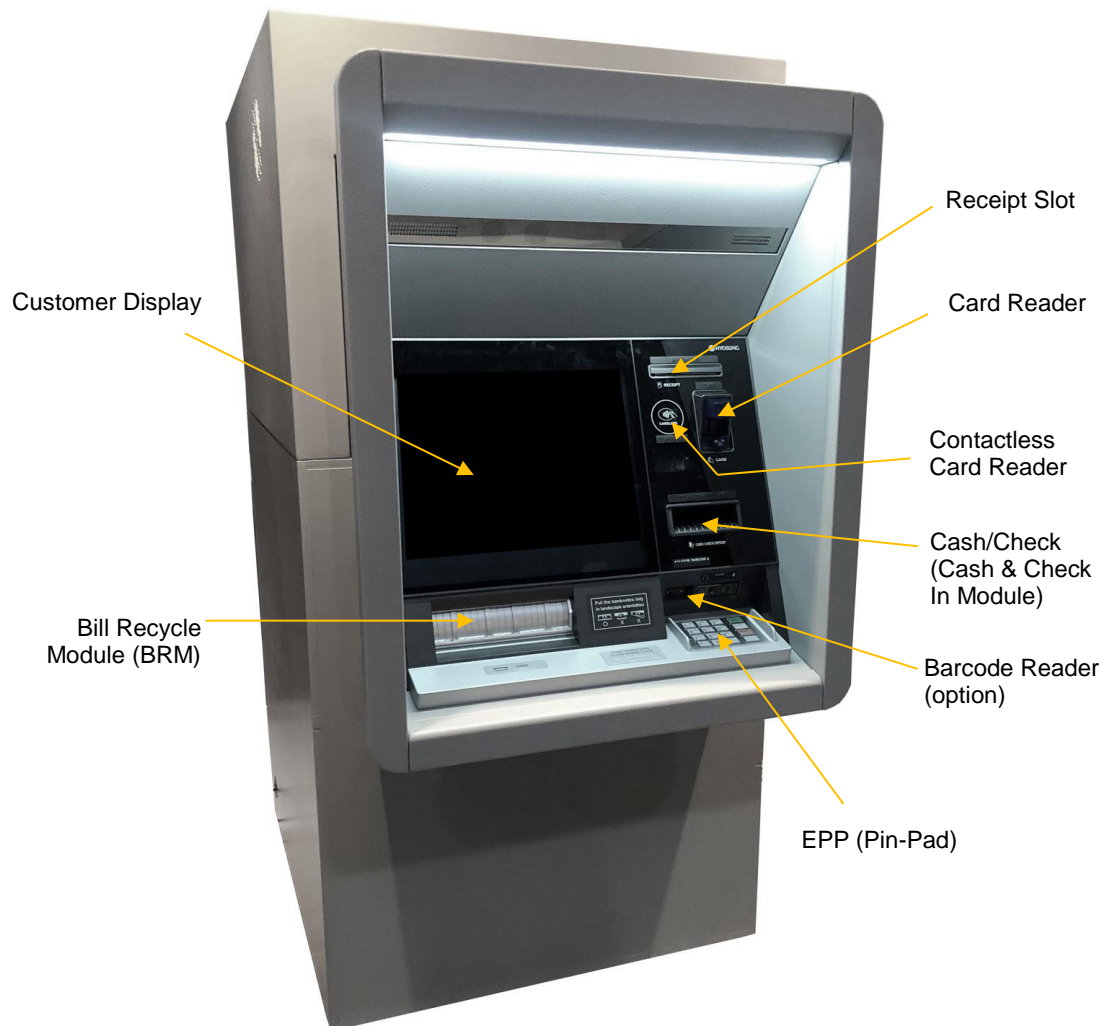


※ Please note that this is a picture of MX8300T. The MX8300D includes same parts at the similar position. (The difference of MX8300T and 8300D is an angle of the front panel.)

Basic Features

► Important features of the MX8300D / 8300T (BRM ver.) is highlighted in the following list:

<Note!>

1. Your MX8300D / 8300T may not contain all the devices described in this section. Some devices are optional and some devices cannot be used in combination with other devices (mutually exclusive combinations).
2. Option : 

Item			Specification				Remarks (Option)
Main Controller (ASROCK Q87) vPRO Support	CPU		Intel Core i5-4590s 3.0 GHz				
	Memory	DDR Memory	8GB				DDR3 12800S SODIMM
	Storage Device	SSD	512 GB				mSATA
		ODD	None				
	Operating System		Windows 7				
	Expansion Slots		PCIe x1				
	Serial Ports		None				(1 Port)
	USB Ports	USB 3.0	4 Ports (Main Board)				Additional USB2.0 7P HUB USB2.0 4P HUB
		USB 2.0	11 Ports(4 HUB x 1 + 7 HUB x 1)				
	VGA	Onboard	On-Board HDMI, DVI				Intel® HD Graphics
Resolution			Max 4096 x 2160 24Hz				
LAN		10/100/1000Mbps On-Board					
Customer Display	Display	Type	19" TFT LCD				
		Brightness	1,500 cd/m ² (Sun-Light Viewable)				
		Resolution	1280 X RGB X 1024				
	Privacy Filter		19" Privacy pad				Viewing Angle 60°
	Guide Light	Flicker	. BRM/SPR/CCIM/MCU/RF(Blue) . BRM Normal LED(White) . BRM Abnormal LED(Red)				
Customer Input Method	Pin-Pad		EPP(PCI 3.0 Compliant)				Polycarbonate
	Touch Screen		P-CAP Touch Screen				
Supervisor Operation	Display	Type	10.1" TFT LCD				①15" Option
		Brightness	350cd/m ²				
		Resolution	1024 X RGB X 768				
	Input Method		Resistive Touch Screen				
Bill Recycle Module (BRM60)	Interface Type		USB 1.1(Main) , USB 2.0(BC)				
	BCU Type		BCU 5X				
	Sutter type		Automatic Shutter(Present Type)				1 Slot
	Functional Architecture		4 RC/ 1 RJC/ 1 RTC / 1DPC				
	CST locking		Common key				
	Dispense/Deposit capacity		Max 100 bills per Transaction				
	Dispense/Deposit method		Bundle				
	Cassette Denomination		CST	Denomi- -nation	Setting	Label	
			A	\$ 20	Recycle	RC	
B			\$ 20				

			C	\$ 50			0.1mm thick when it bills
			D	\$ 100			
	Cassette	Install Max(RC)	Reflux 8,800 ~ 10,000 bills				
			Non-Reflux 10,000 ~ 11,800 bills				
		Dispense CST	Reflux 2,200 ~ 2,500 per Cassette				
			Non-Reflux 2,500 ~ 2,950 per Cassette				
		Reject CST	300 Bills				
		Retract CST	100 Bills				
Deposit CST	2,000 Bills						
Cash & Check In Module (CCIM17)	Media Size	Width	Min : 60 mm (2.36 inch) Max : 96 mm (3,78 inch)			Available option Max 102 mm (4.01 inch)	
		Length	Min : 110 mm (4.33 inch) Max : 230 mm (9.055 inch)				
		Thickness	Min : 0.0762 mm (0.003 inch) Max : 0.203 mm (0.0079 inch)			STANDARD : 0.11 mm	
	Bundle Capacity		Max 50 Mixed Notes and Checks /1 transaction			One Single Deposit Slot	
	Deposit Direction		4 way				
	Capacity	Deposit Cassettes	About 2,000 notes/1 cassette About 2,000 checks/1 cassette			Criteria for Deposit New Notes & Checks	
		Retract Cassettes	Max 50 Mixed Notes and Checks				
		Article6 Cassettes	Max 10 Mixed Notes and Checks				
		Escrow	Max 50 Mixed Notes and Checks /1 transaction				
	Capacity	Deposit Reject	Max 50 Mixed Notes and Checks /1 transaction				
	Processing Time	Deposit Time	1 Note:1 Seconds, 1 Check:1.2 Seconds				
		Deposit Time	8 Notes & 2 Checks : Less than 20 Seconds				
	Processing Time	Deposit Time	25 Notes & 25 Checks : : Less than 60 Seconds				
		Storage Time	1 Sheet : - Seconds				
			10 Sheets : - Seconds				
	50 Sheets : - Seconds						
	Image scanning		Double side scanning			200 dpi	
	MICR		CMC-7, E13-B				
	Endorsement Print		One side printing, Ink jet				
	Shutter Type		Automatic Shutter				
Card Reader (SANKYO)	Type		EMV Support DIP Type				
	Magnetic Stripe		ISO 1,2 Read				
	IC card Support		Support				
	Security		① Anti-Skimming None			①Anti-Skimming Option	
Receipt Printer (K-SPR8)	Printing Type		Thermal Line Printing				
	Printing Width		80mm Max				
	Paper Specification	Type	Thermal Roll Paper				
		Width	Max. 80mm				

	Outer Diameter	Max. 210Φ	
	Paper Roll Capacity	5,000 Transaction/Roll	Depends on Format
	Black Mark Paper Support	None	Black Mark Paper Option
Contactless Card Reader (IDTECH-KIOSK III)	Audio guidance	Beeper	
	Transaction Interface	ISO/IEC 14443 Type A and B, ISO 18092, ISO 21481 (PCD & NFC)	
	Payment Applications	American Express ExpressPay 3.0, Discover DPAS 1.0, Interac Flash v1.5, MasterCard PayPass/MChip 3.0.2, Visa VCPS 2.1.3 - MSD, qVSDC and IRWIN, Mifare, Apple Pay & other Mobile Wallets	
JPR	Journal Printer	Electronic Journal	Dot JPR/ T-JPR Option
Power Supply (HPS600-ATMB)	600W Power	AC 100-127V ±10% / 10.0A, AC 200-240V ±10% / 6.0A	
Additional function	Audio guidance	Sound Card On-Board	
	ADA Audio guidance	Available(/w Earphone jack cover/plug)	
	Video Banking Device	None	Option:Web Camera & Mic
	Barcode Device	None	①Option:1D/2D BCR
Safety & Security	Safety	UL 291 Level-1(Rear Access)	
	Locking device	Cencon Lock	
	Key Lock	Common Key	
	Alarm	NH_VT Alarm(Seismic & Heat)	
	Security	Terminal Block (External I/F)	
	Camera	CCD Camera 1 nd (FACE) CCD Camera 2 nd (hand)	IP-Camera 1 st (face)
	Camera I/F	Video Port /w Pig Tail for internal Cam Video Power /w Pig Tail for Cam	
Dimension & Environment	Dimension (H X W X D)	About 1506 x 775 x 1219	10" Wall (8.5"&13"&15" Wall Option)
	Install Method	Anchor	
	Weight	About 840 Kg(1,851 lbs)	
	Battery	System Battery	
	Heater	1 Heater(Safety Body)	

Devices of MX8300D / 8300T

CE (Control Electronics, PC)

- The Control Electronics mainly consist of a motherboard, HDD, DVD-RW, multiple serial card, and so on.
Basic functions of the control electronics used in this ATM is similar to that of a personal computer you may have in your office or home with exception of a multiple USB HUB used to communicate with several devices such as a cash dispenser, card reader, receipt printer and EPP.

Basic Specification & Sample Picture

Item		Specification		Remarks
CPU		Intel Core i5-4590s 3.0 GHz		
Memory	DDR Memory	8GB		DDR3 12800S SODIMM
Storage Device	SSD	512 GB		mSATA
	ODD	None		
Operating System		Windows 7		
Expansion Slots		PCIe x1		
Serial Ports		None		(1 Port)
USB Ports	USB 3.0	4 Ports (Main Board)		Additional USB2.0 7P HUB USB2.0 4P HUB
	USB 2.0	11 Ports(4 HUB x 1 + 7 HUB x 1)		
VGA	Onboard	On-Board HDMI, DVI		Intel® HD Graphics
		Resolution	Max 4096 x 2160 24Hz	
LAN		10/100/1000Mbps On-Board		




Customer Display & Keypad

- The customer display welcomes the customer and provides instructions for performing transactions at the ATM. During the transaction sequence, the ATM prompts the customer to use the customer keypad to enter transaction information. The 16-key keypad uses a security module and encryption PIN pad technology to secure the information entered by the customer at the keypad. The optional function keypads are made up of four keys mounted on each side of the customer display. The customer selects from the choices shown on the consumer display and presses the corresponding function key.

Basic Specification & Sample Picture


Item			Specification	Remarks
Customer Display	Display	Type	19" TFT LCD	
		Brightness	1,500 cd/m ² (Sun-Light Viewable)	
		Resolution	1280 X RGB X 1024	
	Privacy Filter		19" Privacy pad	Viewing Angle 60°
	Guide Light	Flicker	. BRM/SPR/CCIM/MCU/RF (Blue) . BRM Normal LED(White) . BRM Abnormal LED(Red)	
Customer Input Method	Pin-Pad		EPP(PCI 3.0 Compliant)	Polycarbonate
	Touch Screen		P-CAP Touch Screen	

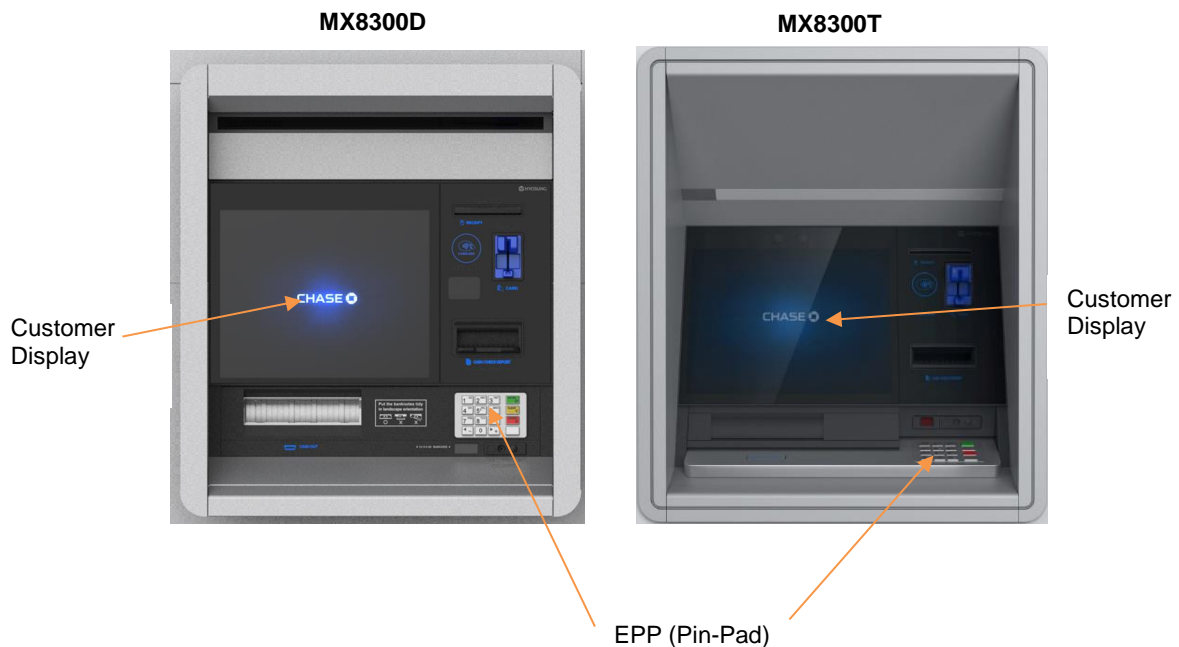

Supervisor Operation (SPL, Teller Display)


► Basic Specification & Sample Picture

Item		Specification	Remarks
Display	Type	10.1" TFT LCD	① 15" Option
	Brightness	350cd/m ²	
	Resolution	1024XRGBX768	
Input Method		Resistive Touch Screen	

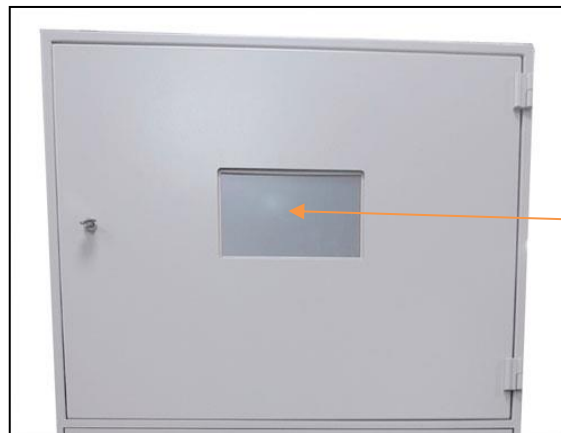

Supervisor Operation
(SPL, Teller Display)

* Option: 15" LCD

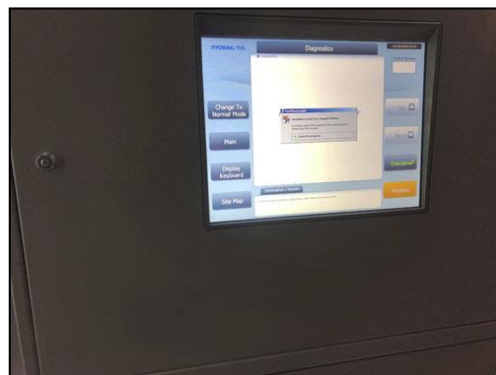


Bill Recycling Machine (BRM)

- The idea of recycling is to make the cash that is paid in during deposit transactions available again for dispensing. This considerably lengthens the replenishment or emptying cycles on cash-in/cash-out systems and, at the same time, the cash holding per system can be reduced.

Basic Specification & Sample Picture

Item		Specification				Remarks
Interface Type		USB 1.1(Main) , USB 2.0(BC)				
BCU Type		BCU 5X				
Sutter type		Automatic Shutter(Present Type)				1 Slot
Functional Architecture		4 RC/ 1 RJC/ 1 RTC / 1DPC				
CST locking		Common key				
Dispense/Deposit capacity		Max 100 bills per Transaction				
Dispense/Deposit method		Bundle				
Cassette Denomination		CST	Denomination	Setting	Label	
		A	\$ 20	Recycle	RC	
		B	\$ 20			
		C	\$ 50			
		D	\$ 100			
Cassette	Install Max(RC)	Reflux 8,800 ~ 10,000 bills				0.1mm thick when it bills
		Non-Reflux 10,000 ~ 11,800 bills				
	Dispense CST	Reflux 2,200 ~ 2,500 per Cassette				
		Non-Reflux 2,500 ~ 2,950 per Cassette				
	Reject CST	300 Bills				
	Retract CST	100 Bills				
	Deposit CST	2,000 Bills				

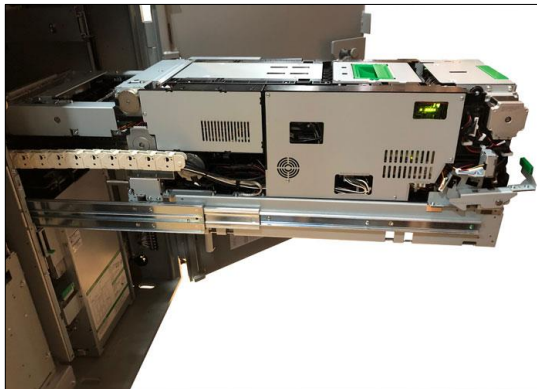


Card Reader

- The dip card reader is a manually operated device mounted directly to ATM fascia. The customer inserts an ATM card in the card entry slot and then removes the card to begin the transaction. The dip card reader can read magnetic stripe cards and memory chip cards. The dip card reader cannot retract, capture, or retain cards.

Basic Specification & Sample Picture

Item	Specification	Remarks
Type	EMV Support DIP Type	
Magnetic Stripe	ISO 1,2 Read	
IC card Support	Support	
Security	None	① Anti-Skimming Option

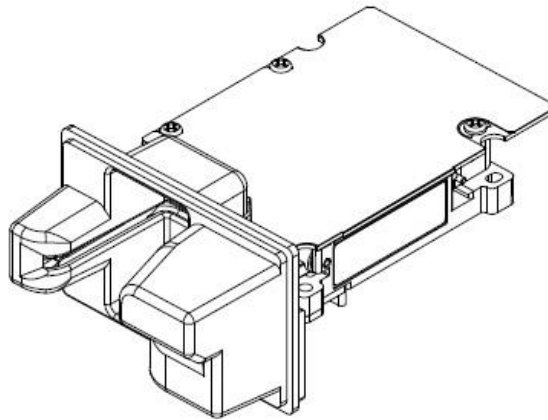


CCIM (Cash & Check Insert Module)

- The Cash & Check in Module is designed to be integrated in automated teller machines and full-function self-service terminals. It enables cash deposit and automated check handling. Banknotes and checks deposited by the customer are stored in cassettes. The type of document for each cassette is defined on the basis of the bank's application.

Basic Specification & Sample Picture

Item		Specification	Remarks
Media Size	Width	Min : 60 mm (2.36 inch) Max : 96 mm (3,78 inch)	Available option Max 102 mm (4.01 inch)
	Length	Min : 110 mm (4.33 inch) Max : 230 mm (9.055 inch)	
	Thickness	Min : 0.0762 mm (0.003 inch) Max : 0.203 mm (0.0079 inch)	STANDARD : 0.11 mm
Bundle Capacity		Max 50 Mixed Notes and Checks /1 transaction	One Single Deposit Slot
Deposit Direction		4 way	
Capacity	Deposit Cassettes	About 2,000 notes/1 cassette About 2,000 checks/1 cassette	Criteria for Deposit New Notes & Checks
	Retract Cassettes	Max 50 Mixed Notes and Checks	
	Article6 Cassettes	Max 10 Mixed Notes and Checks	
	Escrow	Max 50 Mixed Notes and Checks /1 transaction	
Capacity	Deposit Reject	Max 50 Mixed Notes and Checks /1 transaction	
Processing Time	Deposit Time	1 Note:1 Seconds, 1 Check:1.2 Seconds	
	Deposit Time	8 Notes & 2 Checks : Less than 20 Seconds	
Processing Time	Deposit Time	25 Notes & 25 Checks : : Less than 60 Seconds	
	Storage Time	1 Sheet : - Seconds	
		10 Sheets : - Seconds	
		50 Sheets : - Seconds	
Image scanning		Double side scanning	200 dpi
MICR		CMC-7, E13-B	
Endorsement Print		One side printing, Ink jet	
Shutter Type		Automatic Shutter	

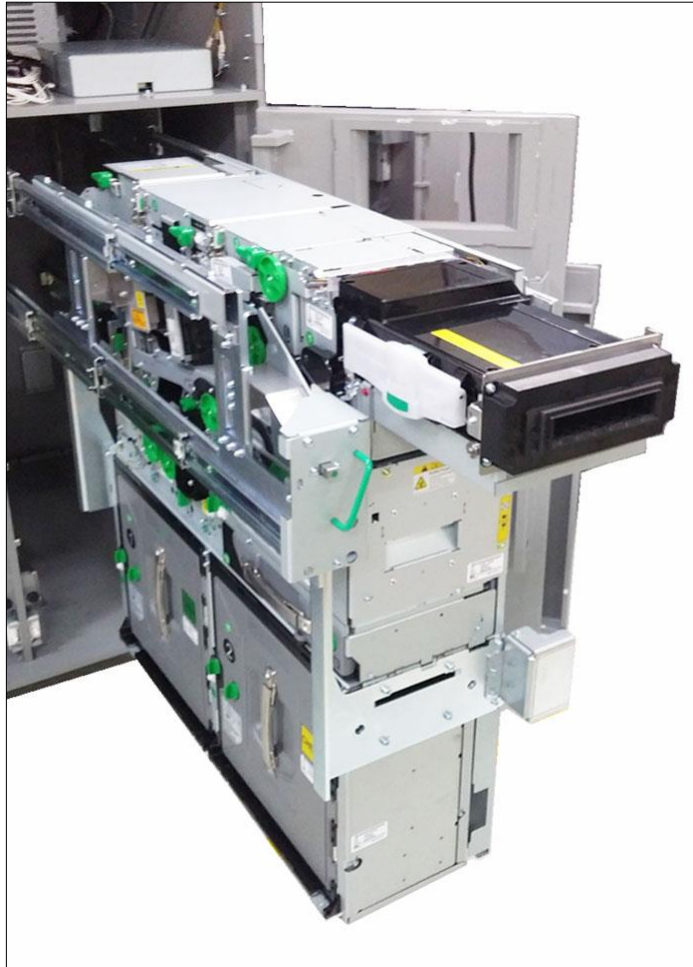


CCIM

Receipt Printer

- The receipt printer provides a printed receipt of the customer's transaction. The transaction information can include the customer's name, the amount of withdrawals, deposits or transfers, the ATM number and location, and other desired information. After the consumer uses the ATM, a printed record of the transaction information is presented through the appropriate printer slot.

Basic Specification & Sample Picture

Item		Specification	Remarks
Printing Type		Thermal Line Printing	
Printing Width		80mm Max	
Paper Specification	Type	Thermal Roll Paper	
	Width	Max. 80mm	
	Outer Diameter	Max. 210Φ	
Paper Roll Capacity		5,000 Transaction/Roll	Depends on Format
Black Mark Paper Support		None	Black Mark Paper Option

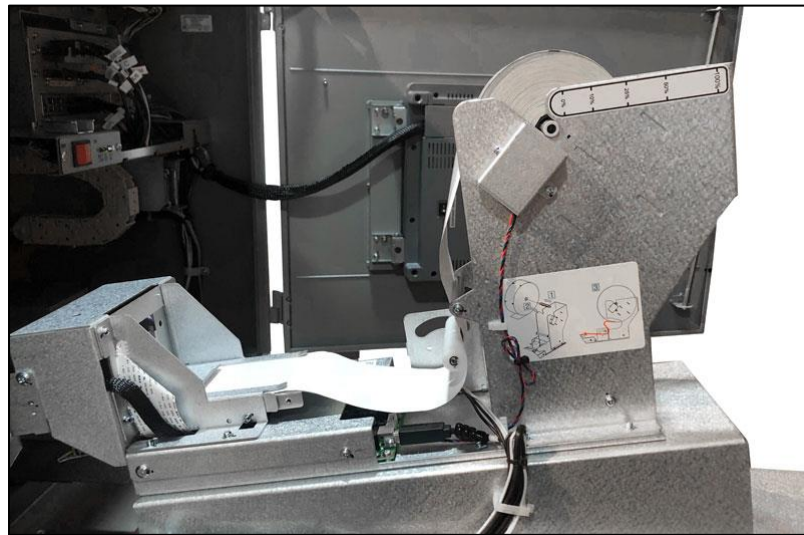

Chapter3. For the beginning operator

Opening and Closing the Exterior Door

- ▶ Opening the rear door of upper section using key


1. Open the rear door using key.



2. To access the receipt printer, press the green button and pull the handle towards you as the picture below.




- ▶ To close the door, push in the door bracket (1). Then close the door and lock to secure it.

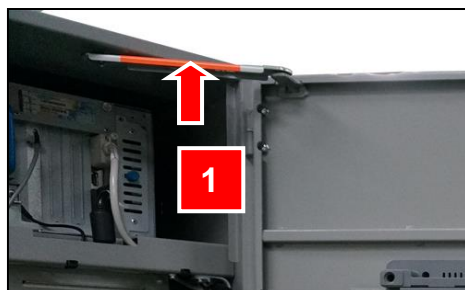

Accessing the ATM Servicing Screen when the Hood is in the open Position

- ▶ To open, press the button (1) and pull the handle of (2) toward you.

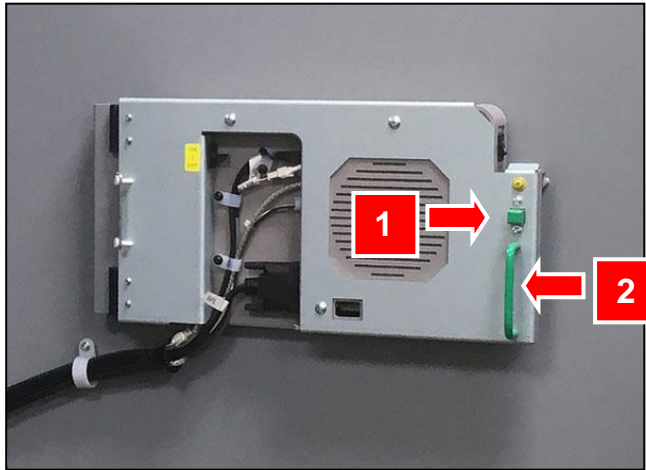

- ▶ To close, swing the panel back in the original, closed position.

Opening and Closing the Vault Door

- ▶ Opening and Closing the Vault Door
 1. Enter the combination on the KABA-MAS lock (Refer to the section of “Locking Device – Cencon Lock”). Then turn the vault door handle to open.




Switching Power On/Off


Switching Power On

- ▶ The power supply unit converts AC power to DC power and provides the voltage to various modules within the system. The power supply unit allows the user to turn on/off the system, enter power-failure mode, and perform other sequences.

1. The system turning-on process is as follows
2. Open the rear door.
3. Press the standby switch to "ON" side (1) (Main power switch should be "ON" (2)).
4. The system will be turn on automatically.

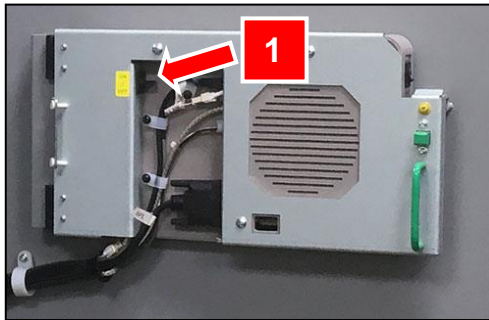

* Option: 15" LCD

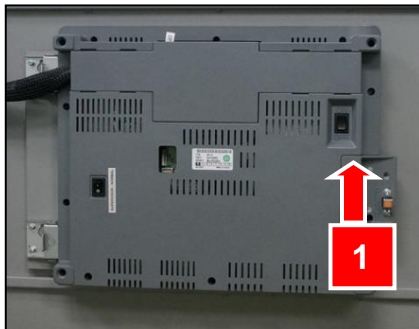

Switching Power Off

- ▶ The system turning-off process is as follows
 1. Press the standby switch to "OFF" side for 1 second.
 2. The system will be shut down automatically.
 3. The operating system will shut down then power will turn off.

WARNING:

Do **NOT** operate Main Switch when you would like to turn off the power.
It may cause damage to operate system or destabilize control electronics in ATM.

Power Supply Status

► LED and Switch Functions

- [AC IN]: Turned on upon AC power supply.
- [DC OUT]: Turned on upon DC power supply.
- [BATT LOW]: Turned on when the battery voltage is 21V or less or when the battery cable is not connected.
- [MAIN S/W]: Supplies or stops AC power.
- [STAND-BY S/W]: Turns on/off the system.

► Switch Status

- [Main S/W] is pressed on "ON" position
AC power is being supplied to the power supply unit, and only [AC IN] LED is turned on.
- [Main S/W] is pressed on "OFF" position
AC power is not supplied to the power supply unit and all status LEDs are turned off.
- [STAND-BY S/W] is pressed on "ON" position
The system is turned on and [AC IN] and [DC OUT] LEDs are turned on.
- [STAND-BY S/W] is pressed "OFF" position
<System Off> procedure starts and only [AC IN] LED is turned on.
- In case power failure occurs during normal system operation, the system will enter <Power Failure Mode> and only [DC OUT] will be turned off.

Locking Device – Cencon Lock

► Opening/Closing the Security Enclosure

Security Door with Cencon

The Cencon lock is highly-secured, advanced-design lock. Even though the lock is electromechanical, they require no wiring or batteries for opening the lock because they are self-powered. Power is generated by turning the dial knob on the lock to the left (counter-clockwise). After several turns of the knob, enough power is generated to allow the microprocessor in the lock to function.

Opening and closing the Security Door

Each Cencon Lock is shipped from the factory in Shelved Mode. The One Time Combination feature which requires a Smart Key is not available when the lock is shelved. Instead, the Shelved Mode combination is used to open the lock without any Smart Key. The default Factory Combination is set to 50-25-50. Practice opening the lock in shelved mode with the default factory combination until you are comfortable with its operation. The default combination may be changed, in which case the new combination would be used to open the lock while in Shelved Mode. The correct opening procedure for a shelved lock in:

1. Turn the dial to the left (CCW), using full wrist turns, until the letters "EC" (Enter Combination) appear on the LCD.



<Note!>

If you are operating a Cencon lock and **-dL** appears on the display during an operation, it indicates that you should **dial Left** (Counter Clockwise). The purpose is both to give the lock additional power and to ensure the lock bolt is fully extended.

CW = Clockwise; CCW = Counter Clockwise

2. Enter the factory combination of 50-25-50 by sequentially pressing those six buttons. The LCD will display the entered number.



3. When the combination has been correctly entered, the LCD will read "OPr" meaning "Open right."



4. Turn the dial right (CW) until it stops. The lock's bolt is now retracted and the lock is open.



5. Turn the handle to the left and open the security door.



7. Turn the dial a minimum of one complete rotation to the left (CCW) to extent the bolt.



<Note!>

After opening and closing any lock, you should always check to ensure that the lock is physically relocked (i.e., bolt fully extended and locked in place) by turning the dial to the right. If the bolt does not retract, you can be assured the lock is secured.

Helpful Hint:

At any point while entering the combination during an opening sequence, if you notice that an incorrect number was pressed on the keypad, you may clear the entire operation and start again by pressing the star (*) key. This allows you to return to the EC prompt without getting a wrong try error (lightning bolt).

Caution - Lock Out (LCO):

When the combination is incorrectly entered, a lightning bolt error will flash on the display (with no other numbers following it). To clear this error and start again, press and hold the star (*) key. Even in Shelved Mode, it is important to avoid getting 5 wrong combination attempts in a row without a successful opening in between because the lock will be put into Lock-Out condition, displaying, "LCO." Clearing the LCO condition in Shelved Mode requires waiting 5 minutes and then entering the correct combination.

► Changing Shelved Mode Combination

For Cencon Locks with a code level of 71¹, or greater, you may change the Shelved Mode combination. You may change the default Factory Combination of 50-25-50 to a new combination to be used while the lock is still in Shelved Mode. Once you have changed the combination for the first time, you may want to change the combination again to a different Shelved Mode combination. You can even change it back to the Factory combination of 50-25-50.

This is an option that is only available while the lock is in Shelved Mode and is intended only for temporary use after the ATM is deployed but before the lock is activated. It is not recommended to keep the Cencon lock in this Shelved Mode condition, due to lack of security and control.

Required Items:

Change Key, Current Shelved Mode Combination

<Note!>

You can only change the Shelved Mode combination while operating in Shelved Mode. Once a lock is "activated" in any mode, the Shelved Mode combination returns to the Factory Default of 50-25-50

¹ It is sometimes necessary to determine the level of the Cencon Lock with which you are working. This can be done by entering a command via the keypad. The lock level will then be displayed on the LCD. Use the following procedure:




- 1) Power the lock by turning the dial to the left (counter clockwise) until EC is displayed.
- 2) Enter the # 1 keypad command. Then the lock displays a string of characters on the LCD, displaying two characters at a time. The best thing to do in analyzing the lock level is to write down the entire string and then pick out the portions of it that are significant to you, or if you are experiencing a problem with the lock, report the entire string to the Tech Support group.

To change the Shelved Mode Combination:

1. Power Lock → EC
Turn the Dial to the left (CCW) until "EC" (Enter Combination) is displayed.
2. EC → Enter Shelved Mode Combination → OPr
Enter the current Shelved Mode combination (either 50-25-50 or a changed Shelved Mode combination) by sequentially pressing those digits on the lock keypad. The numbers will be displayed on the LCD as they are entered. When the combination has been correctly entered, the LCD will read **OPr**, meaning "OPen right."
3. OPr → Retract Bolt
Turn the Dial to the right (CW) to retract the bolt
4. Open Door
5. Insert Change Key
Insert the change key into the change key socket on the back of the lock.

WARNING:**Do not close the door.**

Leave the door open during this process until you are comfortable opening the lock with the new combination.

6. Extend Bolt
Turn the Dial to the left (CCW) to extend the bolt.
7. Power Lock → 
Turn the dial to the left (CCW) until  (the Change Key symbol along with Enter Combination) is displayed.
8.  → Press #8 → EcF
Press the "#" button followed by the "8" button. EcF (Enter current Factory combination) will be displayed
9. EcF → Enter Current Shelved Mode Combination → EnF
Enter the current shelved mode combination, "EnF" (Enter new Factory combination) will be displayed.
10. EnF → Enter New Combination → Cnf
Select and enter the new combination. "CnF" (confirm new Factory combination) will be displayed
11. Cnf → Enter New Combination → POC
Enter new combination again to confirm. POC (Pull Out Change key) will be displayed.

WARNING:

Record the new combination and store it in a secure place. If this combination is lost or forgotten, there is no alternate way to open the lock.

12. POC → Remove Change Key → EOP

Remove the change key. EOP (End Operation) is displayed.

13. EOP → Power Lock → EC

Turn the dial to the left (CCW) until EC (Enter Combination) is displayed.

14. EC → Enter New Shelved Mode Combination → OPr

Enter the new shelved mode combination by pressing those digits on the lock's keypad.

The numbers will be displayed on the LCD as they are entered. When the combination has been correctly entered, the LCD will read OPr, meaning "**OP**en right."

15. OPr → Retract Bolt

Turn the Dial to the right (CW) to retract the bolt.

16. Close Door


17. Extend Bolt

Turn the Dial to the left (CCW) to extend the bolt.

Chapter4. Bill Recycle Machine (BRM60)

Overview

► Block Diagram

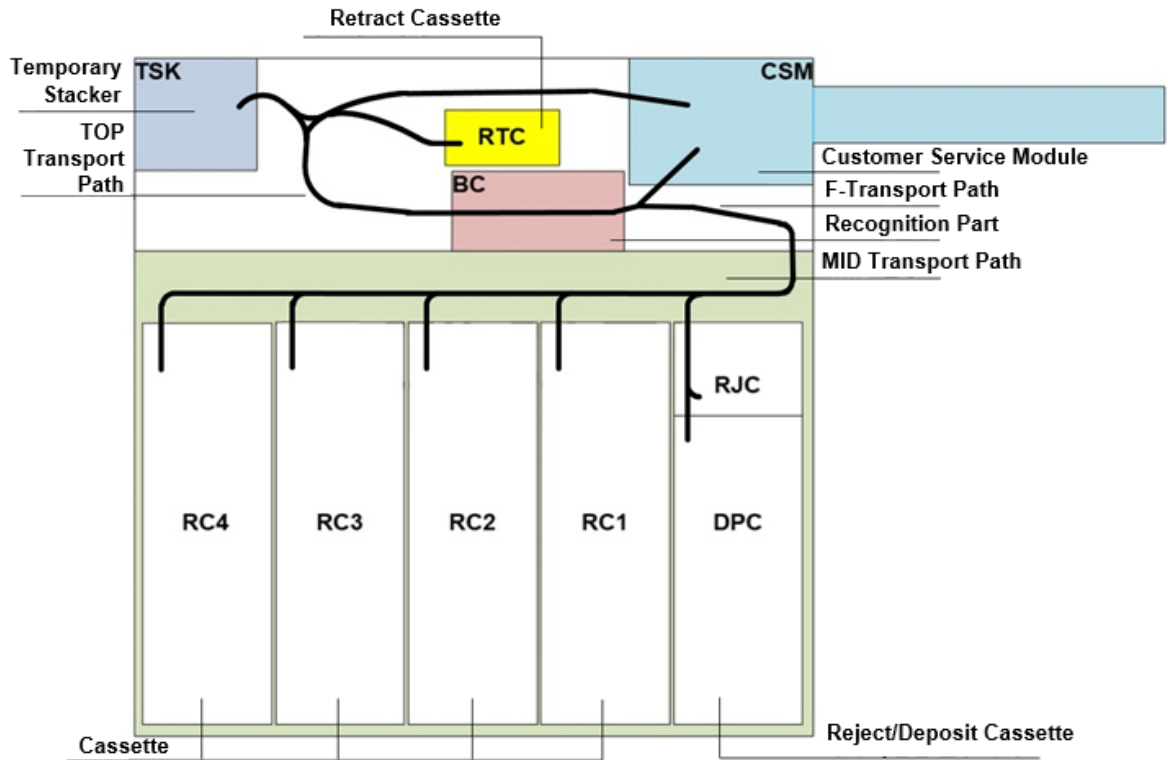

Bill Conditions

Acceptable condition


- ▶ 1. Bill which is very clean and can readily be recognized as a true bill



- 2. Bill has sufficient life or sizing to be handled easily




- 3. Bill which can be manually held straightly when one end is held by a hand and the bill is slightly curved vertically.

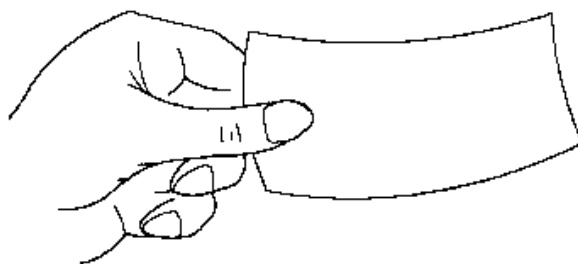


Unacceptable condition

- ▶ 1. Bill with serious wrinkles, torn or broken section wherein paper fiber is broken and separation begins.


- Wrinkle

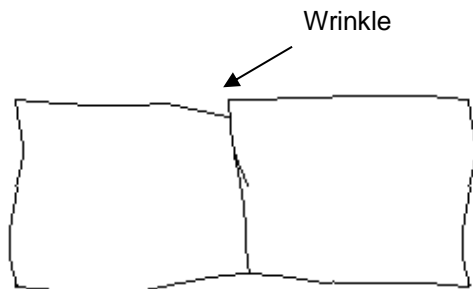


- Torn

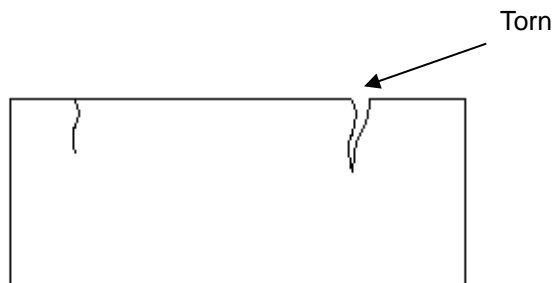


- Broken section

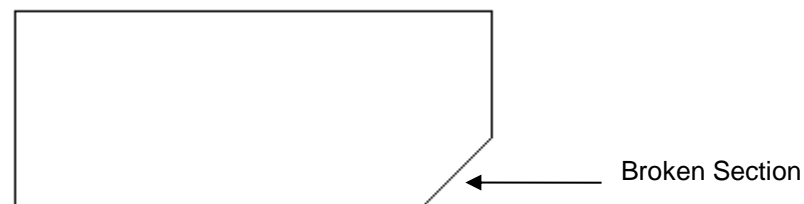


2. Bill having adequate life or sizing, but stained seriously

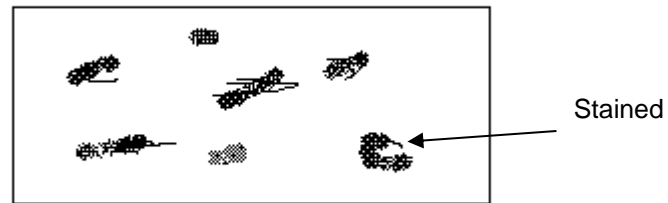

3. Bill with holes (Perforated bill)

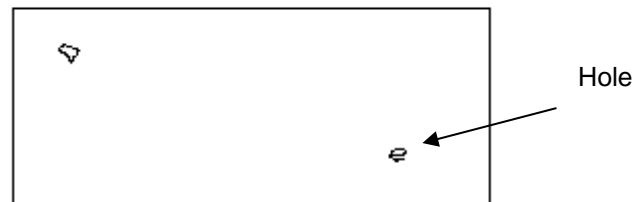


4. Bill ragged and cannot be held straightly when one end is supported by a hand

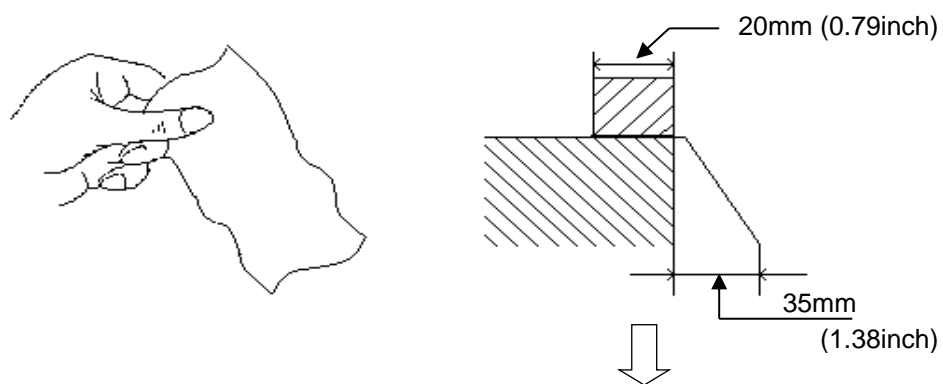


When the bill is held by 20mm (0.79inch) and the straightness of the bill is 35mm (1.38inch) or less, it cannot be used


5. Bill with cellophane tape, scotch tape, etc

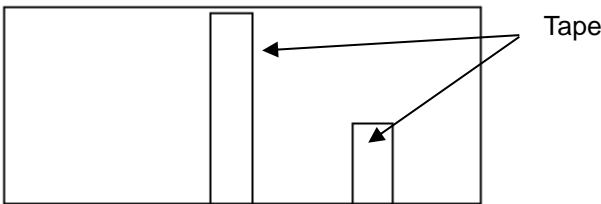

6. Bill with folds

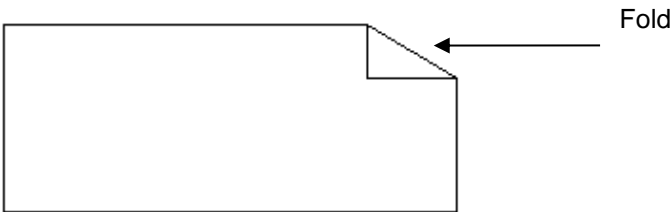

7. Gradually curved bill (bills tied by hand seal, etc)

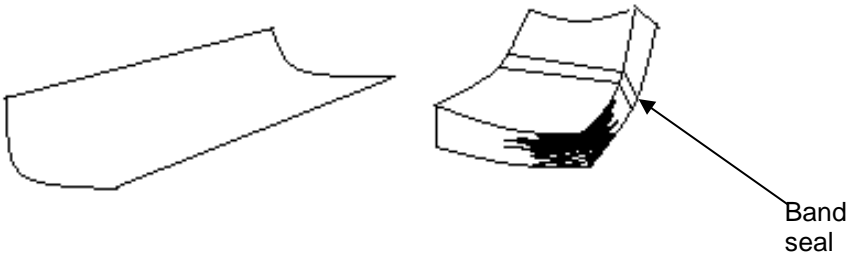

8. Bill with folded lines

Case 1



Case 2



Case 3



<Note!>

Bill distortion should not exceed 10 mm (0.39inch).

How to put bills

- 1) When inserting bills into the CSM, make sure to feed the bills in a horizontal position, not in a vertical position.




- 2) Bills should be placed properly on the tray.



How to check Dip Switch setting

- BRM60 has three 8Pin Dip Switches (Main B/D: 1ea, RBU B/D: 2ea) in total and one 2Pin Dip Switch (CSM B/D: 1ea).

- 1) Main B/D: 1ea

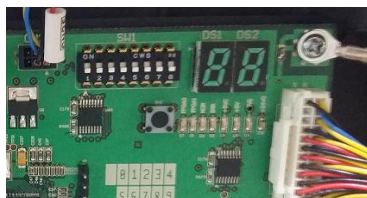

- Setting status

	1	2	3	4	5	6	7	8
ON	ON							
OFF		OFF	OFF	OFF	OFF	OFF	OFF	OFF

2) RBU B/D: 2ea



① SW1 setting status

	1	2	3	4	5	6	7	8
ON	ON							
OFF		OFF	OFF	OFF	OFF	OFF	OFF	OFF

② SW2 setting status

	1	2	3	4	5	6	7	8
ON								
OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF

3) CSM B/D: 1ea



① Short CSM setting status

	1	2
ON		
OFF	OFF	OFF

② Middle CSM setting status


	1	2
ON	ON	
OFF		OFF

How to open and close the lower unit


► Opening the Lower Module (BMD)

1. Push down the lever A to release the lock from BRM60 frame. After that, hold the end of the lever A and pull it until the lower unit is completely taken out.

※ The lock levers of front/rear type are in different positions.


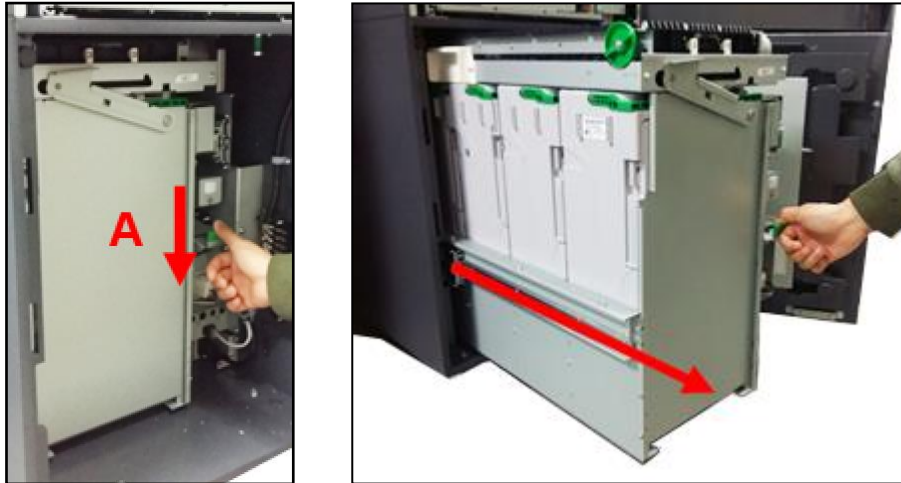


2. Hold the handle of Mid Transport Path and then lift up until it is fixed.

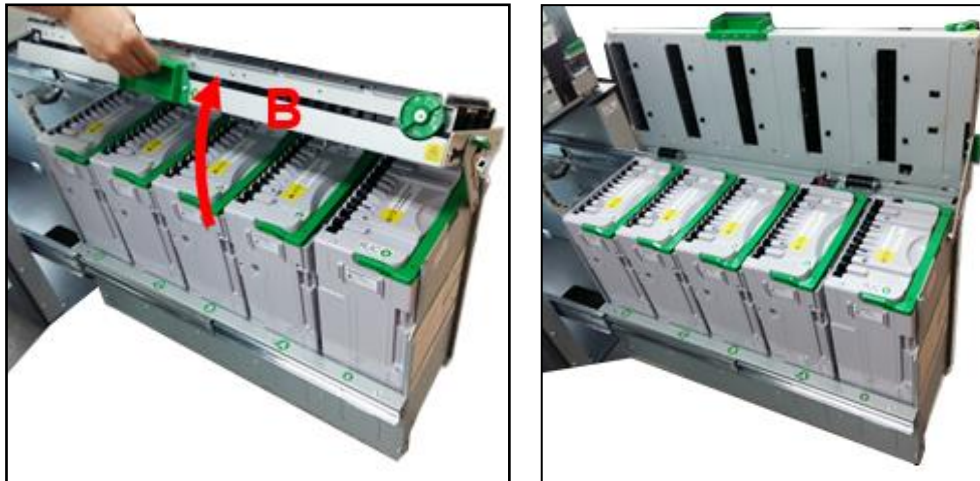

► Closing the Lower Module (BMD)

1. Close the Mid Transport Path by pressing the lever C. At this time, the Mid Transport Path is closed in two steps, so close it by pressing the lever C once again.

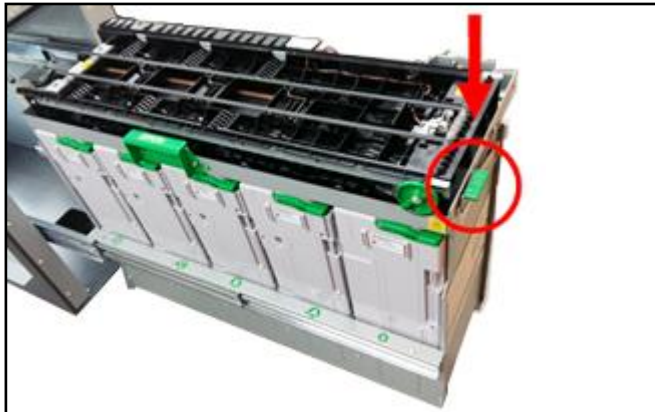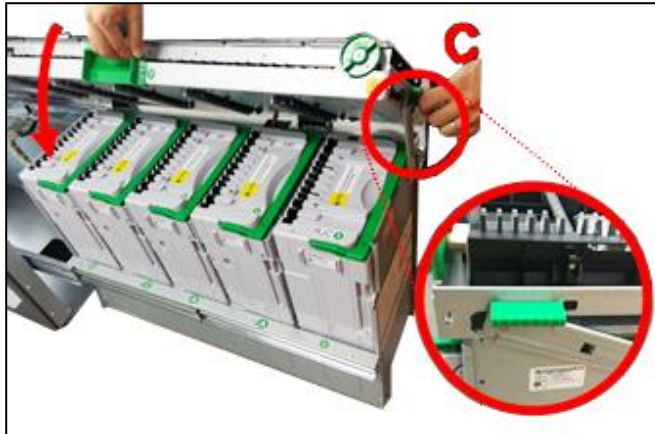


2. Push the lower unit until it is locked into BRM60 frame as shown in the picture below.



How to replenish the Recycle Cassette (RC) with bills

- ▶ This section describes how to replenish the cassette with bills.
 1. Separate the lower unit from BRM60 frame.
 2. Hold the handle D and lift it up to separate the cassette.

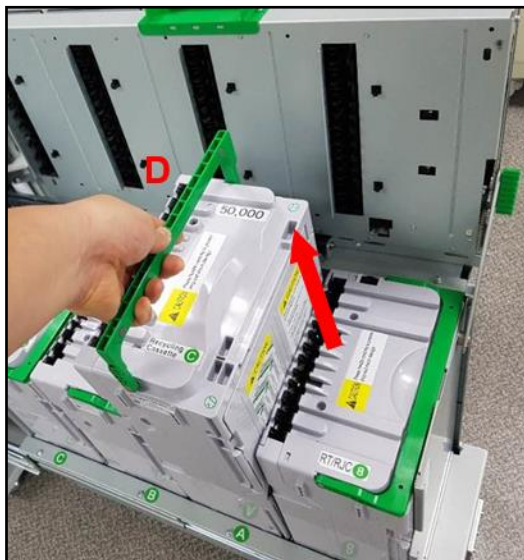


3. Place the cassette on the flat surface. Turn the key clockwise and open the door.



4. While pressing the green lever E, pull the Push-Plate all the way down to the bottom.



5. Check if the Stack Sheet is extruded out of the guide. If it is extruded out of the guide as shown in below picture, turn the Roller and insert it inside the guide.

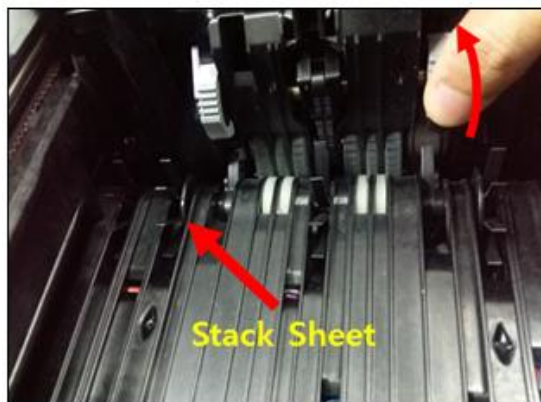

6. Replenish the cassette with the bill to the position of the label and push the Push-Plate to the end in the arrow direction pressing the green lever E.



<Note!>


Be careful for the bills not to be laid when replenishing the bills.



CAUTION:

Prior to replenishing the cash cassette with the notes,


- Fan the notes so that the notes are not sticking together.
- Remove all notes with holes or notes that are torn.
- Unfold the folded notes.
- Place the notes correctly.

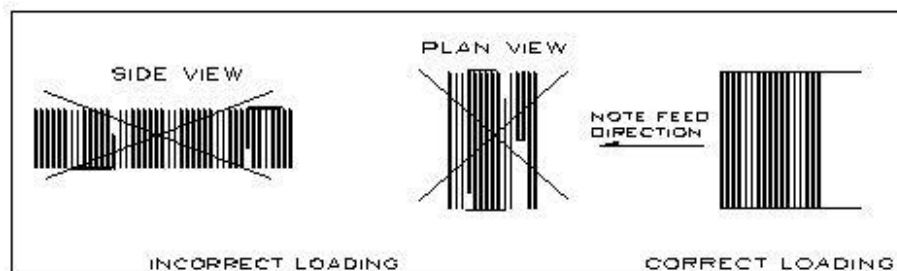

7. Close the door and lock the cassette completely by turning the key. After locking it, remove the key.



8. Fold the holder of the cassette and mount the cassette into the set guide.

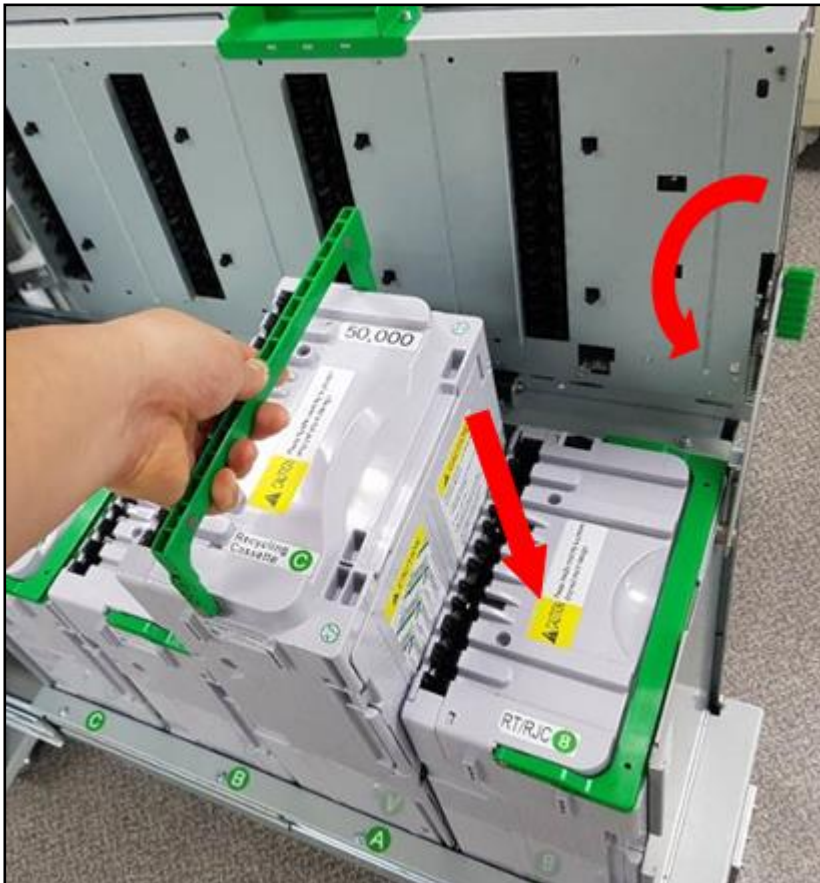

9. Mount the lower unit into the BRM60 frame

How to remove the bills from reject Deposit cassette (RJDPC)

► This section describes how to remove the bills from reject cassette.



1. Separate the lower unit from the BRM60 frame
2. Hold the handle A and separate the Reject Deposit Cassette completely from the set guide.




3. Place the cassette on the flat surface and open the door by turning the key clockwise.




4. Pull down the Push-Plate while pressing the green lever B on the lower part of Reject Deposit Cassette. Remove the bills when enough space is created for removing them.

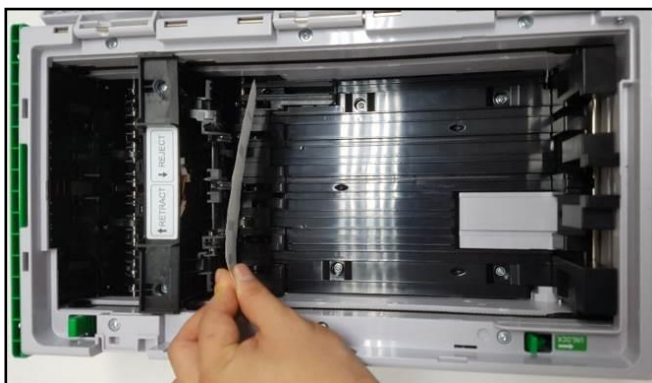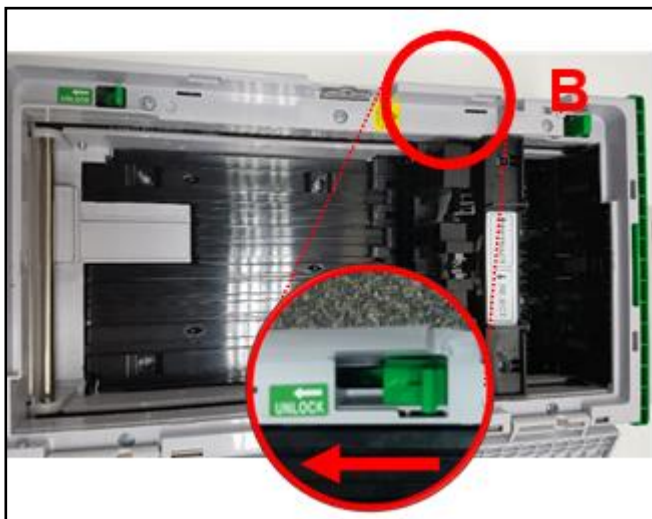

5. Press the green lever on the upper part of the Reject Deposit Cassette to open the rear transport path.

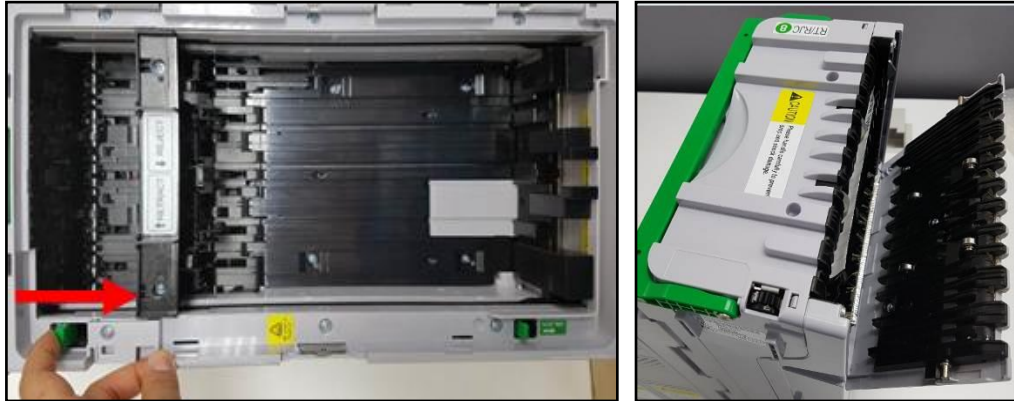

6. Turn the gear and remove the bills when there is enough space to remove jam.

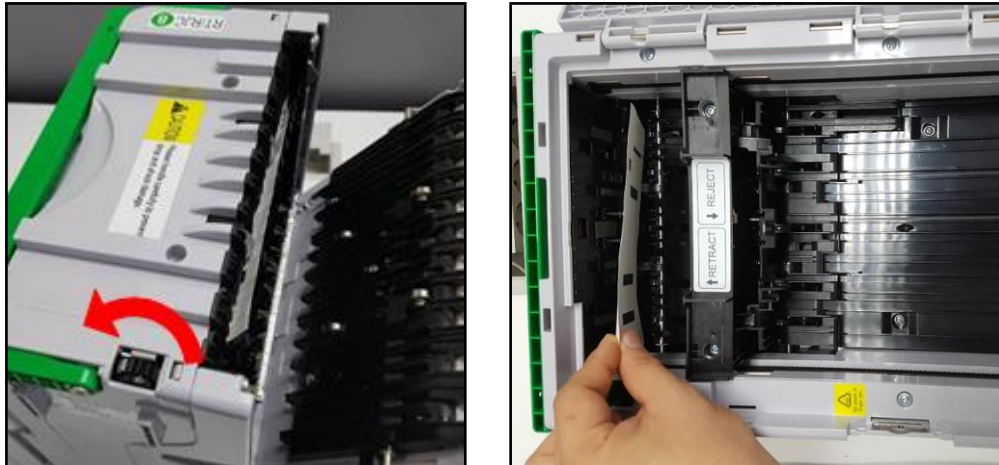

7. Push the rear transport path and close it. Then, close the door and lock the Reject Deposit Cassette completely by turning the key.



8. Close the door and mount the Reject Deposit Cassette onto the set guide again.



9. Mount the lower unit onto the RM60 frame (refer to “Closing the Lower Module”).

How to open and close the upper module (BMU)

Opening the Upper Module (BMU)

1. Lower the lock lever on the front or rear side to release the lock. Then pull the BMU lever handle to detach the BMU module from the system.




<Front Type>



<Rear Type>

Closing the Upper Module (BMU)

1. Push the upper unit in the direction of the arrow until it is locked.

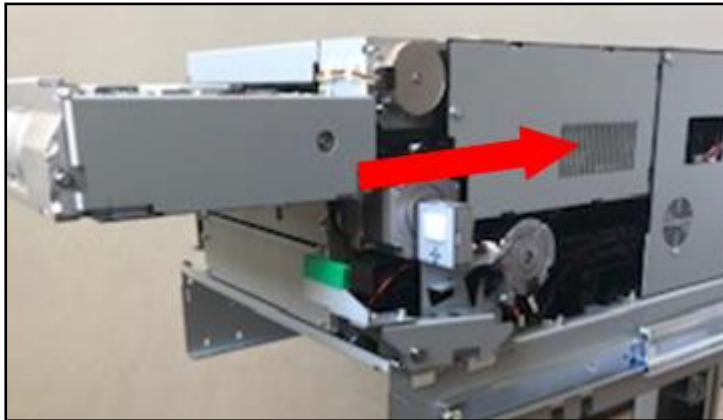


<Front Type>



<Rear Type>


Opening the Customer Service Module (CSM)

1. Hold the handle A and lift up the Customer Service Module to fix it up to the safety lock B.

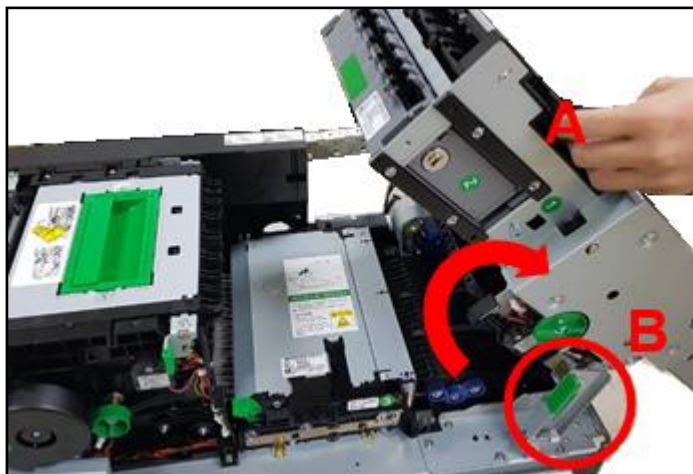


Closing the Customer Service Module (CSM)

1. Release the lock by holding A with one hand and pressing the safety lock B forward with the other hand.

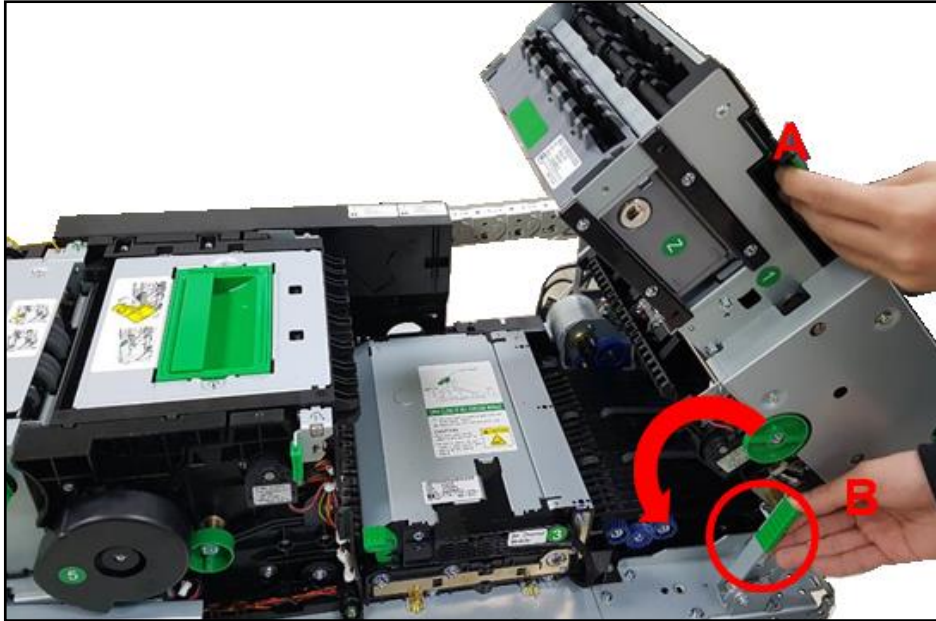

2. Push the CSM down slowly to completely close it. At this time, the lock is closed in two steps, so make sure to close it while pressing the lock B.

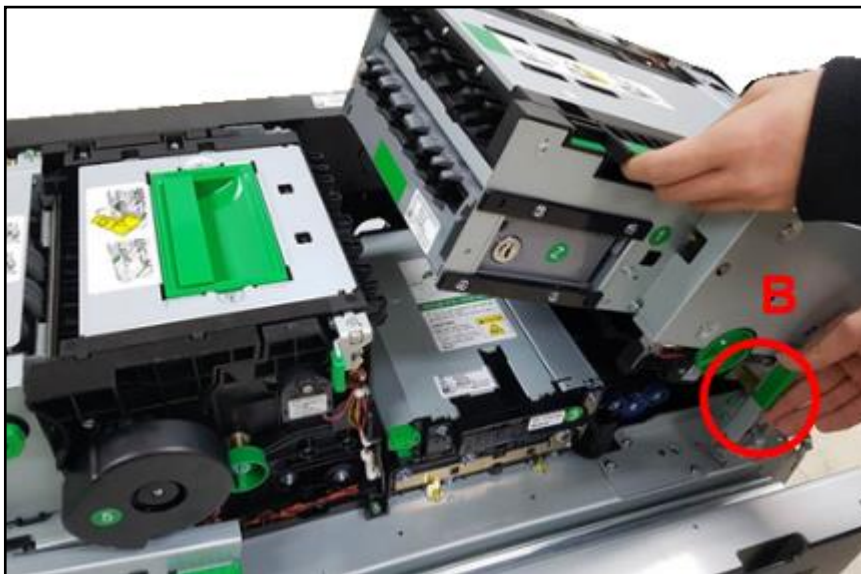


Opening the Temporary Stacker (TSK)

1. While pressing the back side of the TSK, raise it in the direction of the arrow.




Closing the Temporary Stacker (TSK)

1. Press the top of the TSK in the direction of the arrow until it clicks.

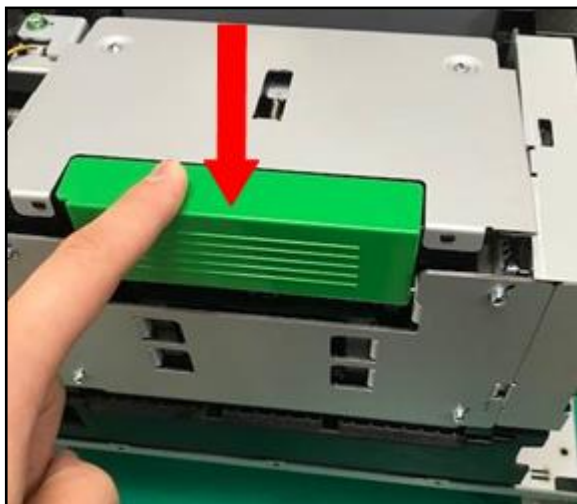


Opening the Rear Transport Path

1. Hold A by one hand and pull the safety lock B with the other hand to unlock it. After that, lift it up while holding A.

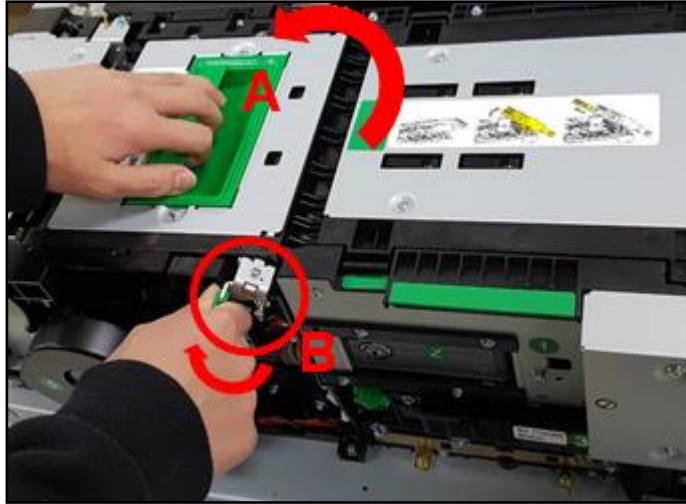


Closing the Rear Transport Path

1. Hold A with one hand, pull the safety lock B with the other hand to release the lock, and then put it down while holding A.
At this time, the lock is closed in two steps, so make sure to close it while pulling the lock B.

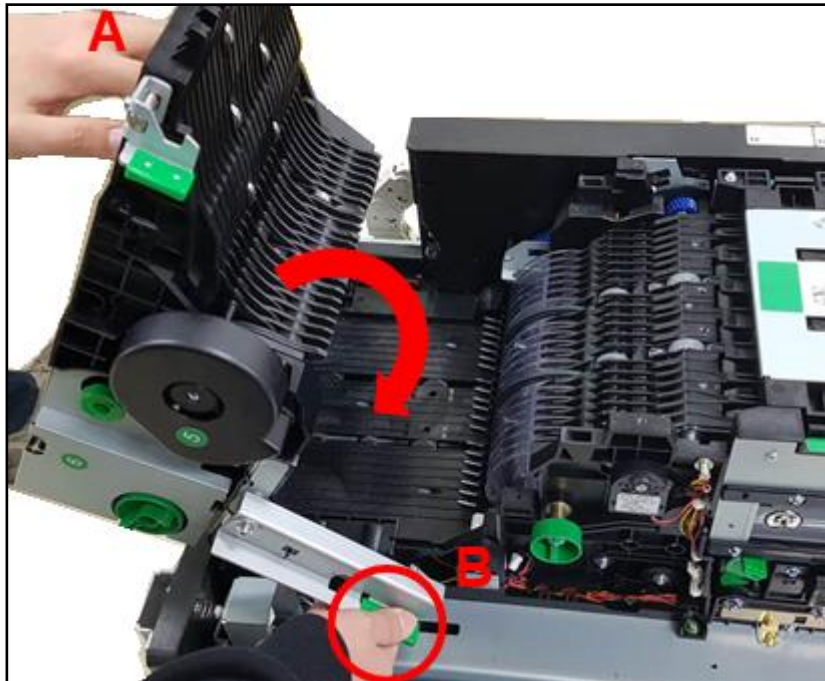

How to remove bills from RTC (Retract Cassette)

1. Open the CSM and pull out the RTC.

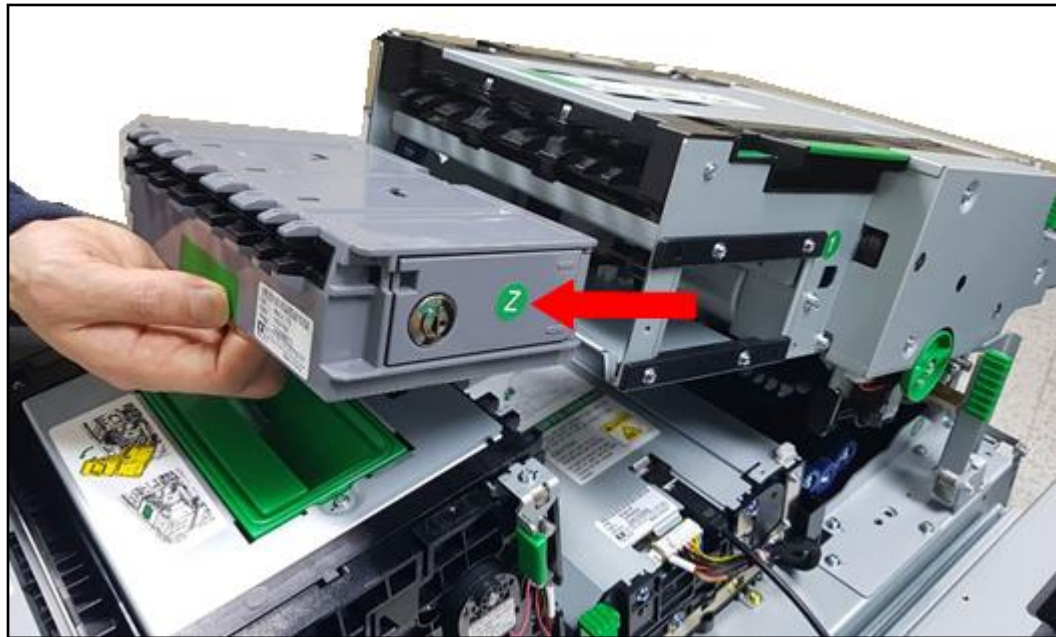



2. Open the RTC door with a key and remove bills.

How to remove the jam

If the jam occurs, remove the jam referring to each case of the following.

CASE 1: Removing jam from the separation section of the Customer Service Module



1. Open the Bill Stopper Knob (A) on the top of the CSM as shown in the picture below.

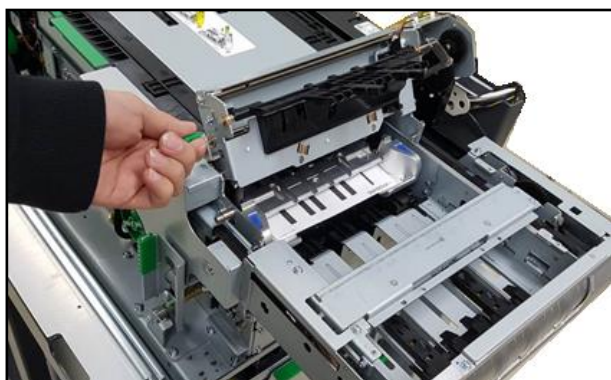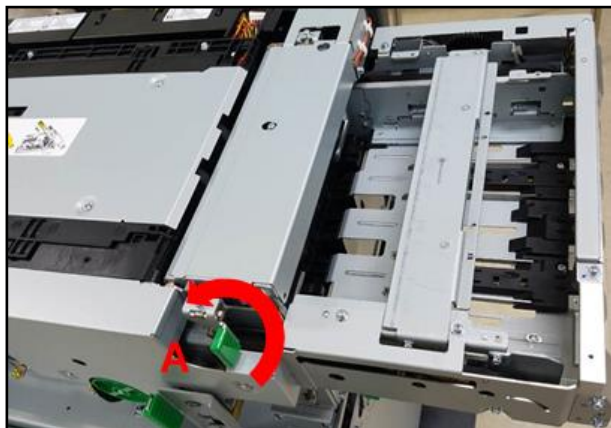



2. Remove the bills inside.
3. Close the Bill Stopper.

If the tray should be taken out due to jam occurred inside the CSM, proceed as follows.



1. Turn the gear in the Bill Stopper to open the Bill Stopper as below.

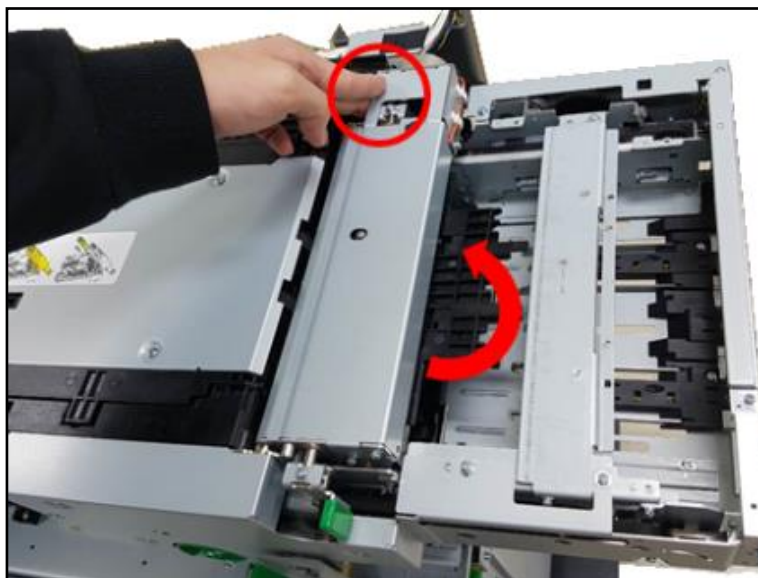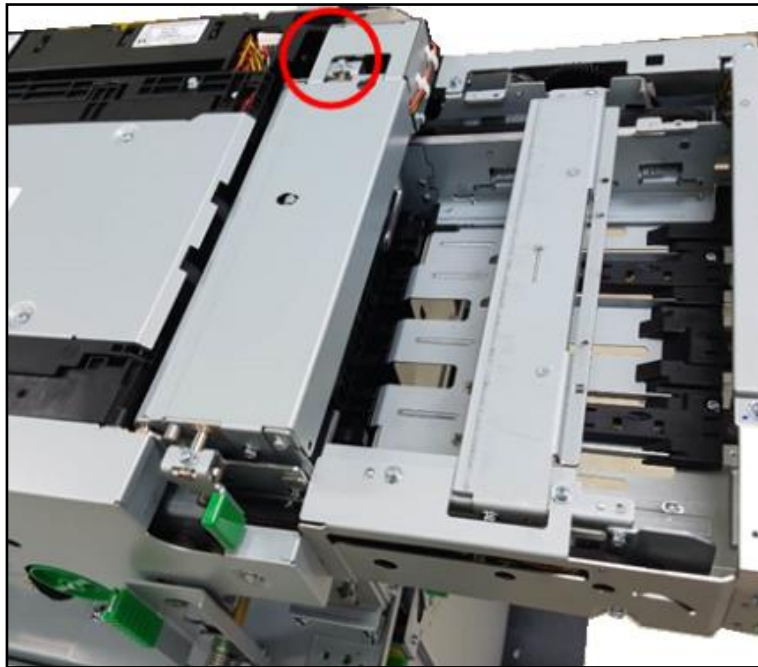

2. Adjust the position of the lift as shown in the picture below by using a flat-head (-) screw driver on the 'A' shaft of the operating side.

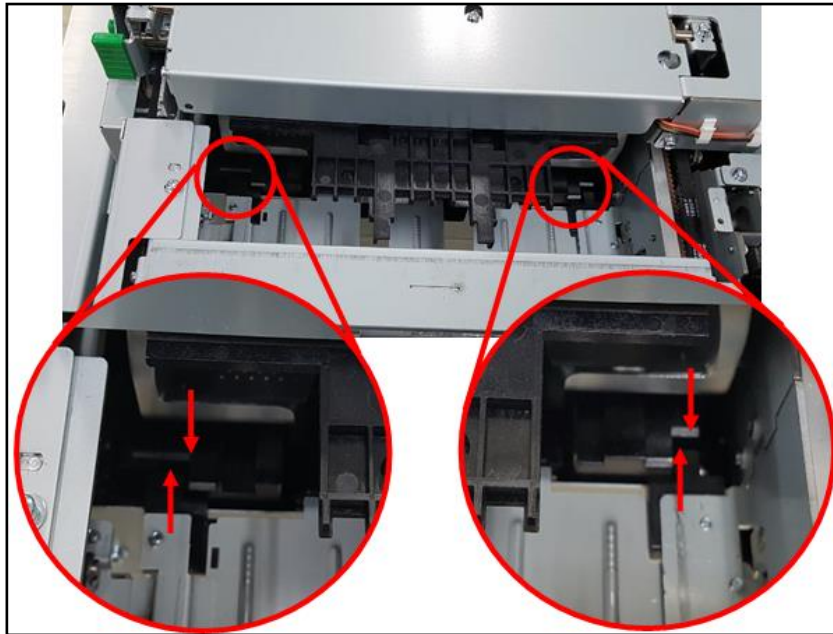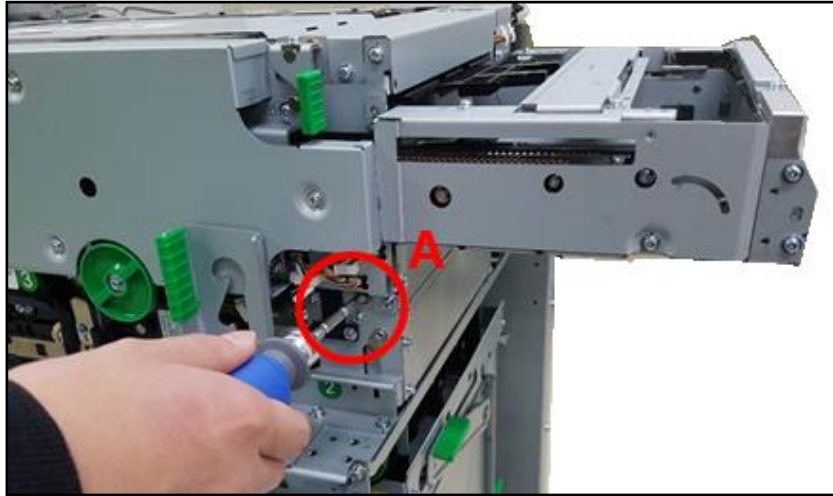


3. Turn the 'B' shaft on the operating side with a flat-head screwdriver to move the tray toward the Throat.

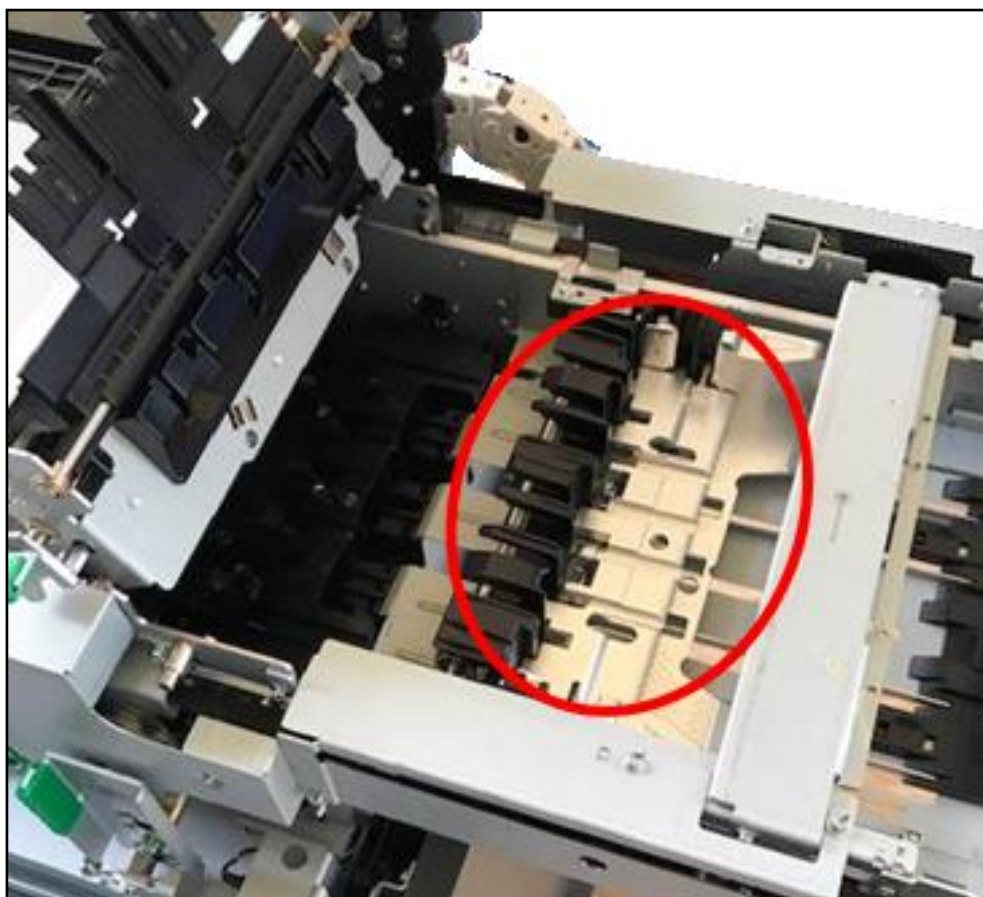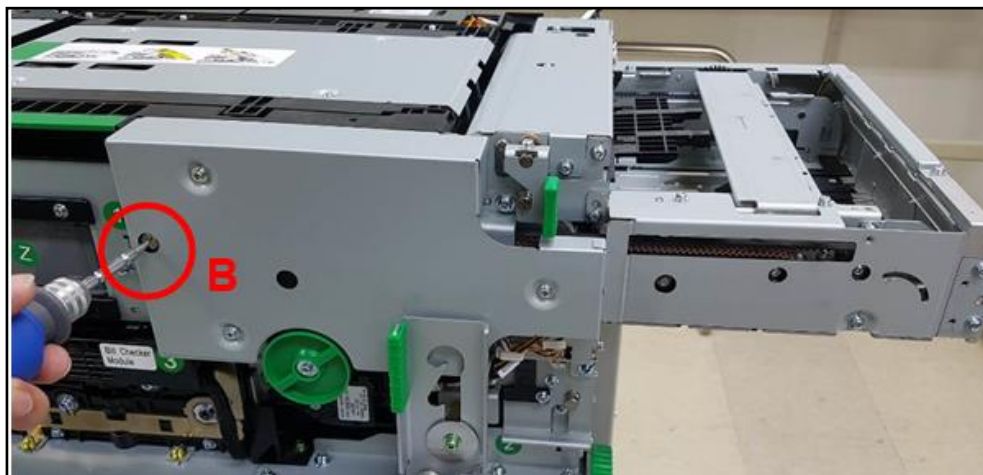


CASE 2: Removing jam from the Stack Transport Path of the CSM

1. Open the Guide by pushing the left and right hooks of the Stack Guide on the top of the CSM in the direction of the arrow.

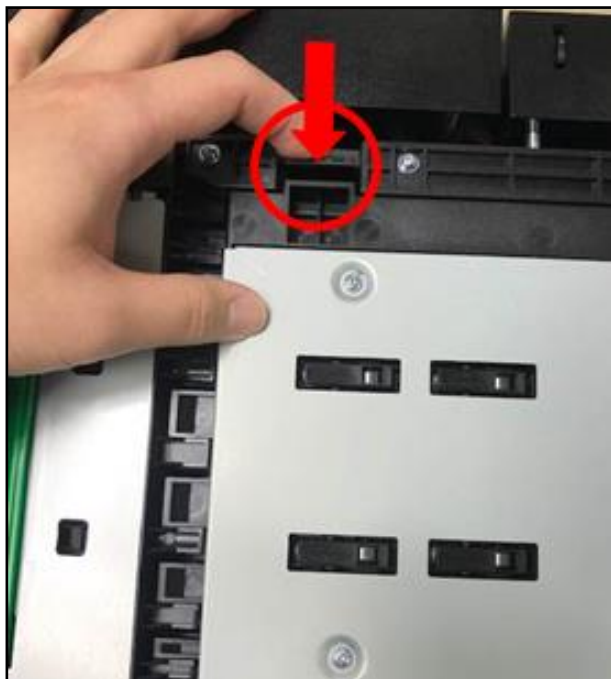


2. Remove bills from the opened transport path and press the guide to close it as the picture below.

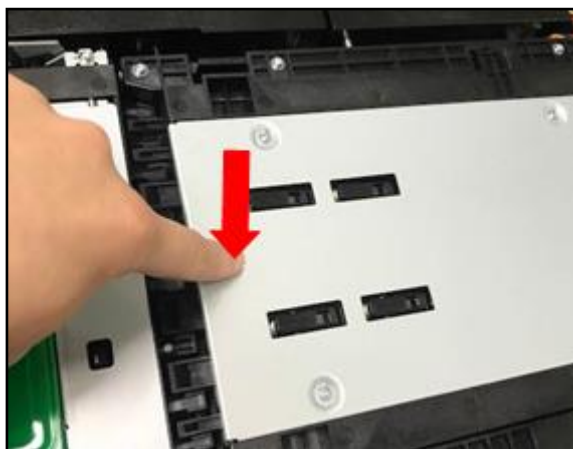

CASE 3: Removing jam from the Front


1. Open the CSM

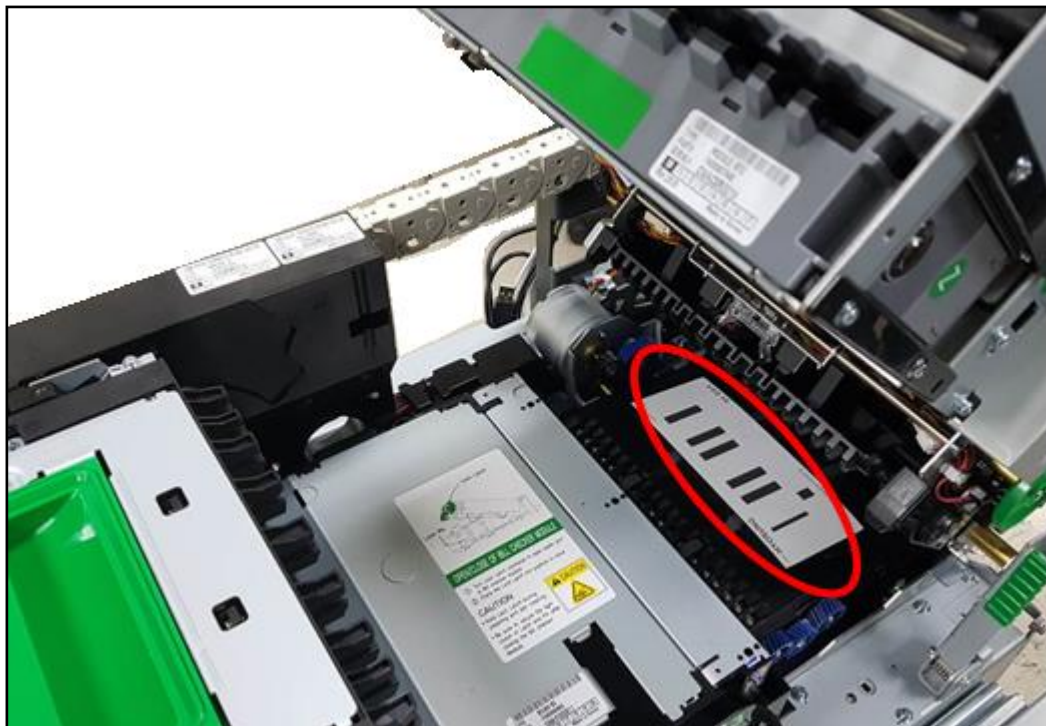

2. Remove the bills and close the CSM.

CASE 4: Removing jam from BC

1. Open the CSM (refer to “Opening the Customer Service Module”).
2. Turn the lever 'A' to open the BC, and then remove the bills inside.

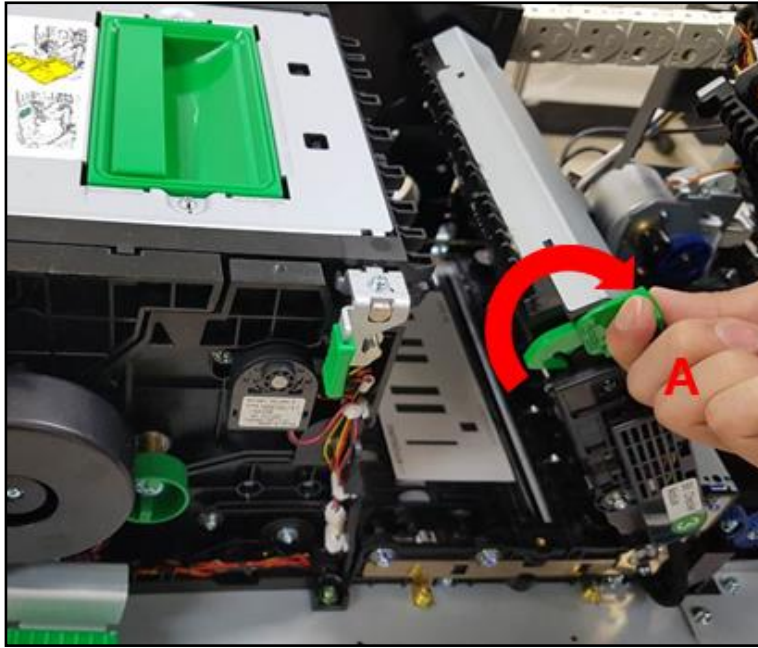


3. After removing the bills, close the BC and then CSM.




CASE 5: Removing jam from the Rear Transport Path

1. Open the rear transport path

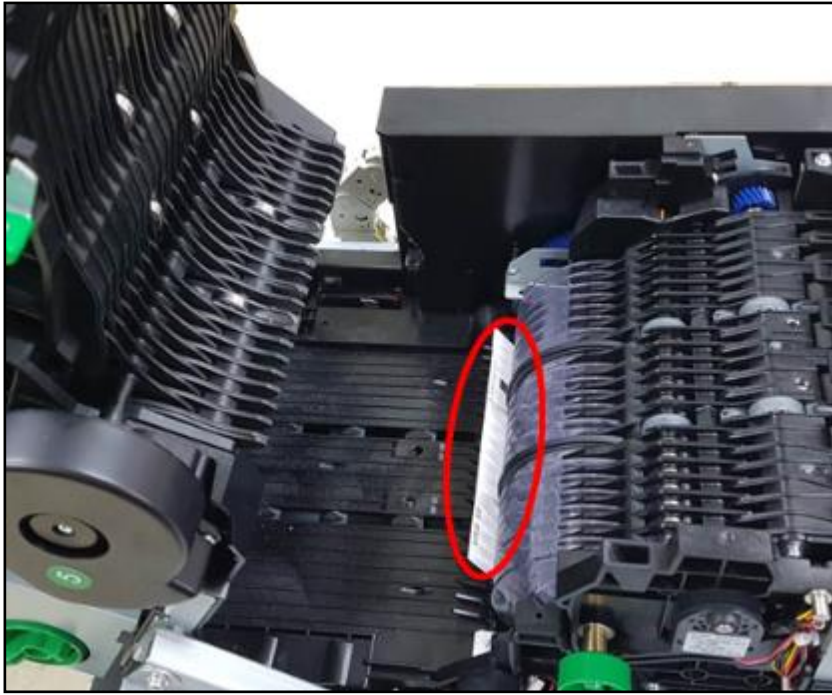


2. Open the CSM, and turn the knob of the Transport Path to take out the bills.

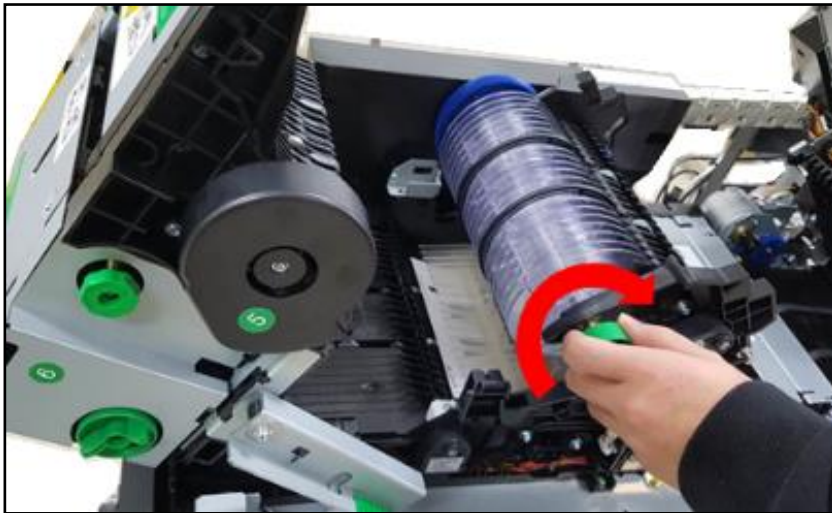



3. After removing the bills, close the rear transport path and CSM.

CASE 6: Removing jam from the Temporary Stacker

1. Open the TSK (Temporary Stacker).

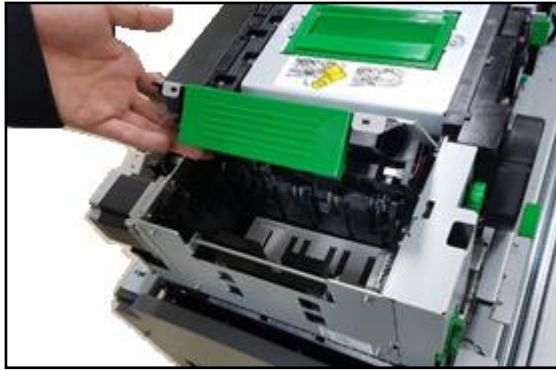

2. Lift up the handle 'A' and turn the knob 'B' to raise the bills.

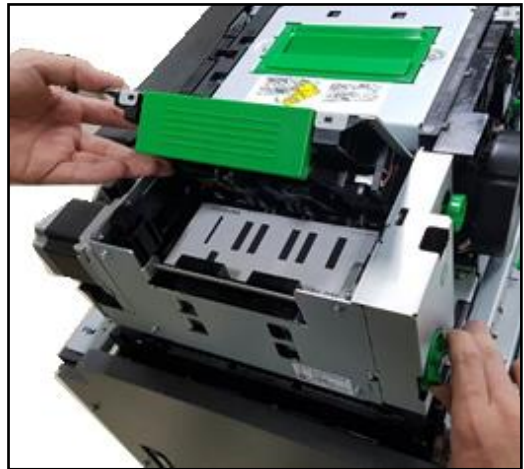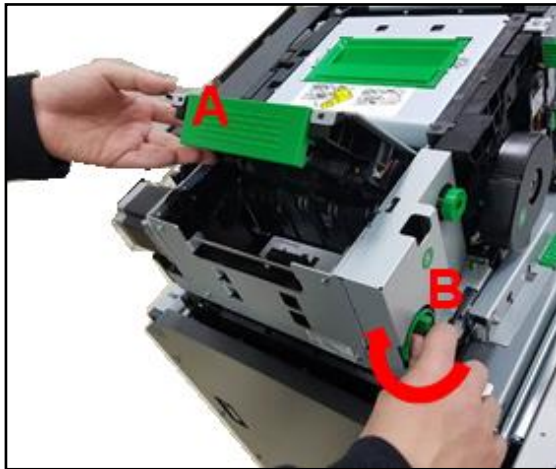


3. Remove the bills and close the TSK.



CASE 7: Removing jam from Mid Transport Path

1. Separate the lower unit from the BRM60 frame (refer to "Opening the Lower Module").

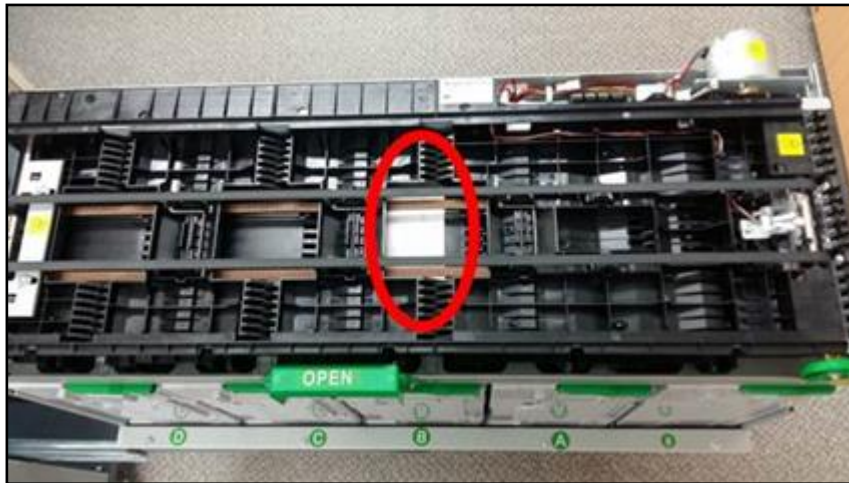

2. The bill on the Mid Transport Path appears when you turn the green knob "A" counterclockwise. At this time, remove the jammed bill.




3. In the case of the bill jammed while entering the cassette, remove it by turning the green knob "A" clockwise until the bill appears.




4. Mount the lower unit onto the BRM60 frame

CASE 8: Removing jam from Cassette

1. Separate the lower unit from the BRM60 frame (refer to “Opening the Lower Module”).
2. Pull the Push-Plate down to remove the jammed bill (for more detailed information, refer to “How to replenish the Recycle Cassette with bills”).

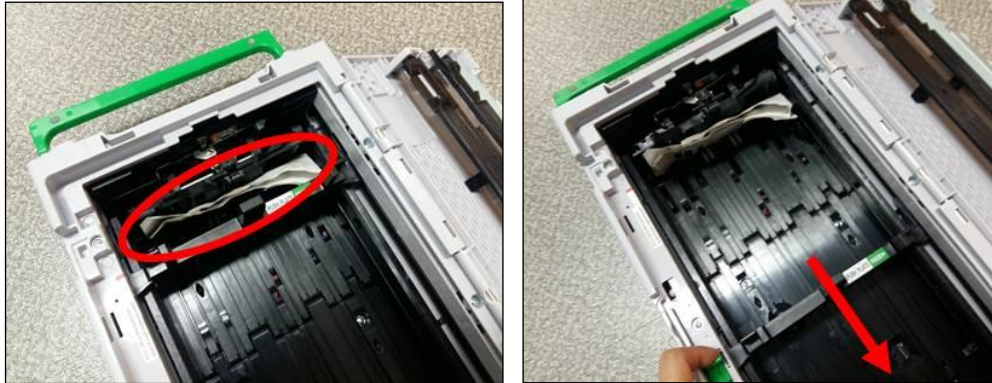


3. The jammed bill comes out when you turn the inner roller from bottom to upward. At this time, remove the jammed bill.

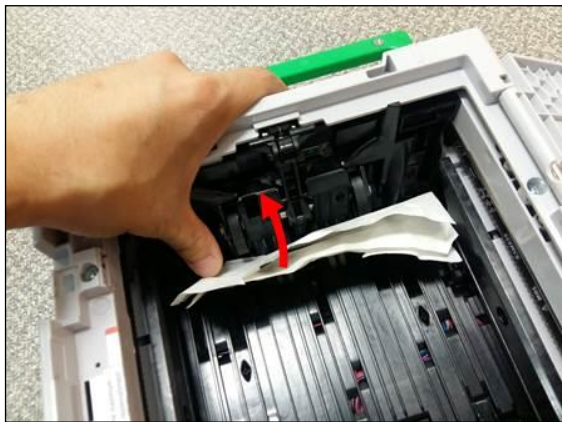

4. Pull the Push-Plate all the way up and close the cassette door. And then mount it onto the set guide (for detailed information, refer to “How to replenish the Recycle Cassette with bills”).
5. Mount the lower unit onto the BRM60 frame

CASE 9-1: Removing jam from Reject Deposit Cassette (Deposit Cassette section)

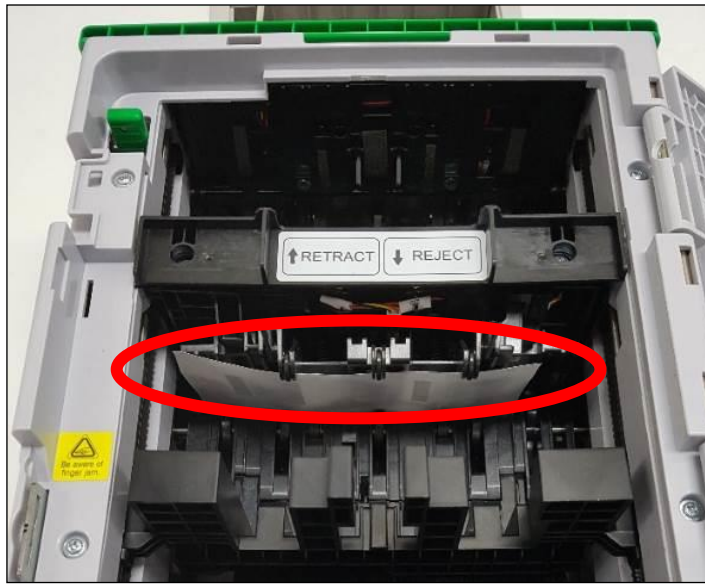


1. Separate the lower unit from the BRM60 frame
2. Open the cassette door (for more information, refer to “How to remove bills from Reject Deposit Cassette”).
3. Pull down the Push-Plate to remove the jammed bill (for more information, refer to “How to remove bills from Reject Deposit Cassette”). Remove the bill by turning the gear A in the direction of the arrow.




4. Close the cassette door and mount it onto the set guide (for more information, refer to “How to remove bills from Reject Deposit Cassette”)
5. Mount the lower unit onto the BRM60 frame (refer to “Closing the Lower Module”).

CASE 9-2: Removing jam from Reject Deposit Cassette (Reject Cassette section)

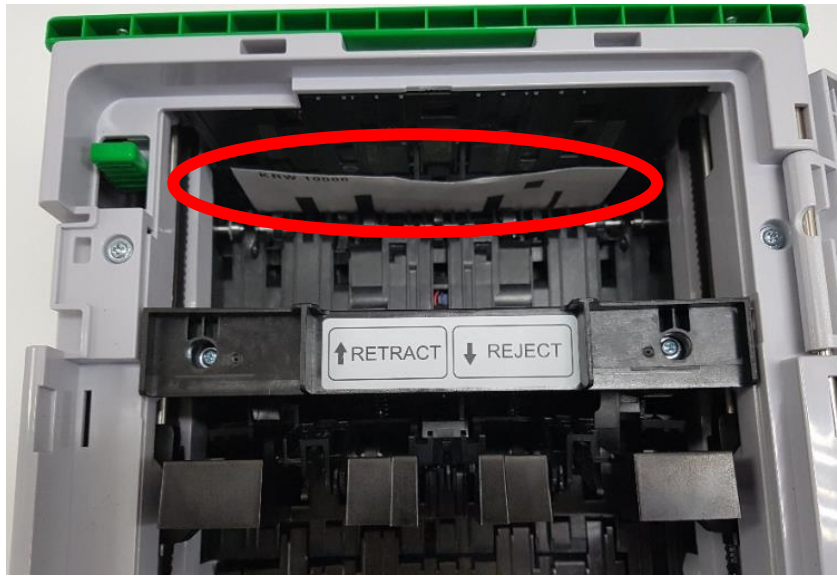

1. Separate the lower unit from the BRM60 frame (refer to “Opening the Lower Module”).
2. Open the cassette door (for more information, refer to “How to remove bills from Reject Deposit Cassette”).
3. Open the rear guide by pressing the lever in order to remove the jammed bill (for more information, refer to “How to remove bills from Reject Deposit Cassette”). Remove the bill by turning the gear A in the direction of the arrow.

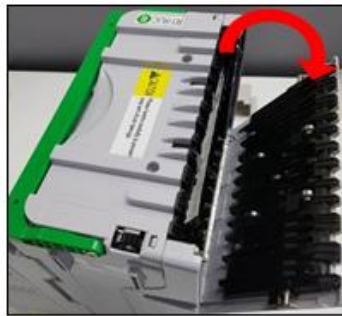


4. Close the cassette door and the rear guide. Then mount the cassette onto the set guide (for more information, refer to “How to remove bills from Reject Deposit Cassette”).
5. Mount the lower unit onto the BRM60 frame (refer to “Closing the Lower Module”).

Chapter5. Cash & Check In Module (CCIM17 : UL Type)

Please understand that **the images used in this section are for illustration only** so they can differ from the appearances of real machine.

- ▶ The Check In Module is designed to be integrated in automated teller machines and full-function self-service terminals. It enables cash deposit and automated check handling. Banknotes and checks deposited by the customer are stored in cassettes. Which type of document is stored in which cassette is defined on the basis of the bank's application. The diagram below shows the overall configuration of the Check In Module and the function of the main module is described in the next paragraph.
- ▶ The shutter of CCIM17 is mounted on unit.

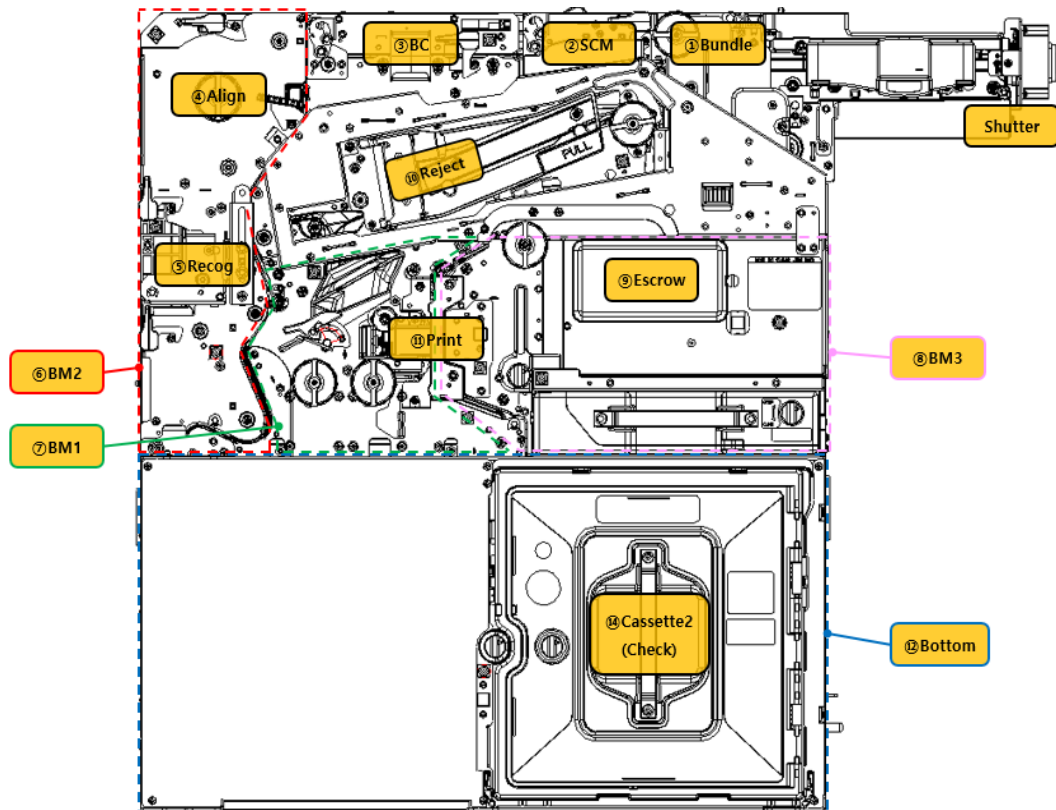

ALG Section

To read MICR of checks, auto-alignment is executed in this section.

Separation Section

The cash and check deposited together is separated by sheets on the separation section. In case of the transaction cancellation, cash and check in reject section is ejected to the customer in a lump by the command of higher rank.

BC (Bill Checker)

This section verifies the image data on both sides of cash for identification

Reject Section

When the reject condition is occurred, the media is temporarily stacked. After the calculation of the media is completed, they are returned in a lump to the separation section by the command of the higher rank.

Retract Section

Retract: The cash/check in an unclaimed or retrieved condition is stored in this section.

Article 6: The media in a condition corresponded to the regulation of ECB are stored by force.

At this time, they don't pass through the temporary stack section.

RECOG (Recognition Module)

This section reads the MICR character written on the checks through the magnetic head.

Escrow Section

In this section, cash and check that are receivable is stacked in a lump and they are fed to the cash/check cassette or rejection section by the command of the higher rank.

Bundle Section

This section accepts Cash & Check in Bundles and separates it.

Cassette Section

Check received are stored in the cassette by sheets.

The cassettes can be mounted or demounted from the unit with the key. And also cassette's door can be opened using the key.

Basic Specification of Check In Module

► Basic Specification of Check In Module


Item		Denomination		Remarks
Supported Denomination	Deposit	Various Denominations		
Supportable Note Size	Short Way	60.0~102.0 mm (W) (2.36~4.01inch)		AMERICA:ANSI E13B Up to 93.142mm
	Long Way	110.0~230.0 mm(L) (4.33~9.06inch)		Check
	Thickness	0.075 ~0.2 mm (0.003~0.008inch)		
Maximum Number of Deposit	Deposit	Up to 75 Notes(Mixing) *		
Storage Capacity	Deposit Cassette	Cash	1ea	227 mm (8.94inch) (Max.2,000 with New Notes)
		Check	1ea	227 mm (8.94inch) (Max.2,000 with New Notes)
	RT/A6 Cassette	Retract	1ea	20.0 mm (0.79inch) (Max.50 with New Notes)
		A6		7.0 mm (0.28inch) (Max.10 with New Notes)

* It is the reference value when the thickness of bill used is 0.1mm (0.0039inch).

Specification of External Appearance

► Specification of External Appearance

Item		Specification
CCIM17	Dimensions	Width: 232.2 ± 2 (mm) (9.14 ± 0.08 inch) Length: 912.5 ± 2 (mm) (35.93 ± 0.08 inch) Height: 750 ± 2 (mm) (29.53 ± 0.08 inch)
	Weight	83 Kg(183lb) (except Cash & Check weight)
Deposit Cassette (Check)	Dimensions	Width: 309 ± 2 (mm) (12.17 ± 0.08 inch) Length: 162 ± 2 (mm) (6.38 ± 0.08 inch) Height: 310 ± 2 (mm) (12.20 ± 0.08 inch)
	Weight	4.7 Kg(Cash) & 4.4Kg(Check) (13lb & 12.35lb, except Cash & Check weight)
RT/A6 Cassette	Dimensions	Width: 274 ± 2 (mm) (10.79 ± 0.08 inch) Length: 169 ± 2 (mm) (6.65 ± 0.08 inch) Height: 62 ± 2 (mm) (2.44 ± 0.08 inch)
	Weight	1 Kg (2.20lb, except Cash & Check weight)

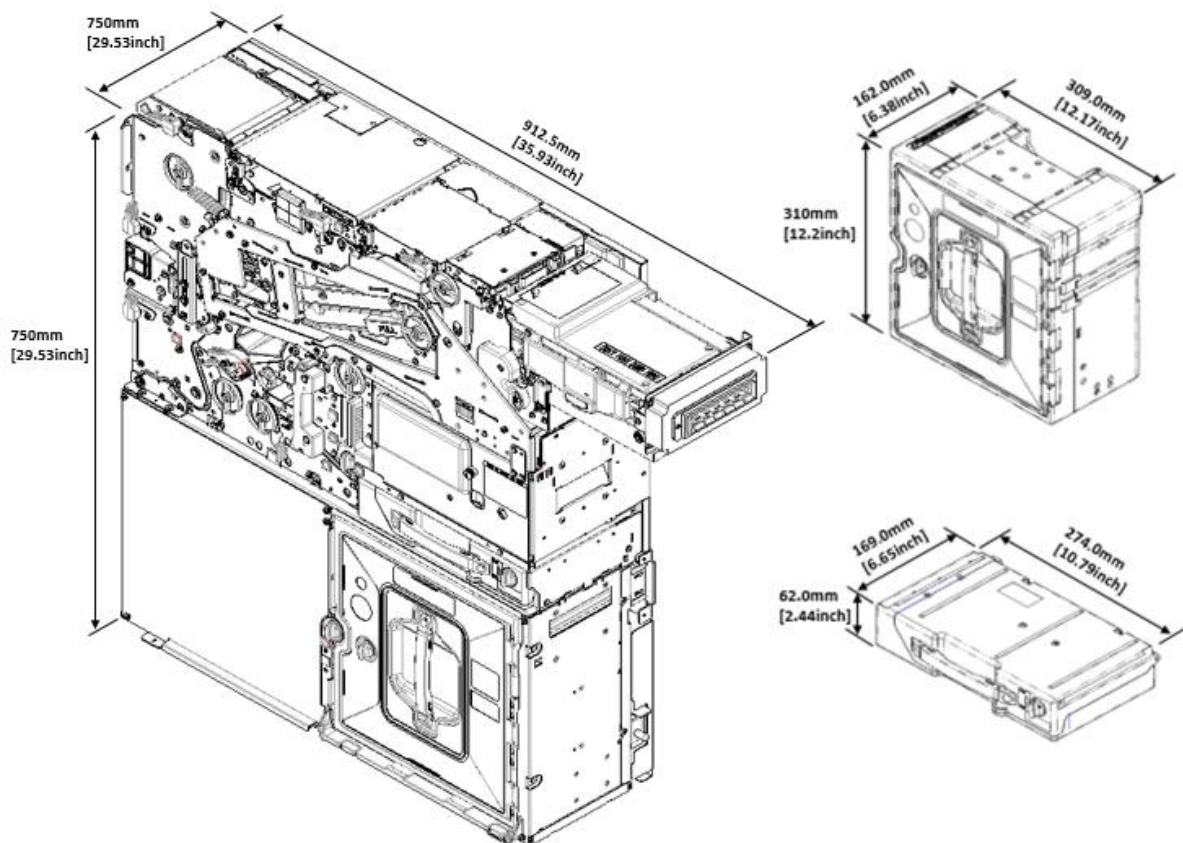

Cash & Check Conditions

► Please refer to “Bill Conditions” in the chapter5.

Environmental Condition

Item		Specification		Remarks
Installation Condition		Interior or Outdoor Installation of Bank for ATM There should be no direct sunlight for the outdoor installation of bank.		
Temperature	Operating	5 ~ 50℃		
	Non-operating	-10 ~ 50℃		
	Storage	-20 ~ 50℃		
	Transportation	-20 ~ 60℃ (Within 48H)		
Humidity	Operating	30 ~ 80 %		
	Non-operating	10 ~ 90 %		
	Storage	10 ~ 90 %		
	Transportation	10 ~ 90 %(30℃ Within 48H)		
Vibration	Transportation	There should be no defect or problem in the functional operation and external appearance after vibration test of transport mode.		
		Frequency	5 ~ 100 Hz	
		Acceleration / Displacement	Random Wave	
		Overall RMS	0.69G	
		Vibration Direction	Up and down	
		Test Time	20minute	
Electrostatic Noise		±4Kv (Contact)		

Maintenance Requirement

Item		Specification	Remarks
Maintenance Condition	Maintenance Unit	Refer to Maintenance Manual	
	Regular Maintenance Period	2times / year	
MTTR		30minutes	

How to remove jam from each section

- This chapter describes removing jam from each section where jam occurs on CCIM.

CAUTION:

Be sure to use the appropriate tools (e.g. pincette) when removing jam not to hurt your hand.

<Note!>


Any branch personnel should not attempt to remove any jams without powering down the ATM.

- Location Map to remove jam.

The Cash & Check In Module (CCIM) can be divided into 12 modules as follows.

BM3 Module includes ESCROW Module and RT/CASSETTE Module.


BOTTOM Module includes CASH CASSETTE Module and CHECK CASSETTE Module.

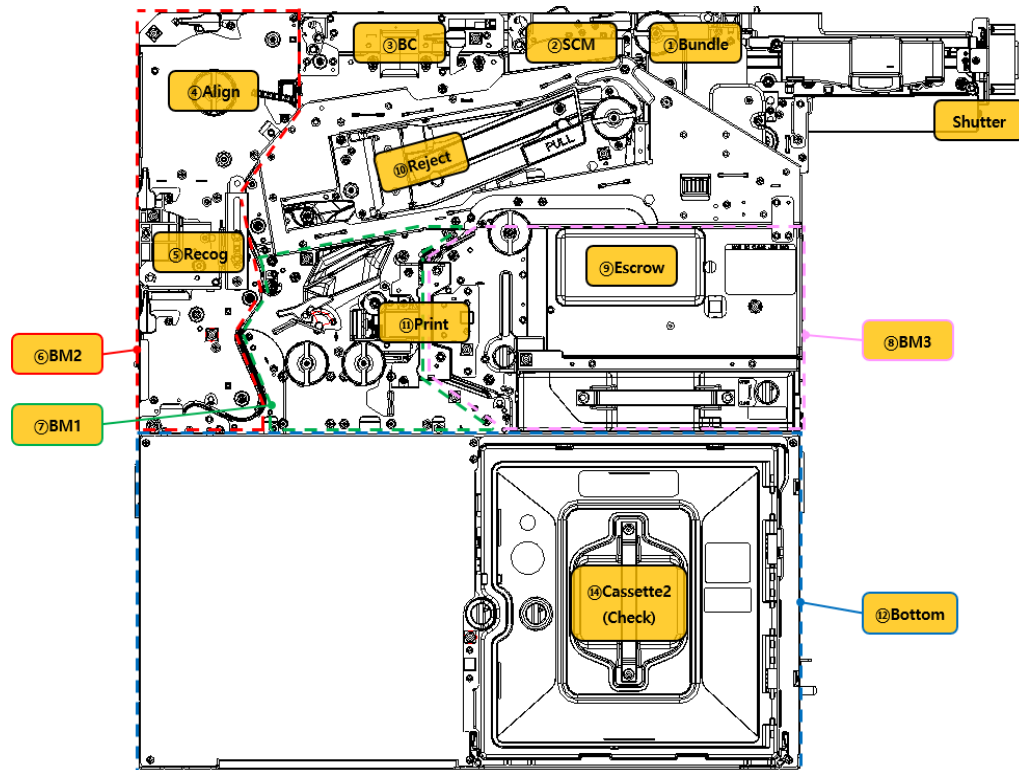

Zone	Abbreviation	Description
①	BND	Bulk Note Separation Module
②	SCM	Separator Control Module
③	BC	Bill Checker Module
④	ALG	Alignment Module
⑤	REC	Recognition Module

Zone	Abbreviation	Description
⑥	BM2	Body Module2
⑦	BM1	Body Module1
⑧	BM3	Body Module3
⑨	ESC	Escrow Module
⑩	RJ	Reject Module
⑪-1	PRT(Ink)	Endorsement Module
⑪-2	PRT(Felt)	Ink Head Cleaner
⑫	BOT	Body Module4
⑬	CST 1	Cash Cassette
⑭	CST 2	Check Cassette
⑮	RT&A6	Retract & A6 Cassette

► LED Lighting of Unit Transport Path

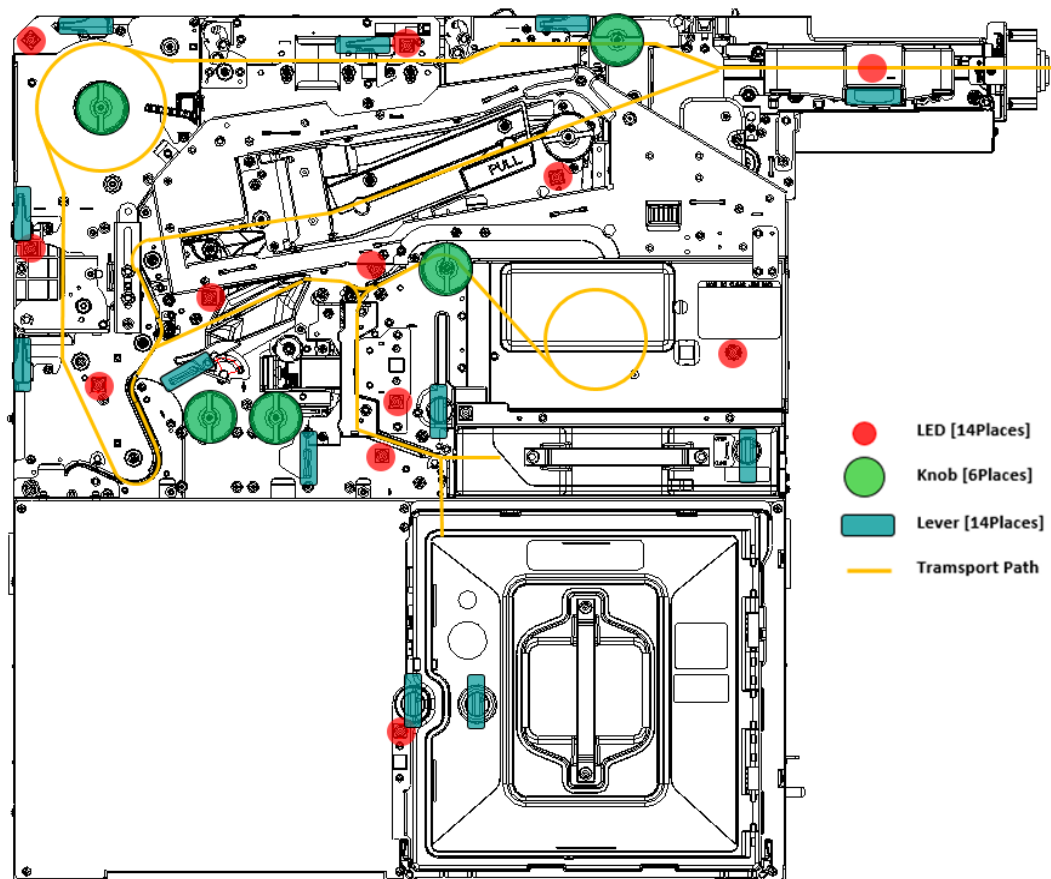


How to setting DIP switch of CCIM Main Board

► Description of DIP Switch

# DIP SW	Setting	Description	Factory Default
1	ON	Change to clear mode of Print Ink Count	OFF
	OFF	Normal operation	
2	ON	Normal operation	ON
	OFF	Test mode	
3	ON	Normal operation	ON
	OFF	NA	
4	ON	Capacity of Bundle/Escrow/Reject is 75	ON or OFF
	OFF	Capacity of Bundle/Escrow/Reject is 50	
5	ON	Degug mode	OFF
	OFF	Normal operation	
6	ON	NA	OFF
	OFF	NA	
7	ON	EP download via USB in debug mode	OFF
	OFF	EP download via UART in debug mode	
8	ON	Change to EP download mode	OFF
	OFF	Normal operation	

► Setting the DIP Switch of CCIM17

Dip Switch No.	1	2	3	4	5	6	7	8
On		○	○	○				
Off	○				○	○	○	○

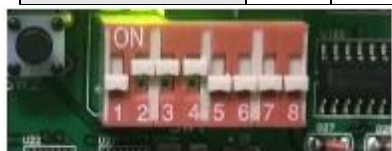

OR



The troubleshooting method of CCIM30 includes all modules of CCIM17

Remove jam from Bundle Module


- ▶ Zone ①, Inside the Bundle Section.
- ▶ Location LED A Blinks

Case1.


1. If there is a jam on Bundle Module, open the door as shown in the picture below picture.
2. While holding Bundle door and pressing Bill-press, Remove a jammed note or foreign substances.
3. After checking if the jammed note is removed, close the door.

Case2.


1. After opening the Bundle Module and SCM, remove a jammed note.

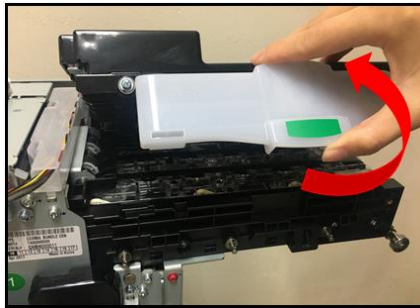


Open Bundle door.

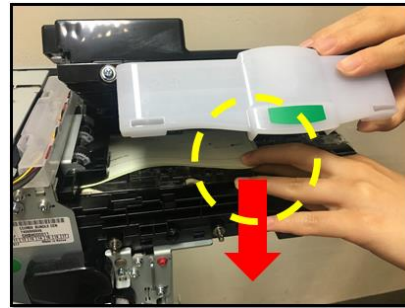

While holding Bundle door and pressing Bill-press, Remove bills and remained substance

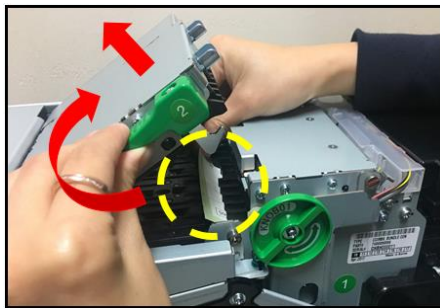

Once you open SCM using lever, Remove bills and remained substance

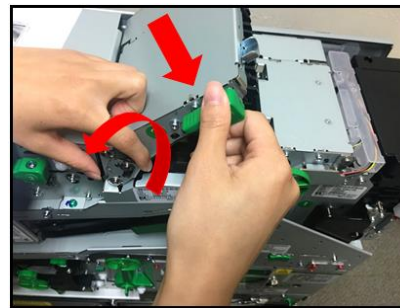


Close SCM using PL lock and lever
(Caution; Risk of pinching hand)


Remove jam from the First Transport Path

- ▶ Zone ②, Inside the SCM or Bundle Section.
- ▶ Location LED A or B Blinks

1. If there is a jam on the first transport path, push the lock lever in the arrow direction as shown in the picture and open the First Transport Path.
2. Remove a jammed bill or foreign substances.
3. After checking if the jammed bill is removed, completely close the First Transport Path pushing the SCM lever in the arrow direction as shown in the picture.

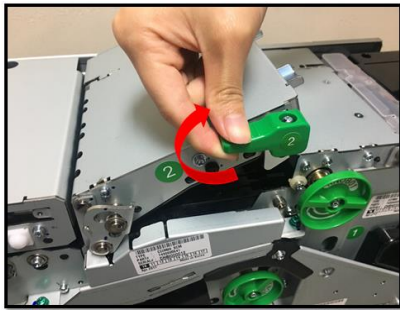

Once you open SCM using lever, remove bills and remained substance

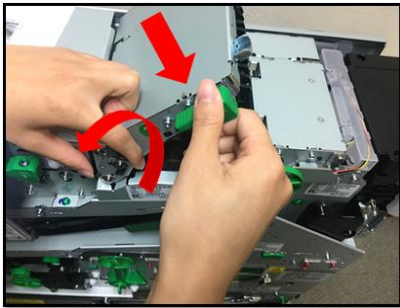


Close SCM using PL lock and lever
(Caution; Risk of pinching hand)


Remove jam from BC

- ▶ Zone ③, BC or SCM or ALG.
- ▶ Location LED B Blinks

1. If there is a jam on BC section, push the lock lever in the arrow direction as shown in the picture and open the BC section.
2. Remove a jammed Note or foreign substances.
3. After checking if the jammed Note is removed, completely close the BC section by pushing the lever and PL lock in the arrow direction as shown in the picture.

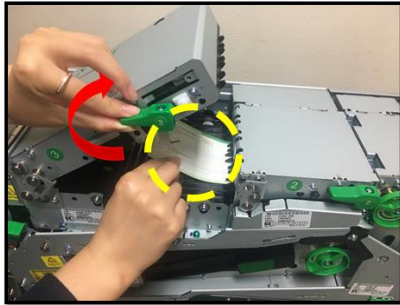

Once you open BC using lever, remove bills and remained substance

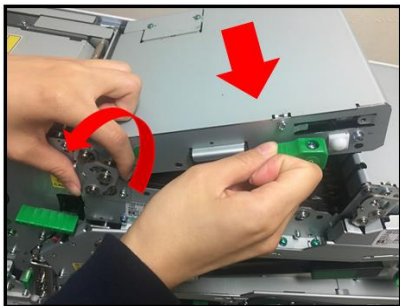


Close BC using PL lock and lever.
(Caution; Risk of pinching hand)


Remove jam from ALG

- ▶ Zone ④, Inside the ALG.
- ▶ Location LED C Blinks


1. If there is a jam on Zone ④, push the ALG lever in the arrow direction as shown in the picture and open the ALG section.
2. Remove a jammed Note or foreign substances. If necessary, turn the green knob clockwise or counterclockwise to easily remove the jammed Note as shown in the picture below.
3. After checking if the jammed Note is removed, completely close the ALG section.

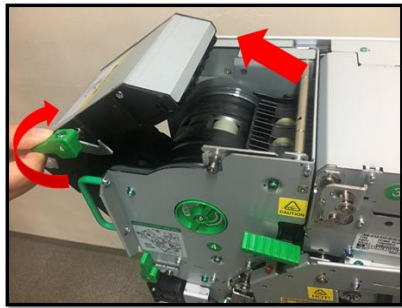


Open ALG using lever.

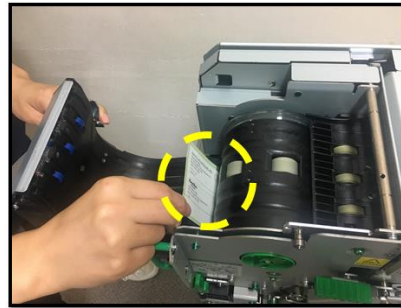


Remove bills and remained substance

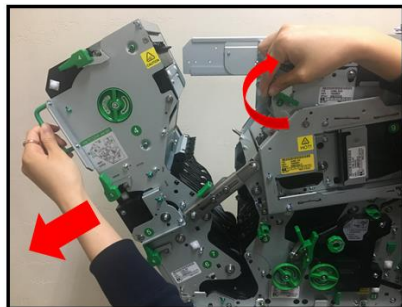

Open BM2 using lever.

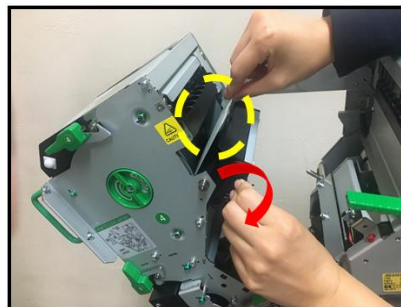

While opening guide, remove bills and remained substance

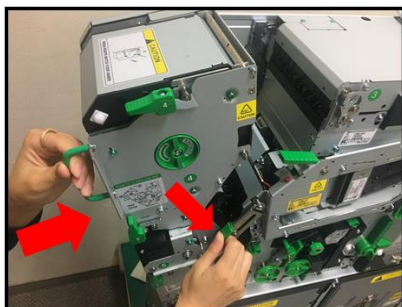


Close BM2 pushing PL lock and handle.
(Caution; Risk of pinching hand)

Remove jam from Recog Transport Section

- ▶ Zone ⑤, Inside the Recog.
- ▶ Location LED D Blinks



1. If there is a jam on Zone ⑤, pull the Recog lever in the arrow direction as shown in the picture and open the Recog Transport Section.
2. Remove a jammed Note or foreign substances. If necessary, turn the green knob clockwise or counterclockwise to easily remove the jammed Note as shown in the picture below.
3. After checking if the jammed Note is removed, completely close the Recog Transport Section.

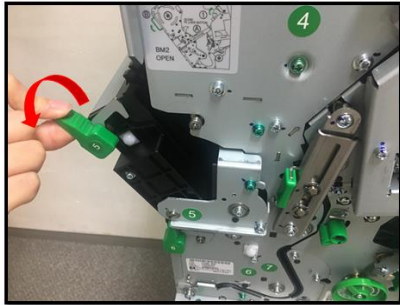

Open Recog using lever.



Remove bills and remained substance.

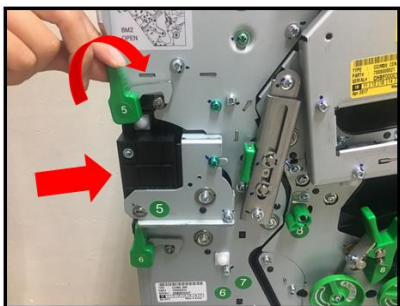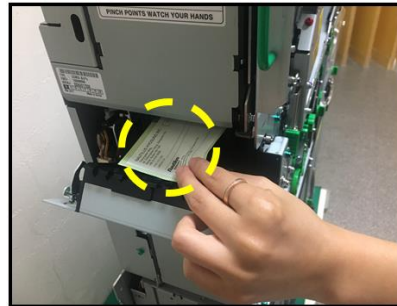

Close Recog using lever.

(Caution; Risk of pinching hand)


Remove jam from the B2 Upper Transport Path of BM2

- ▶ Zone ⑥, B2 Upper Transport Section of BM2.
- ▶ Location LED E Blinks

1. If there is a jam on Zone ⑥, push the lever lever in the arrow direction as shown in the picture and open Zone ⑥.
2. Remove a jammed Note or foreign substances. If necessary, turn the green knob clockwise or counterclockwise to easily remove the jammed Note as shown in the picture below.
3. After checking if the jammed Note is removed, completely close Zone ⑥ as shown in the picture.



Once you open BM2 using lever, remove bills and remained substance rotating KNOB three or four times

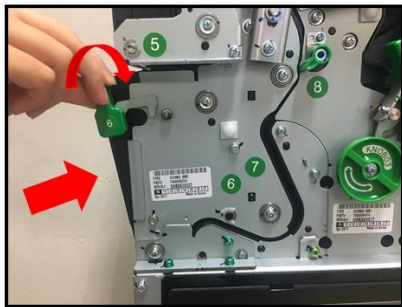


Close BM2 using lever



Remove jam from B2 Reject Transport Section

- ▶ Zone ⑦, B2 Bottom Transport Section of BM2.
- ▶ Location LED E or F Blinks


1. If there is a jam on Zone ⑦-1, ⑦-2, push the lever in the arrow direction as shown in the picture and open the BM2 Transport Section.
2. Remove a jammed Note or foreign substances.
3. After checking if the jammed Note is removed, completely close BM2 Transport Section as shown in the picture.
4. If it is necessary to remove the inside jam of REJECT

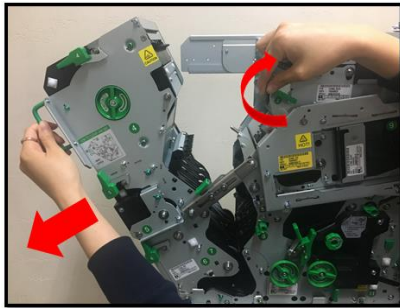

Once you open BM2 using lever, check bills and remained substance

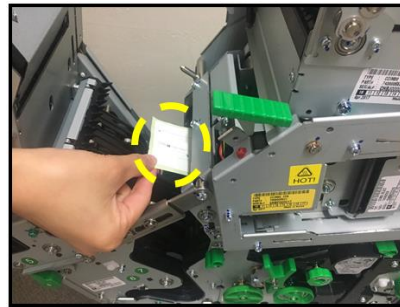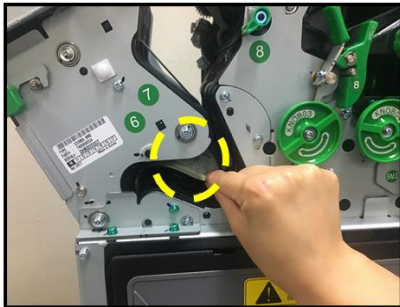

Remove bills and remained substance.

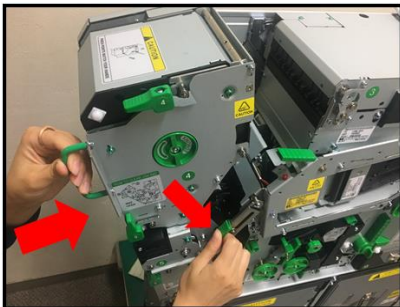


Close BM2 pushing the PL lock and handle.

(Caution; Risk of pinching hand)

Remove jam from B3 Transport Section

- ▶ Zone ⑧, 3WAY1
- ▶ Location LED F Blinks


1. If there is a jam on Zone ⑧, push the lever L7 in the arrow direction as shown in the picture and open Zone ⑧.
2. Remove a jammed Note or foreign substances. If necessary, turn the green knob 3 clockwise or counterclockwise to easily remove the jammed Note as shown in the picture below.
3. After checking if the jammed Note is removed, completely close Zone ⑧ as shown in the picture.

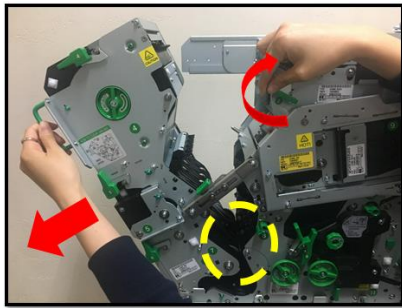

Once you open BM2 using lever,
check bills and remained substance




Open guide using lever.

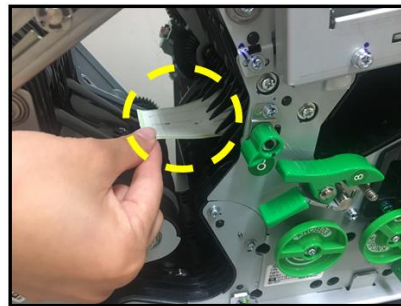

Remove bills and remained substance.



Close guide pushing lever.

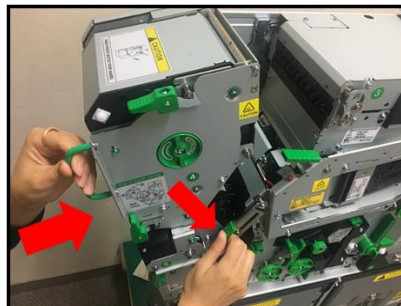

Close BM2 pushing the PL lock and handle.
(Caution; Risk of pinching hand)

Remove jam from Reject Section

- ▶ Zone ⑨, Reject Module
- ▶ Location LED I Blinks

1. If there is a jam on Rejection Section, open the door as shown in the picture.
2. Remove a jammed Note or foreign substances. If necessary, turn the green knob 6 clockwise or counterclockwise to easily remove the jammed Note as shown in the picture below.
3. After checking if the jammed Note is removed, completely close the door.



Once you open RJ cover,
Check bills and remained substance.




While holding RJ door,
Remove it rotating KNOB06 three or four times.


Remove jam from B3 Escrow Transport Section

- ▶ Zone ⑩, 3WAY 2
- ▶ Location LED G Blinks


1. If there is a jam on Zone ⑩, first push the BM3 lever in the arrow direction, and then push the BM3 in the arrow direction as shown in the picture.
2. Remove a jammed Note or foreign substances. If necessary, turn the green knob clockwise or counterclockwise to easily remove the jammed Note as shown in the picture below.
3. After checking if the jammed Note is removed, completely close Zone ⑩ as shown in the picture.

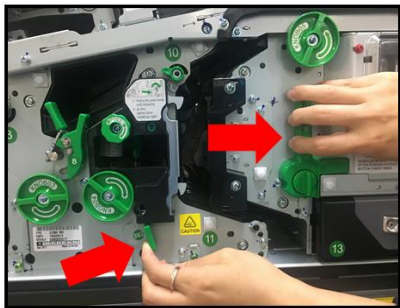

Open BM3 using lever

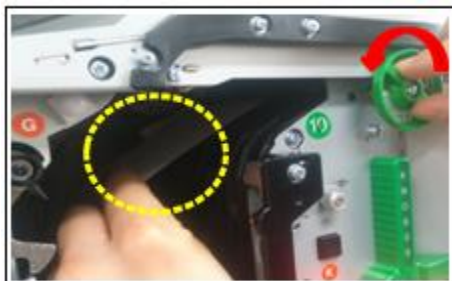

Remove bills and remained substance rotating KNOB three or four times

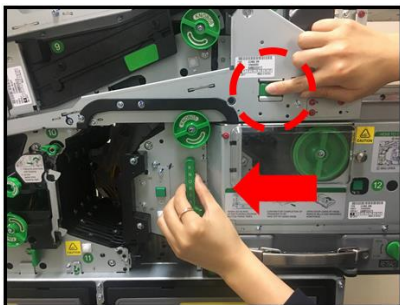


Close BM3 pushing the arrow direction KNOB and PL lock.
(Caution; Risk of pinching hand)


Remove jam from B4 Transport Section

- ▶ Zone ⑪ (B4 GUIDE)
- ▶ Location LED G, K, L or N Blinks


1. If there is a jam on Zone ⑪, first push the BM3 lever L9 in the arrow direction, and then push the BM3 in the yellow arrow direction as shown in the picture.
2. Remove a jammed Note or foreign substances. If necessary, turn the green knob4&5 clockwise or counterclockwise to easily remove the jammed Note as shown in the picture below.
3. After checking if the jammed Note is removed, completely close Zone ⑪ as shown in the picture.

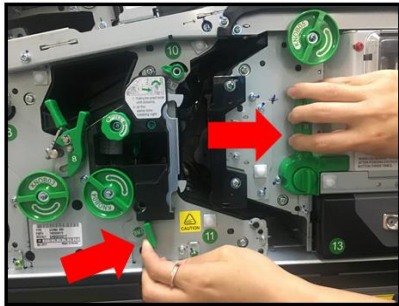

Open BM3 using lever.

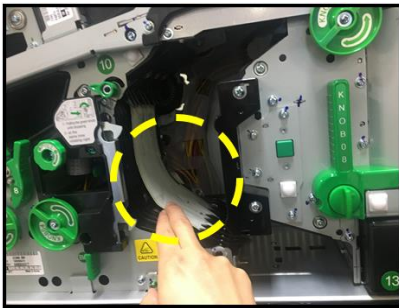

Remove bills and remained substance.

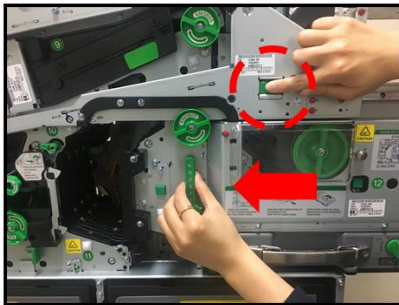


Close BM3 pushing the arrow direction KNOB and PL lock.

(Caution; Risk of pinching hand)

Remove jam from Escrow

- ▶ Zone ⑫, Escrow Module
- ▶ Location LED G or H Blinks


1. If there is a jam on Escrow, remove a jammed Note or foreign substances from the position where the arrow pointed in upper figure. If it is a heavy jam, call the service engineer for clearing it.
2. If necessary, turn the green knob5 clockwise or counterclockwise and move the BM3 (Refer to figures below) to remove the jammed Note more easily.
3. Be careful for the film inside the Escrow not to be missed or damaged during removing the jammed Note or foreign substances.
4. After checking if the jammed Note is removed, completely close BM3 Module.
5. Pushing Escrow button three times, Confirm for completion of transfer to RT.
6. And then come out one note from the escrow module. And remove the note as shown in lower figure. If necessary, repeat it to end.

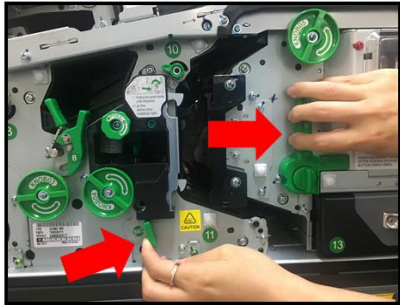

Open BM3 using lever.




Remove bills and remained substance rotating KNOB05 three or four times.

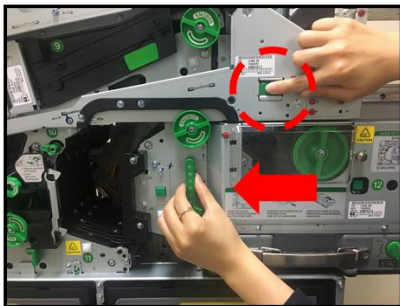

Close BM3 pushing the arrow direction KNOB and PL lock.

(Caution; Risk of pinching hand)

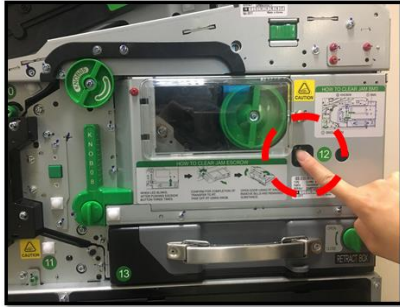

After pushing Escrow button three times, confirm for completion of transfer to RT.



Take off RT using KNOB.



Open door using RT KNOB.



Once you open RT guide,
remove bills and remained substance



Once you close RT door,
lock RT door using KNOB.




Add on RT.


Remove jam from RT/A6 Cassette

- ▶ Zone ⑬, Retract & A6 Cassette
- ▶ Location LED N Blinks

1. To remove the jammed Note more easily, move the BM3 as shown in the picture of “Moving BM3”. (Refer to the picture in the page of “removing jam from Zone ⑪”). And check the jammed Note or the foreign substance with naked eyes and remove it as shown in the picture of “Moving BM3”.
2. If there is a jam in RT/A6 Cassette, separate the RT/A6 Cassette using knob as shown in the picture of “Separating Retract BOX”. And remove a jam as shown in the picture of Removing jam from Retract.
3. To remove a jam or media from inside the RT/A6 Cassette, open the door with the knob (Refer to the picture of “Opening or closing the door of Retract BOX”) and remove the jam by lifting up the A6 Guide as shown in the picture of “Removing jam from Retract Section”.
4. After removing jam, close the door and turn the knob to the left.
5. Then mount the RT/A6 Cassette.

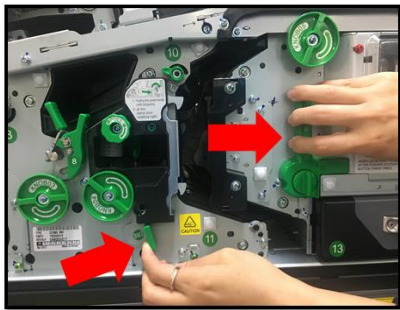

Open BM3 using lever.

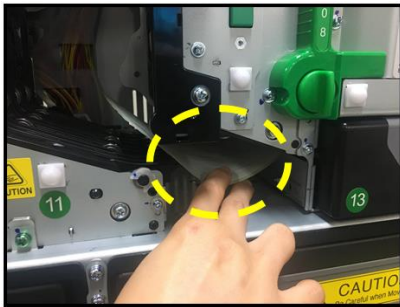

Remove bills and remained substance.



Take off RT using KNOB.



Open door using RT KNOB.




Once you open RT guide,
remove bills and remained substance.



Once you close RT door,
lock RT door using KNOB.



Add on RT.

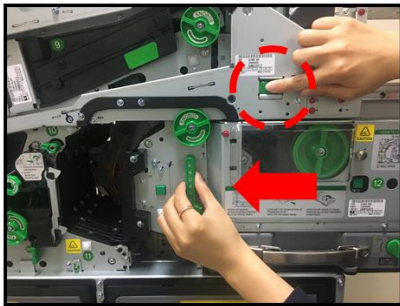

Close BM3 pushing the arrow direction KNOB and PL lock.
(Caution; Risk of pinching hand)

Remove jam from Cassette

- ▶ Zone ⑭, ⑮, Cash & Check Cassette
- ▶ Location LED J or M Blinks

1. If there is a jam in Cassette, separate the Cassette using knob as shown in the picture.
2. Check the jammed Note or the foreign substance with naked eyes and remove it as shown in the picture. To easily remove the jammed Note, turn the green knob 3&4 clockwise or counterclockwise.
To remove a jam or media from inside the Cassette, open the door with the knob. And drop down the Push Plate by pressing the lever to remove the jammed Note.
3. After removing jam, close the door and turn the knob to the left. And then it is locked.
4. To mount the Cassette, turn the knob to the left and remove it.



Take off Cassette using KNOB.



Once you check bills and remained substance in display, remove it.



Open Cassette door using KNOB and handle.



While pushing Cassette lever, pull down Push-plate.



Remove bills and remained substance.



Once you close Cassette door, lock Cassette door using KNOB.



Add on Cassette(into the bottom).

How to change PRT Maintenance Module

How to replace Ink cartridge

► How to replace Ink cartridge


1. Pull out the black knob until stopping (①), at the same time rotate it clockwise (②), and pull it completely as shown in the picture.
2. After opening the black grip (③), insert Ink Cartridge in the cartridge adaptor (④) as shown in the picture. And then release the black grip. Ink cartridge will be locked.

<Note!>

Before mounting Ink Cartridge, see Ink Cartridge installing guide in the packing bag.

3. Push the black knob completely in the green arrow direction (⑤) until you hear the click of the latch, and then it is locked automatically as shown in the picture.

※ After replacing Ink Cartridge, you have to reset "PRT Cartridge Count".
And you may need to replace Ink Head Cleaner Felt if necessary

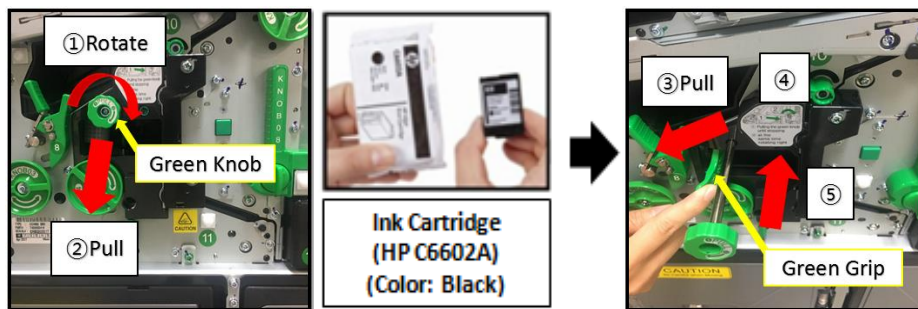

Installing Ink Cartridge

How to reset PRT Cartridge Count

► How to reset PRT Cartridge Count


<Note!>

There are 2 ways to reset PRT Cartridge Count. One is using DIP switch and the button on CCIM. Other is using VDM.


As it is alternative, they can choose one of them for their convenience.

Case 1. Using DIP switch and the button on CCIM30

1. Replace Ink Cartridge (Refer to "1) How to replace Ink Cartridge")
2. Lift up the DIP Switch 1 as shows the picture (DIP Switch 1).
3. Press the green button on PRT capping module installed BM3 for 3 seconds as shows the picture (Pressing the green button).
4. Push down DIP Switch 1

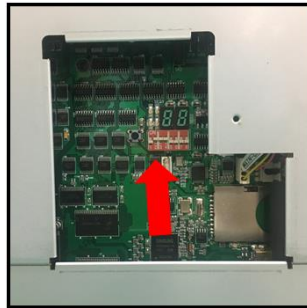

DIP Switch up 2,3,4

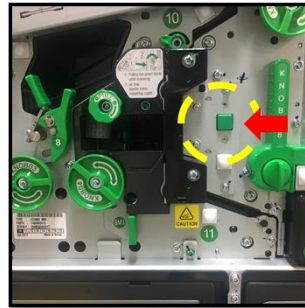


Pressing the green button


How to replace Ink Head Cleaner Felt

► How to replace Ink Head Cleaner Felt

1. Open BM3 using lever and disassemble the felt unit step by step as shows the picture (Disassembling the Felt Unit).
At that time, Rotate two captive screws counterclockwise completely.
2. Rotate the felt adaptor as shows the picture (Replacing Ink Head Cleaner Felt), and remove the old one by using the pin set.
3. After replacing the new one by removing the tape, assemble the felt unit in the reverse process.

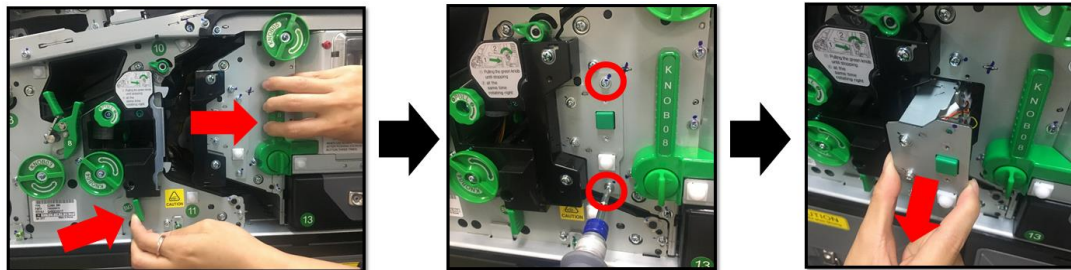

Disassembling(Bolt two M3) the Felt Unit

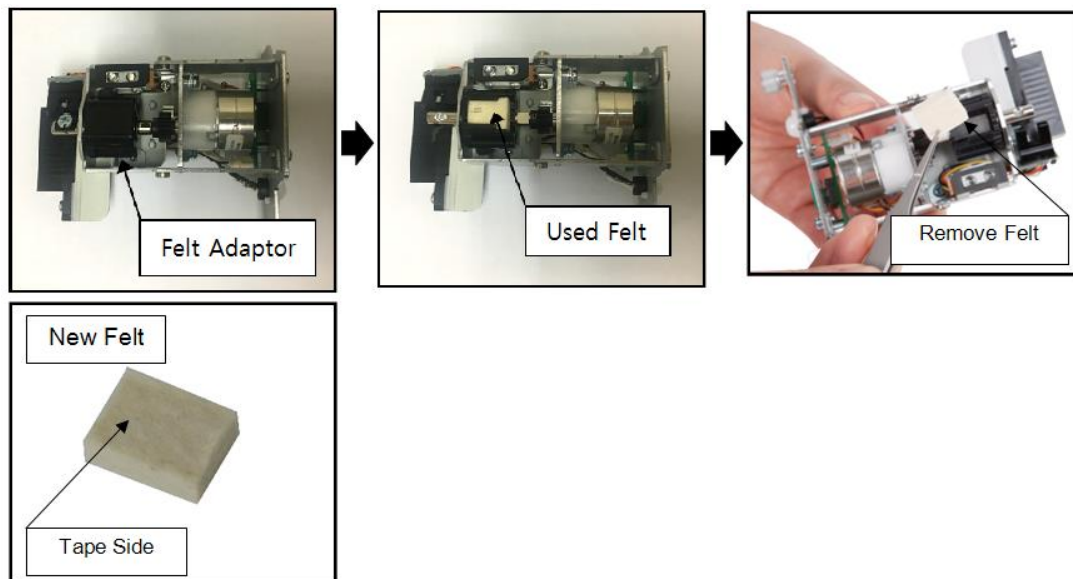

Replacing Ink Head Cleaner Felt

Chapter6. Receipt Printer

Overview

- The Receipt Printer is located on the right side when opening the rear panel, and can be divided into 3 assemblies, Body Assembly, TPH (Thermal Printing Head) Assembly, Outlet Assembly.


The Body Assembly contains the hopper for the paper roller and the controller board. Next to the hopper is a sensor that detects the paper low status and issues a warning. This Body Assembly has a mechanism that reduces the stress coming from the paper roll and maintains paper tension. Also, if an attendant inserts the paper into machine, it automatically sets the paper and performs an advance paper and cut.

TPH (Thermal Printing Head) Assembly is a printing engine equipped with a thermal printing head and a cutter. It prints out what has been commanded by the Host, cuts the printed output and sends it to the Outlet Assembly.

Outlet Assembly has a long transport section which enables landscape printing. It is also easy to maintain or repair in case of receipt jams because of its open structure.

Basic Specifications

- Basic specifications of receipt printer are summarized as follows.

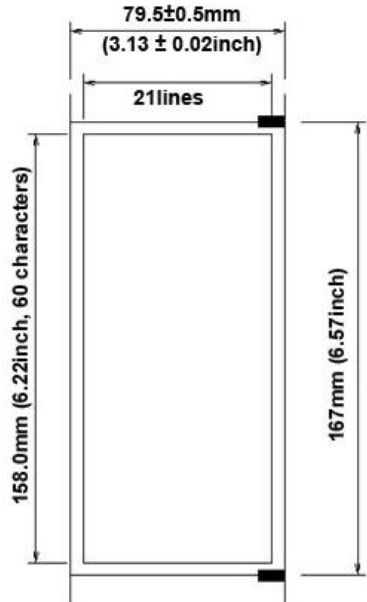Item		Specifications	Note
Printing Type		THERMAL LINE Printing Type	(8dots/mm)
Maximum Print Length		60 Print/line (based on Alpha Numeric value)	
No. of Print Lines		Max. 21lines/print (based on 1print=167mm (6.57inch))	
Valid Printing Width		Max. 158mm (6.22inch)	
Type of Printer Letter		Chinese, English/Numbers (Alphanumeric), Latin, Japanese, Korean, Arabic, Russian, Greek, Hebrew, Coptic	
Paper	Type	Inside Printing Thermal	

		Paper	
	Width	79.5±0.5mm (3.13±0.02inch)	
	Exterior	Max. ϕ 210mm \pm 2	
Type of Paper Setting		Semi-Auto loading	
Type of Receipt Dispensing		Single Dispense	
END Detection Function		Yes	
No. of Transaction		Approximately 5,000 transaction/Roll	Depending on format
Remaining Paper Quantity Detection		Approximately from 350 transactions	1transaction=167mm (6.57inch, thin type : 55gsm)

Paper Handling Precautions

► Paper Handling Precautions


1. Store it away from high temperature and humidity:
If the paper is stored in a place where temperature is above 50°C (122°F) or humidity is above 90% RH, the coloring capability may deteriorate or the paper surface may inflate.
2. Refrain from exposing to direct sunlight:
The paper surface can be inflated if you expose it to direct sunlight or leave it under the fluorescent lamp for a long time.
3. Keep it away from the organic solvents:
Paper color may change if the paper comes in contact with organic solvents or glues containing organic solvent.
4. Keep it away from plastics:
If the paper comes in contact with materials containing plastics, its coloring capability may deteriorate or de-coloring of the paper may occur.
5. Store the paper roll separately to prevent damage to the paper.
6. Do not connect the papers with tape.
7. Make sure the paper end is not attached to the paper pipe.
8. Make sure the paper is rolled evenly.
9. Miscellaneous:
If the paper comes in contact with carbon copy paper or if the paper surface is scratched with a metallic object, de-coloring may occur.

How to load the receipt paper


- Prior to loading the receipt paper, the following must be kept in mind.

<Note!>


- Load a paper roll into the unit with the shape of the roll kept intact.
(Deformed roll may cause jamming.)

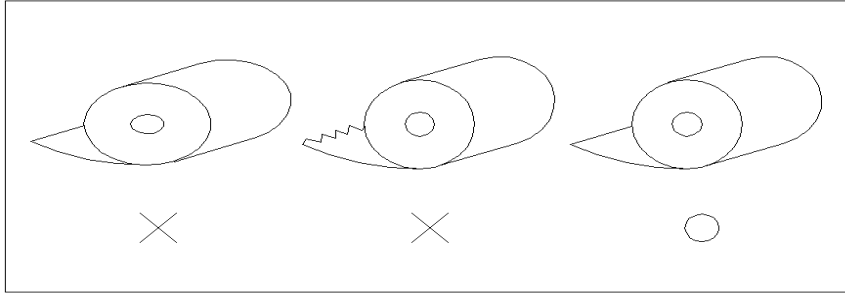


- The leading edge of the roll shall neatly be cut prior to loading the roll.
- To load the paper roll into the printer, please follow the procedure below.
 1. Open the system door with key.
 2. Retract printer assembly from the rail assembly, this can be accomplished by pressing the button and then pulling out the printer towards you.

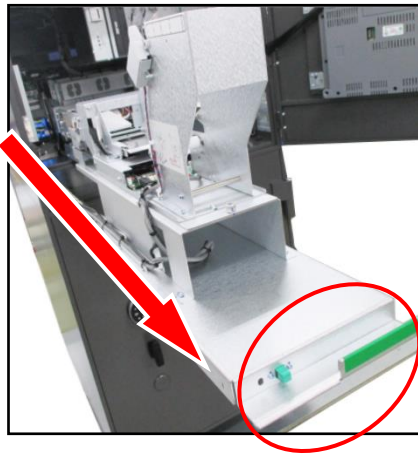


3. Insert the paper axis into the center of receipt roll and mount it onto the charger.

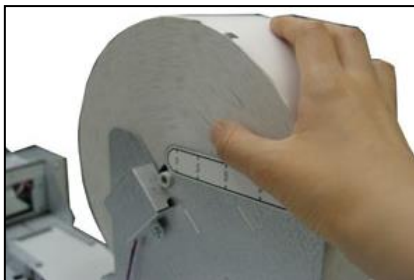

4. Have receipt paper go down the white tension bar as shown in the picture and then pull it forward.
5. Push the receipt paper inside the supporting bracket, as shown in the picture. Then it will be set automatically if turning on the power

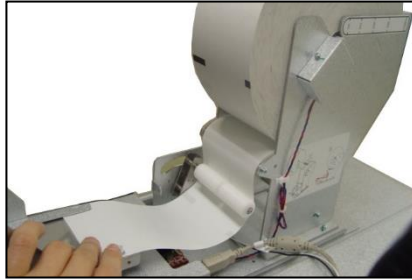
**<Note!>**

Refer to diagram stickers placed on either side of the center section of the thermal printer.

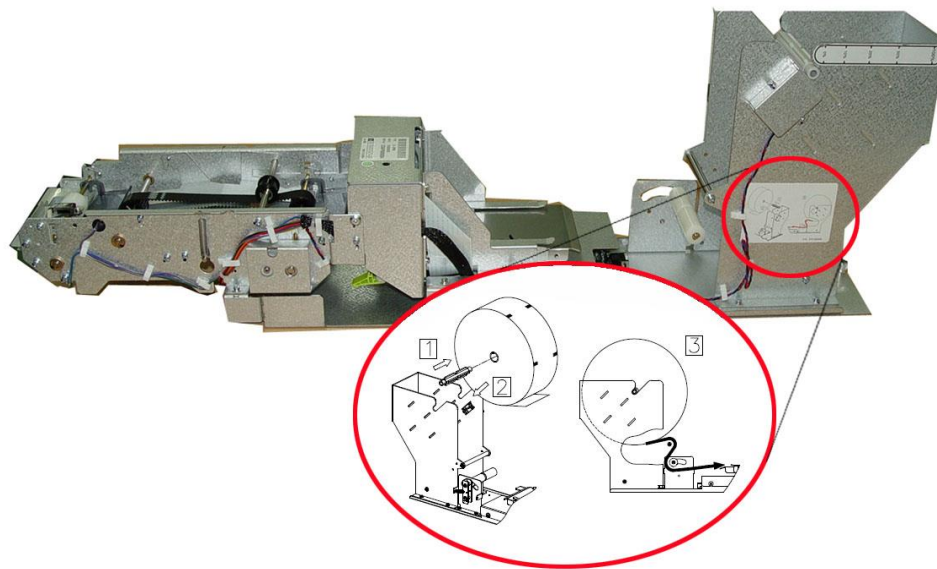


How to clear jamming in receipt printer


- ▶ 1. Release the lever by moving it clockwise. (A) Listen for a click.
- 2. Gently pull paper away from the print head. (B)

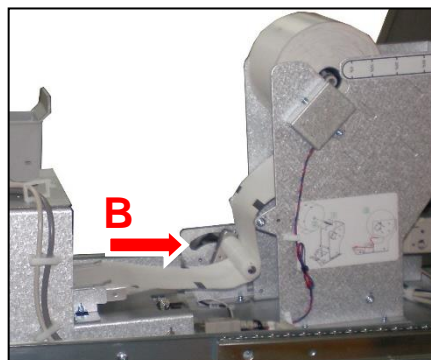

- 3. Search for jammed paper and carefully remove it. Rotate the wheel to assist in removing jammed paper. (C)
- 4. Push the lever to lock it back in place. (D)

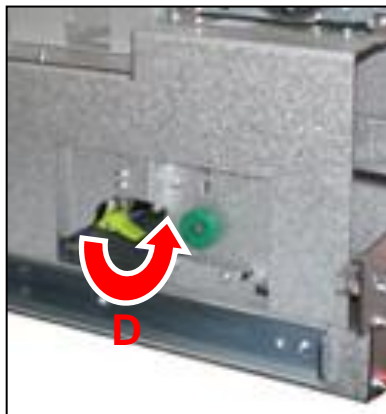

- 5. Reinsert the paper back into printer until it catches (E) and prints a test receipt. Run Diagnostics if necessary.

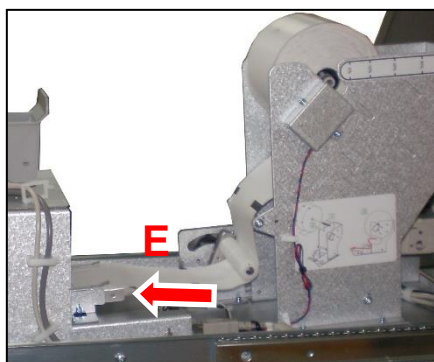

Notes