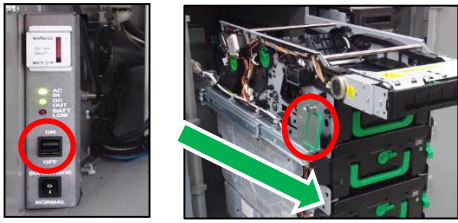
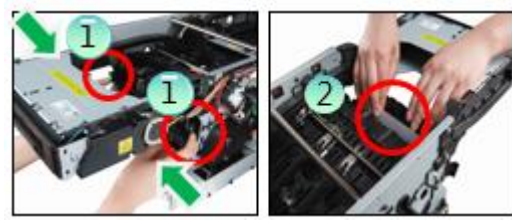

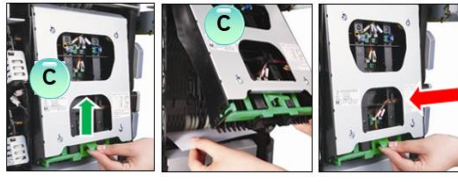

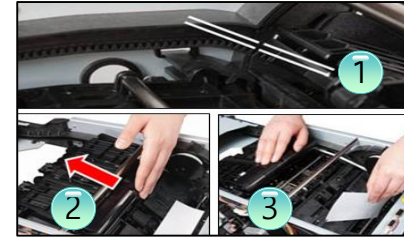
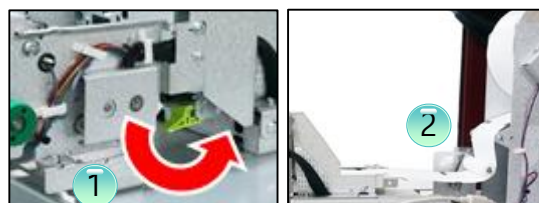
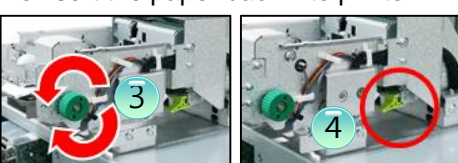
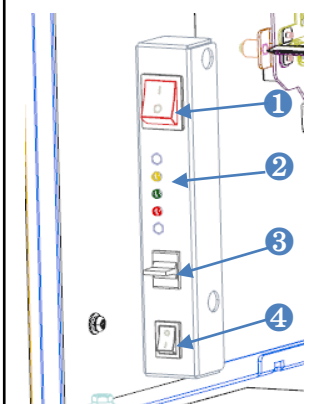
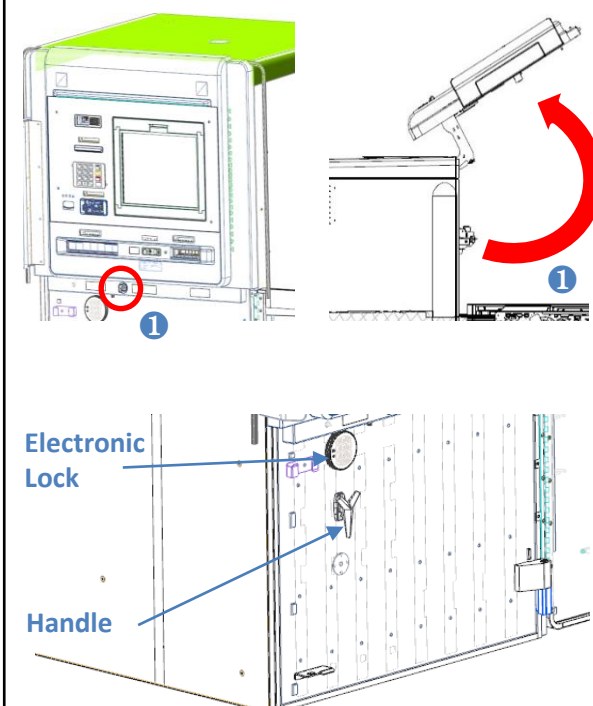
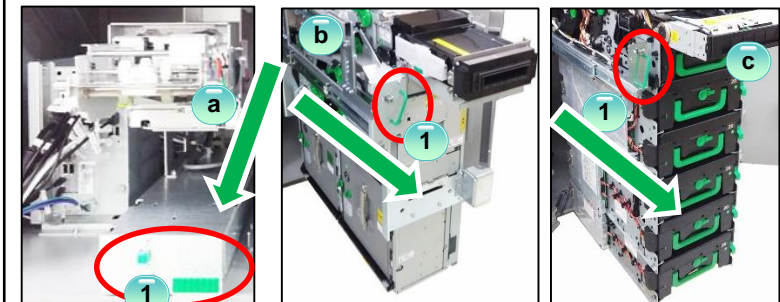
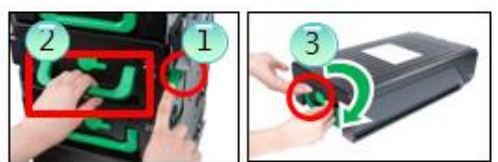



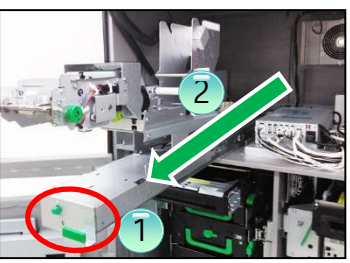
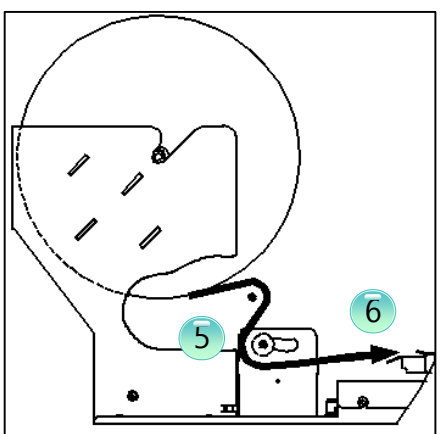
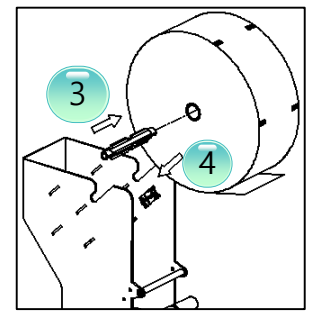


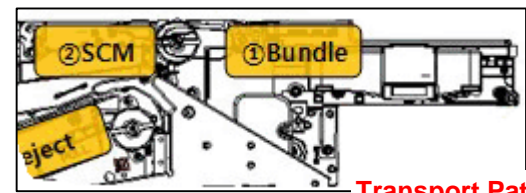
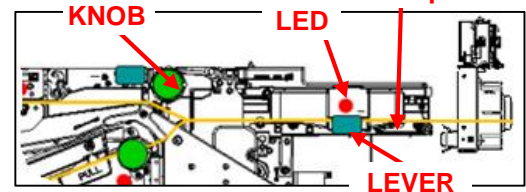



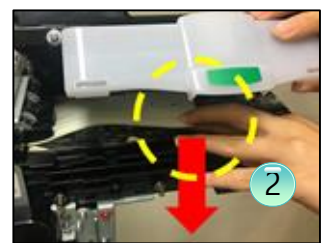
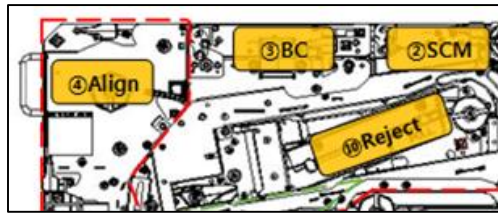
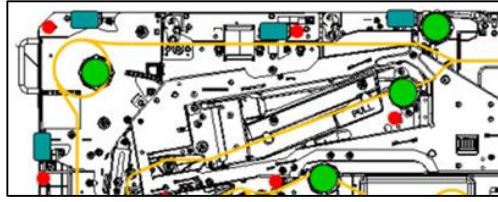
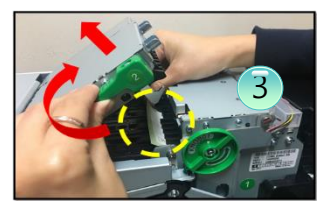
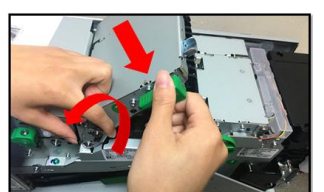
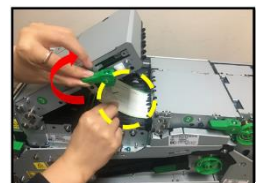
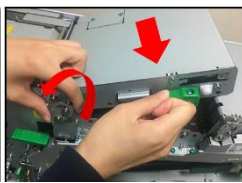
<p>7</p>	<p>CDU Jam</p> <p>● Power down (See "ATM Power On/Off) and then undock the CDU by pressing the button and pulling the handle toward you.</p> <p>7-1</p>  <p>● Removing jam from upper horizontal transport path (1)</p> <ul style="list-style-type: none"> - Pull the lever (①) in the direction of arrow. - Remove the jammed note (②). <p>7-2</p>  <p>● Removing jam from upper horizontal transport path (2)</p> <ul style="list-style-type: none"> - Pull the lever (see the picture of 7-2) and lift up A part as the picture below. Then remove the jammed bill. - Put down the A part and press the B part until it fixes. <p><Note> Do NOT put down the A part after first closing the B part.</p> <p>7-3</p> 	<p>● Removing jam from the Vertical transport path</p> <ul style="list-style-type: none"> - Pull the lever with lifting it up and open C part. Then remove the jammed bill. - Press the lever until C part fixes. <p>7-4</p>  <p>● Removing jam from the carriage</p> <ul style="list-style-type: none"> - Rotate the carriage by turning the knob (D) and remove the jammed bill. - After removing the jammed bill, turn the knob (D) and return the carriage to the original position. <p>7-5</p>  <p>● Removing jam from the transport path of main body</p> <ul style="list-style-type: none"> - Turn the knob (D) and match the tooth form (①). - Lift up the carriage and move it to the throat. (②) - Turn the knob (D) and move the jams to the position to clear it easily. Then remove jam (③). <p>7-6</p> 
-----------------	--	--

<p>8</p>	<p>SPR Jam</p> <ul style="list-style-type: none"> ● Release the lever by moving it to the left. (①) Listen for a click. ● Gently pull paper away from the print head. (②) <p>8-1</p> 	<ul style="list-style-type: none"> ● Search for jammed paper and carefully remove it. Rotate the wheel to assist in removing jammed paper. (③) ● Push the lever to lock it back in place. (④) ● Reinsert the paper back into printer. <p>8-2</p> 
-----------------	--	---

<p>1</p>	<p>ATM Power On/Off</p>  <table border="1" data-bbox="1720 181 1935 504"> <tr> <td>①</td> <td>Main Switch</td> </tr> <tr> <td>②</td> <td>LED</td> </tr> <tr> <td>③</td> <td>Power Switch</td> </tr> <tr> <td>④</td> <td>Mode Switch</td> </tr> </table> <ul style="list-style-type: none"> ➢ ATM Power On <ul style="list-style-type: none"> • Open the lower exterior door using key. (①) • Open the upper front hatch pulling it upward. (②) • Check that Main Switch is turned "ON" (③). • Press the Power Switch for more 1 second in the direction of "ON" (④). ➢ ATM Power Off <ul style="list-style-type: none"> • Press the Power Switch for more 1 second in the direction of "OFF". (Make sure that Main Switch is turned on. Do NOT operate Main Switch.) 	①	Main Switch	②	LED	③	Power Switch	④	Mode Switch	<p>2</p> <p>Security Door Open/Close</p>  <ul style="list-style-type: none"> ➢ Security Door Open <ul style="list-style-type: none"> • Open the out door. • Open the fascia using the key. (①) • Unlock the locking device and open the safety door. (③) ➢ Opening the Electronic Lock <ul style="list-style-type: none"> • Enter valid six (6) digit combination. • (Set to 1-2-3-4-5-6) • The lock will confirm a valid combination entry with a double signal. • Within four (4) seconds, turn the keypad to the open position (clock-wise) if using a dead bolt style lock, or turn the handle to the open position if using a swing bolt style lock. • Pull door open.
①	Main Switch									
②	LED									
③	Power Switch									
④	Mode Switch									
<p>3</p>	<p>Devices of HYOSUNG 7I</p>  <ul style="list-style-type: none"> ➢ Devices of HYOSUNG 7I <ul style="list-style-type: none"> Ⓐ Receipt Printer Ⓑ CCIM Ⓒ CDU10 <p>* To undock, press the button and pull the handle toward you. (①)</p>									

<p>Replenishment (Cash and Paper)</p>		<p>Caution The acceptable condition bills and paper recommended by vendor should be loaded (Refer to Operator Manual)</p>	
<p>4 Cash Replenishment</p>			
4-1	<ul style="list-style-type: none"> Push down the lever (①), and slightly pull out the cassette holding the handle(②) and supporting the cassette from bottom. Then pull out to the end of the cassette. Turn the green lever (③) clockwise. 	4-3	<ul style="list-style-type: none"> Load the notes in cassette (⑦). Press the green lever (⑧) and push the Push-Plate in the direction of arrow (⑨). 
4-2	<ul style="list-style-type: none"> Open the cassette cover (④). Press the green lever (⑤) and pull the Push-Plate in the direction of arrow (⑥). 	4-4	<ul style="list-style-type: none"> Close the cassette cover Turn the green lever (⑩) clockwise. Insert the cassette into CDU and push it until the lever (⑪) is locked. 

<p>5 Receipt Paper Replenishment</p>			
5-1	<ul style="list-style-type: none"> Press the button (①) and pull out the printer towards you (②) holding handle. 	5-3	<ul style="list-style-type: none"> Have receipt paper go down the white tension bar and then pull it forward (⑤). Push the receipt paper inside the supporting bracket (⑥). Then it will be set automatically if turning on the power. 
5-2	<ul style="list-style-type: none"> Insert the paper axis into the center of receipt roll (③) and mount it onto the charger (④). 		

<p>Jam (CCIM, CDU10 and K-SPR11)</p>		<p>Caution Before clearing jam, you should power off for your safety. After clearing, reset the device.</p>	
<p>6 CCIM Jam</p>			
<p>❖ Images below are for illustration only</p> <p>● Removing jam from Bundle Module</p> <p>✓ Inside the Bundle Section</p>  		<p>● Removing jam from First Transport Path</p> <p>✓ Inside the SCM or Bundle Section</p> <ol style="list-style-type: none"> Push the lock lever and open the First Transport Path. Remove a jammed bill or foreign substances. After checking if the jammed bill is removed, completely close the First Transport Path pushing the SCM lever.   <p>Open SCM using lever</p> <p>Close SCM using PL lock & lever (Caution: Risk of pinching hand)</p>	
<p>Case1.</p> <ol style="list-style-type: none"> Open the door. (①) While holding Bundle door and pressing Bill-press, remove a jammed note or foreign substances (②).  		<p>● Removing jam from BC</p> <p>✓ BC or SCM or ALG</p>  	
<p>6-1</p> <p>Case2.</p> <ol style="list-style-type: none"> After opening the Bundle Module (①) and SCM, remove a jammed note (③).  <p><Note!> Close SCM using PL lock and lever. (Caution: Risk of pinching hand)</p> 		<ol style="list-style-type: none"> Push the lock lever and open the BC section. Remove a jammed Note or foreign substances. After checking if the jammed Note is removed, completely close the BC section by pushing the lever & PL lock.   <p>Open BC using lever and remove Jam</p> <p>Close BC using PL lock and lever. (Caution: Risk of pinching hand)</p>	