
HYOSUNG 7T Quick Reference Guide

8 CDU Jam

 Power down (See "ATM Power On/Off) and then undock the CDU by pressing the button and pulling the handle toward you.

8-1

 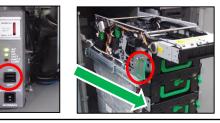


Removing jam from upper horizontal transport path (1)

- Pull the lever (1) in the direction of arrow.
- Remove the jammed note (②).

8-2

8-3





8-5

8-4

Removing jam from the Vertical transport path

- Pull the lever with lifting it up and open
 C part. Then remove the jammed bill.
- Press the lever until C part fixes.

C





• Removing jam from the carriage

- Rotate the carriage by turning the knob (D) and remove the jammed bill.
- After removing the jammed bill, turn the knob (D) and return the carriage to the original position.

 






Removing jam from upper horizontal transport path (2)

- Pull the lever (see the picture of 7-2) and lift up A part as the picture below. Then remove the jammed bill.
- Put down the **A** part and press the **B** part until it fixes.
- <Note> Do NOT put down the A part after first closing the B part.







Removing jam from the transport path of main body

 
- Turn the knob (D) and match the tooth form (1).
- Lift up the carriage and move it to the throat. (②)
- Turn the knob (D) and move the jams to the position to clear it easily. Then remove jam (3).



9 SPR Jam

- Release the lever by moving it clockwise. (①)
 Listen for a click.
- Gently pull paper away from the print head.
 (2)

9-1




- Search for jammed paper and carefully remove it. Rotate the wheel to assist in removing jammed paper. (3)
- Push the lever to lock it back in place.
 (4)
- Reinsert the paper back into printer.



PAGE 4 OF 4

HYOSUNG 7T Quick Reference Guide

1 System Power On/Off

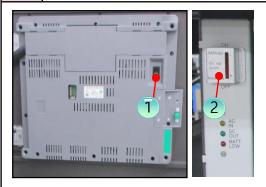

> System Power On

- Open the rear door.
- Press the standby switch to "ON" side (1).
 (Main power switch should be "ON" (2))

> System Power Off

Press the power switch ("OFF") for 1 second.
 (Make sure that Main Switch is turned on.
 Do NOT operate Main Switch.)


2 Locking Device Open



Locking Device Open


- Enter valid six (6) digit combination. (Set to 1-2-3-4-5-6)
- The lock will confirm a valid combination entry with a double signal.
- Within four (4) seconds, turn the keypad to the open position (clock-wise) if using a dead bolt style lock, or turn the handle to the open position if using a swing bolt style lock.
- · Pull door open.

Accessing the ATM Servicing Screen when the Hood is in the Open Position

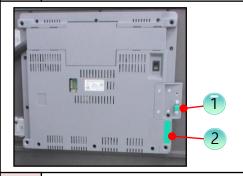

- ➤ To open, press the button (1) and pull the handle (2) toward you.
- To close, swing the panel back in the original, closed position.

Devices of HYOSUNG 7T

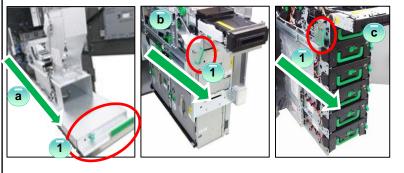

Devices of HYOSUNG 7T

- a Receipt Printer
- (b) CCIM
- © CDU10
- * To undock, press the button and pull the handle toward you.

 (①)

HYOSUNG 7T Quick Reference Guide

■ Replenishment (Cash and Paper)

Caution

The acceptable condition bills and paper recommended by vendor should be loaded (Refer to Operator Manual)

5 Cash Replenishment

● Push down the lever (①), and slightly pull

- Load the notes in cassette (⑦).
- Press the green lever (®) and push the Push-Plate in the direction of arrow (⑨).

pull out to the end of the cassette.

Turn the green lever (③) clockwise.



out the cassette holding the handle(2) and

supporting the cassette from bottom. Then

5-3

5-4

6-3



- Open the cassette cover (4).
- Press the green lever (⑤) and pull the Push-Plate in the direction of arrow (⑥).

5-2

 
6-2





Close the cassette cover


- Turn the green lever (⑩) clockwise.
- Insert the cassette into CDU and push it until the lever (①) is locked.





6 Receipt Paper Replenishment

 Press the button (1) and pull out the printer towards you (2) holding handle.

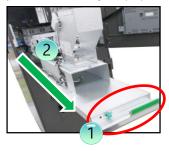

 Insert the paper axis into the center of receipt roll and mount it onto the charger.



- Have receipt paper go down the white tension bar and then pull it forward.
- Push the receipt paper inside the supporting bracket. Then it will be set automatically if turning on the power.



HYOSUNG 7T Quick Reference Guide


■ Jam (CCIM, CDU10 and K-SPR8)


7 CCIM Jam

Images below are for illustration only

•Removing jam from Bundle Module

  ✓ Inside the Bundle Section






Case1.

7-1

 - 1. Open the door. (1)
- 2. While holding Bundle door and pressing Bill-press, remove a jammed note or foreign substances (②).





Case2

1. After opening the Bundle Module (①) and SCM, remove a jammed note (③).



<Note!> Close SCM using PL lock and lever. (Caution: Risk of pinching hand)



Cautio

7-2

7-3

Before clearing jam, you should power off for your safety. After clearing, reset the device.

• Removing jam from First Transport Path

- ✓ Inside the SCM or Bundle Section
- 1. Push the lock lever and open the First Transport Path.
- 2. Remove a jammed bill or foreign substances.
- After checking if the jammed bill is removed, completely close the First Transport Path pushing the SCM lever.



 


 
Open SCM using lever

Close SCM using PL lock & lever (Caution: Risk of pinching hand)

• Removing jam from BC

✓ BC or SCM or ALG





- 1. Push the lock lever and open the BC section.
- 2. Remove a jammed Note or foreign substances.
- After checking if the jammed Note is removed, completely close the BC section by pushing the lever & PL lock.





Open BC using lever and remove Jam

Close BC using PL lock and lever. (Caution: Risk of pinching hand)

PAGE 2 OF 4