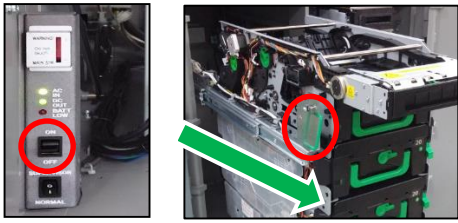
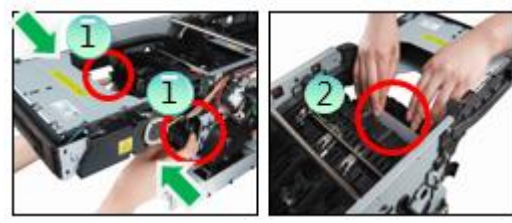

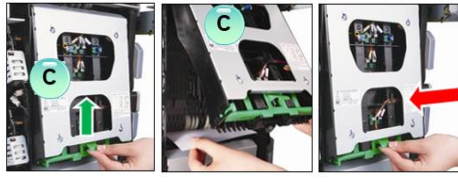
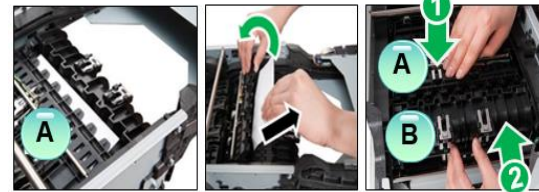
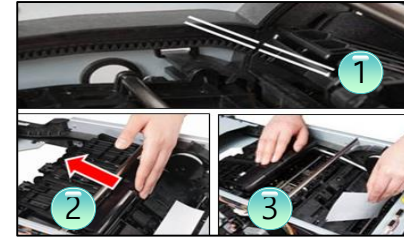
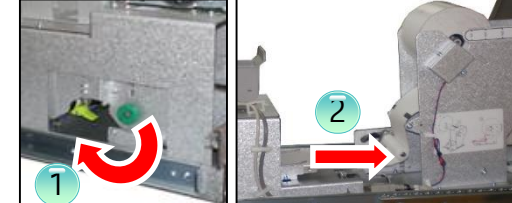
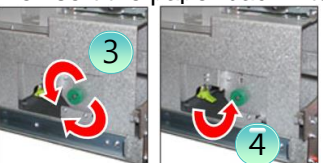
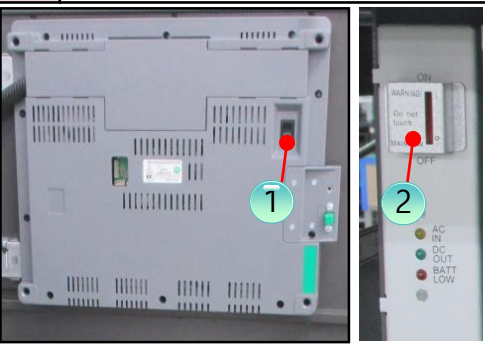

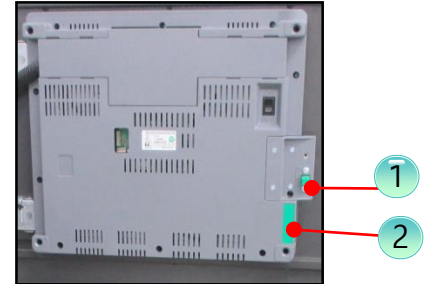
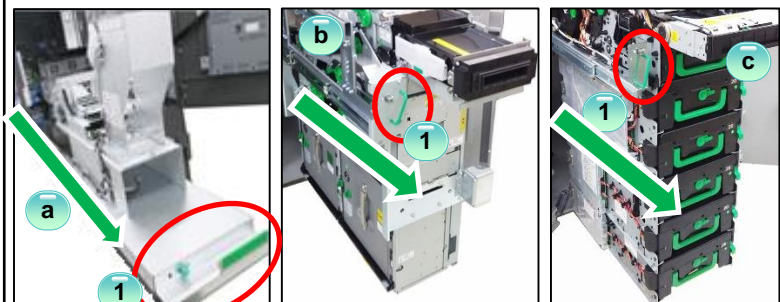
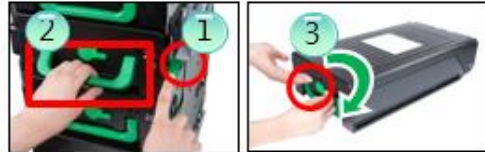


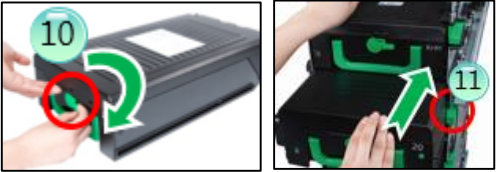


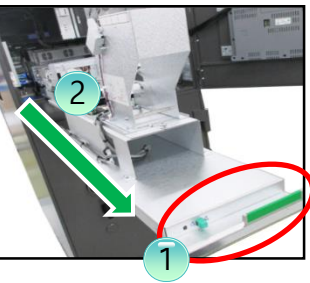

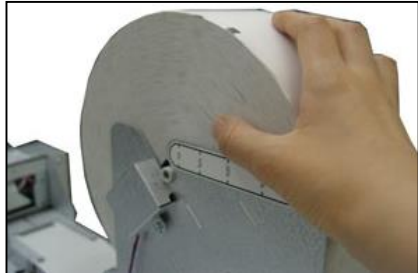
<p><b>8</b></p>	<p><b>CDU Jam</b></p> <p>● Power down (See "ATM Power On/Off) and then undock the CDU by pressing the button and pulling the handle toward you.</p> <p>8-1</p>  <p>● <b>Removing jam from upper horizontal transport path (1)</b>                  - Pull the lever (①) in the direction of arrow.                  - Remove the jammed note (②).</p> <p>8-2</p>  <p>● <b>Removing jam from upper horizontal transport path (2)</b>                  - Pull the lever (see the picture of 7-2) and lift up A part as the picture below. Then remove the jammed bill.                  - Put down the A part and press the B part until it fixes.                  &lt;Note&gt; Do NOT put down the A part after first closing the B part.</p> <p>8-3</p> 	<p>● <b>Removing jam from the Vertical transport path</b>                  - Pull the lever with lifting it up and open C part. Then remove the jammed bill.                  - Press the lever until C part fixes.</p> <p>8-4</p>  <p>● <b>Removing jam from the carriage</b>                  - Rotate the carriage by turning the knob (D) and remove the jammed bill.                  - After removing the jammed bill, turn the knob (D) and return the carriage to the original position.</p> <p>8-5</p>  <p>● <b>Removing jam from the transport path of main body</b>                  - Turn the knob (D) and match the tooth form (①).                  - Lift up the carriage and move it to the throat. (②)                  - Turn the knob (D) and move the jams to the position to clear it easily. Then remove jam (③).</p> <p>8-6</p> 
-----------------	--	--

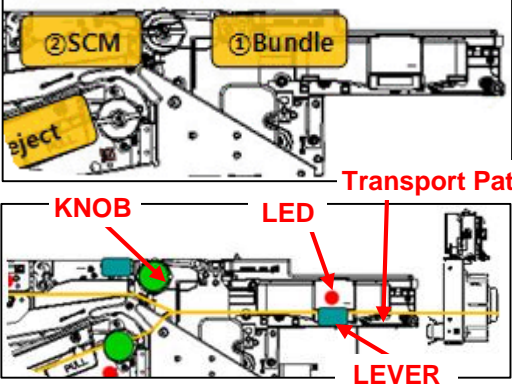
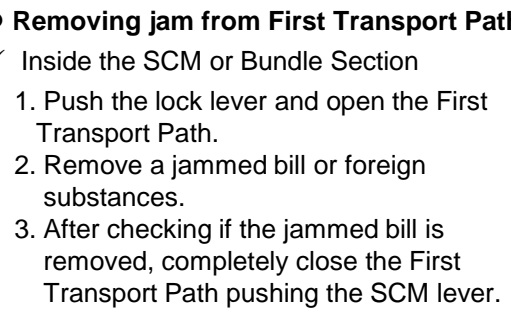
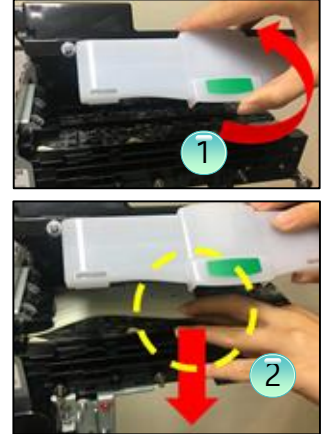

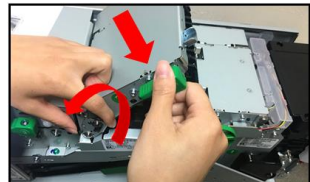
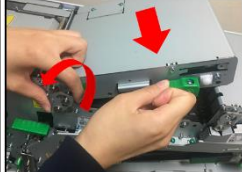
<p><b>9</b></p>	<p><b>SPR Jam</b></p> <p>● Release the lever by moving it clockwise. (①)                  Listen for a click.                  ● Gently pull paper away from the print head. (②)</p> <p>9-1</p> 	<p>● Search for jammed paper and carefully remove it. Rotate the wheel to assist in removing jammed paper. (③)                  ● Push the lever to lock it back in place. (④)                  ● Reinsert the paper back into printer.</p> <p>9-2</p> 
-----------------	---	---

Note: Print this guide on the both sides of paper (turning page to short side) and fold this in half.

<p><b>1</b></p>	<p><b>System Power On/Off</b></p>  <p>➤ <b>System Power On</b></p> <ul style="list-style-type: none"> <li>Open the rear door.</li> <li>Press the standby switch to "ON" side (1). (Main power switch should be "ON" (2))</li> </ul> <p>➤ <b>System Power Off</b></p> <ul style="list-style-type: none"> <li>Press the power switch ("OFF") for 1 second. (Make sure that Main Switch is turned on. Do NOT operate Main Switch.)</li> </ul>
<p><b>2</b></p>	<p><b>Locking Device Open</b></p>  <p>➤ <b>Locking Device Open</b></p> <ul style="list-style-type: none"> <li>Enter valid six (6) digit combination. (Set to 1-2-3-4-5-6)</li> <li>The lock will confirm a valid combination entry with a double signal.</li> <li>Within four (4) seconds, turn the keypad to the open position (clock-wise) if using a dead bolt style lock, or turn the handle to the open position if using a swing bolt style lock.</li> <li>Pull door open.</li> </ul>
<p><b>3</b></p>	<p><b>Accessing the ATM Servicing Screen when the Hood is in the Open Position</b></p>  <p>➤ To open, press the button (1) and pull the handle of (2) toward you.</p> <p>➤ To close, swing the panel back in the original, closed position.</p>
<p><b>4</b></p>	<p><b>Devices of HYOSUNG 7D</b></p>  <p>➤ <b>Devices of HYOSUNG 7D</b></p> <ul style="list-style-type: none"> <li>Ⓐ Receipt Printer</li> <li>Ⓑ CCIM</li> <li>Ⓒ CDU10</li> </ul> <p>* To undock, press the button and pull the handle toward you. (①)</p>

<b>■ Replenishment (Cash and Paper)</b>		<b>Caution</b> The acceptable condition bills and paper recommended by vendor should be loaded (Refer to Operator Manual)	
<b>5 Cash Replenishment</b>			
<b>5-1</b>	<ul style="list-style-type: none"> <li>Push down the lever (①), and slightly pull out the cassette holding the handle(②) and supporting the cassette from bottom. Then pull out to the end of the cassette.</li> <li>Turn the green lever (③) clockwise.</li> </ul> 	<b>5-3</b>	<ul style="list-style-type: none"> <li>Load the notes in cassette (⑦).</li> <li>Press the green lever (⑧) and push the Push-Plate in the direction of arrow (⑨).</li> </ul> 
<b>5-2</b>	<ul style="list-style-type: none"> <li>Open the cassette cover (④).</li> <li>Press the green lever (⑤) and pull the Push-Plate in the direction of arrow (⑥).</li> </ul> 	<b>5-4</b>	<ul style="list-style-type: none"> <li>Close the cassette cover</li> <li>Turn the green lever (⑩) clockwise.</li> <li>Insert the cassette into CDU and push it until the lever (⑪) is locked.</li> </ul> 

<b>6 Receipt Paper Replenishment</b>			
<b>6-1</b>	<ul style="list-style-type: none"> <li>Press the button (①) and pull out the printer towards you (②) holding handle.</li> </ul> 	<b>6-3</b>	<ul style="list-style-type: none"> <li>Have receipt paper go down the white tension bar and then pull it forward.</li> <li>Push the receipt paper inside the supporting bracket. Then it will be set automatically if turning on the power.</li> </ul> 
<b>6-2</b>	<ul style="list-style-type: none"> <li>Insert the paper axis into the center of receipt roll and mount it onto the charger.</li> </ul> 		

<b>■ Jam (CCIM, CDU10 and K-SPR8)</b>		<b>Caution</b> Before clearing jam, you should power off for your safety. After clearing, reset the device.	
<b>7 CCIM Jam</b>			
❖ Images below are for illustration only			
<b>● Removing jam from Bundle Module</b>			
✓ Inside the Bundle Section			
<b>7-1</b>		<b>7-2</b>	
 <p><b>Case1.</b></p> <ol style="list-style-type: none"> <li>Open the door. (①)</li> <li>While holding Bundle door and pressing Bill-press, remove a jammed note or foreign substances (②).</li> </ol>		 <p><b>● Removing jam from First Transport Path</b></p> <p>✓ Inside the SCM or Bundle Section</p> <ol style="list-style-type: none"> <li>Push the lock lever and open the First Transport Path.</li> <li>Remove a jammed bill or foreign substances.</li> <li>After checking if the jammed bill is removed, completely close the First Transport Path pushing the SCM lever.</li> </ol>	
<b>7-1</b>		<b>7-3</b>	
 <p><b>Case2.</b></p> <ol style="list-style-type: none"> <li>After opening the Bundle Module (①) and SCM, remove a jammed note (③).</li> </ol>		 <p><b>● Removing jam from BC</b></p> <p>✓ BC or SCM or ALG</p> <ol style="list-style-type: none"> <li>Push the lock lever and open the BC section.</li> <li>Remove a jammed Note or foreign substances.</li> <li>After checking if the jammed Note is removed, completely close the BC section by pushing the lever &amp; PL lock.</li> </ol>	
<p>&lt;Note!&gt; Close SCM using PL lock and lever. <b>(Caution: Risk of pinching hand)</b></p> 		 <p><b>Open BC using lever and remove Jam</b></p> <p><b>Close BC using PL lock and lever. (Caution: Risk of pinching hand)</b></p>	